CPD-G500

SERVICE MANUAL

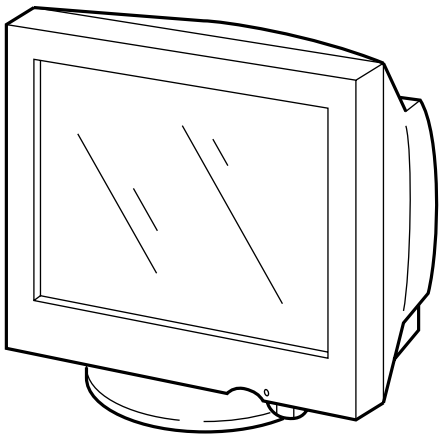

US Model
Canadian Model
AEP Model
Chassis No. SCC-L22C-A
S.Hemisphere Model
Chassis No. SCC-L22G-A
Equator Model
Chassis No. SCC-L22F-A

G1 CHASSIS

SPECIFICATIONS

CRT	0.24 mm aperture grille pitch 21 inches measured diagonally 90-degree deflection FD Trinitron
Viewable image size	Approx. 403.8 × 302.2 mm (w/h) (16 × 12 inches) 19.8" viewing image
Resolution	
Maximum	Horizontal: 2048 dots Vertical: 1536 lines
Recommended	Horizontal: 1600 dots Vertical: 1200 lines
Standard image area	Approx. 388 × 291 mm (w/h) (15 3/8 × 11 1/2 inches) or Approx. 364 × 291 mm (w/h) (14 3/8 × 11 1/2 inches)
Deflection frequency*	Horizontal: 30 to 121 kHz Vertical: 48 to 160 Hz
AC input voltage/current	100 to 240 V, 50 – 60 Hz, 2.0 – 1.0 A
Power consumption	Approx. 145 W
Dimensions	Approx. 497 × 480 × 478 mm (w/h/d) (19 5/8 × 19 × 18 7/8 inches)
Mass	Approx. 32 kg (70 lb 9 oz)
Plug and Play	DDC1/2B/2Bi, GTF**

* Recommended horizontal and vertical timing condition
- Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 µs, whichever is larger.
- Horizontal blanking width should be more than 2.3 µsec.
- Vertical blanking width should be more than 450 µsec.

** If the input signal is Generalized Timing Formula (GTF) compliant, the GTF feature of the monitor will automatically provide an optimal image for the screen.

Design and specifications are subject to change without notice.

TRINITRON® COLOR COMPUTER DISPLAY

SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described below.

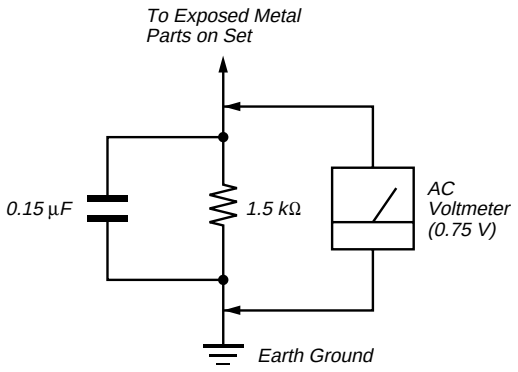

Fig. A. Using an AC voltmeter to check AC leakage.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

WARNING!!

NEVER TURN ON THE POWER IN A CONDITION IN WHICH THE DEGAUSS COIL HAS BEEN REMOVED.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

NE JAMAIS METTRE SOUS TENSION QUAND LA BOBINE DE DEMAGNETISATION EST ENLEVÉE.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ⚠ SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

Power mode	Power consumption	⏻ (power) indicator
normal operation	≤ 145 W	green
1 standby	≤ 100 W	green and orange alternate
2 suspend (sleep)*	≤ 15 W	green and orange alternate
3 active off** (deep sleep)*	Approx. 1 W	orange
power off	0 W	off

* "Sleep" and "deep sleep" are power saving modes defined by the Environmental Protection Agency.

** When your computer enters a power saving mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters a power saving mode.

DIAGNOSIS

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the ⏻ (power) indicator will either light up green or flash orange. If the ⏻ (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.

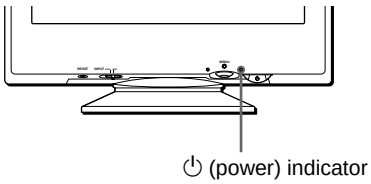

If the ⏻ (power) indicator is green

1 Remove any plugs from the video input 1 and 2 connectors, or turn off the connected computer(s).

2 Press the ⏻ (power) button twice to turn the monitor off and then on.

3 Move the control button ➡ for 2 seconds before the monitor enters power saving mode.

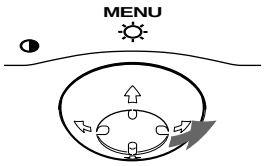

If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

If the ⏻ (power) indicator is flashing orange

Press the ⏻ (power) button twice to turn the monitor off and then on.

If the ⏻ (power) indicator lights up green, the monitor is working properly.

If the ⏻ (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the ⏻ (power) indicator and inform your authorized Sony dealer of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

TIMING SPECIFICATION

MODE AT PRODUCTION	MODE 1	MODE 2	MODE 3	MODE 4
RESOLUTION	1600 X 1200	1920 X 1440	1800 X 1440	1800 X 1350
CLOCK	229.500 MHz	297.000 MHz	299.436 MHz	300.000 MHz
— HORIZONTAL —				
H-FREQ	106.250 kHz	112.500 kHz	120.740 kHz	120.968 kHz
	usec	usec	usec	usec
H. TOTAL	9.412	8.889	8.282	8.267
H. BLK	2.440	2.424	2.271	2.267
H. FP	0.279	0.485	0.668	0.480
H. SYNC	0.837	0.754	0.481	0.667
H. BP	1.325	1.185	1.122	1.120
H. ACTIV	6.972	6.465	6.011	6.000
— VERTICAL —				
V. FREQ(HZ)	85.000 Hz	75.000 Hz	80.120 Hz	85.009 Hz
	lines	lines	lines	lines
V. TOTAL	1250	1500	1507	1423
V. BLK	50	60	67	73
V. FP	1	1	1	1
V. SYNC	3	3	3	3
V. BP	46	56	63	69
V. ACTIV	1200	1440	1440	1350
— SYNC —				
INT(G)	NO	NO	NO	NO
EXT(H/V)/POLARITY	YES P/P	YES P/P	YES P/P	YES P/P
EXT(CS) /POLARITY	NO	NO	NO	NO
INT/NON INT	NON INT	NON INT	NON INT	NON INT

99.07.02 VER.

TABLE OF CONTENTS

Section	Title	Page
1.	**GENERAL**	1-1
2.	**DISASSEMBLY**	
2-1.	Cabinet Removal	2-1
2-2.	D Board Removal	2-1
2-3.	G Board Removal	2-2
2-4.	A Board, I/O Terminal Board Assembly Removal	2-2
2-5.	N Board Removal	2-3
2-6.	Service Position	2-3
2-7.	Bezel Assembly, H1 Board Removal	2-4
2-8.	Picture Tube Removal	2-4
2-9.	J Board Removal	2-5
2-10.	Harness Location	2-6
3.	**SAFETY RELATED ADJUSTMENT**	3-1
4.	**ADJUSTMENTS**	4-1
5.	**DIAGRAMS**	
5-1.	Block Diagrams	5-1
5-2.	Frame Shcematic Diagram	5-7
5-3.	Circuit Boards Location	5-9
5-4.	Schematic Diagrams and Printed Wiring Boards	5-9
(1)	Schematic Diagram of A Board	5-11
(2)	Schematic Diagrams of H1, J Boards	5-17
(3)	Schematic Diagram of D Board	5-19
(4)	Schematic Diagrams of N (ⓐ, ⓑ, ⓒ) Board	5-23
(5)	Schematic Diagram of G Board	5-31
5-5.	Semiconductors	5-35
6.	**EXPLODED VIEWS**	
6-1.	Chassis	6-1
6-2.	Picture Tube	6-2
6-3.	Packing Materials	6-3
7.	**ELECTRICAL PARTS LIST**	7-1

Note: Hand degauss must be used on stand-by or power-off condition.
This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1
GENERAL

Precautions

Warning on power connections

- Use the supplied power cord. If you use a different power cord, be sure that it is compatible with your local power supply.
  For the customers in the U.S.A.
  If you do not use the appropriate cord, this monitor will not conform to mandatory FCC standards.

  Example of plug types

for 100 to 120 V AC

for 200 to 240 V AC

- Before disconnecting the power cord, wait at least 30 seconds after turning off the power to allow the static electricity on the screen's surface to discharge.
- After the power is turned on, the screen is demagnetized (degaussed) for about 2 seconds. This generates a strong magnetic field around the screen which may affect data stored on magnetic tapes and disks placed near the monitor. Be sure to keep magnetic recording equipment, tapes, and disks away from the monitor.

The equipment should be installed near an easily accessible outlet.

Installation

Do not install the monitor in the following places:

- on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies, etc.) that may block the ventilation holes
- near heat sources such as radiators or air ducts, or in a place subject to direct sunlight
- in a place subject to severe temperature changes
- in a place subject to mechanical vibration or shock
- on an unstable surface
- near equipment which generates magnetism, such as a transformer or high voltage power lines
- near or on an electrically charged metal surface

Maintenance

- Clean the screen with a soft cloth. If you use a glass cleaning liquid, do not use any type of cleaner containing an anti-static solution or similar additive as this may scratch the screen's coating.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a ballpoint pen or screwdriver. This type of contact may result in a scratched picture tube.
- Clean the cabinet, panel and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

Transportation

When you transport this monitor for repair or shipment, use the original carton and packing materials.

Use of the tilt-swivel

This monitor can be adjusted within the angles shown below. To find the center of the monitor's turning radius, align the center of the monitor's screen with the centering dots on the stand.
Hold the monitor at the bottom with both hands when you turn it horizontally or vertically. Be careful not to pinch your fingers at the back of the monitor when you tilt the monitor up vertically.

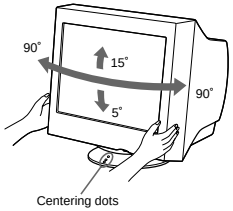

Identifying parts and controls

See the pages in parentheses for further details.

Front

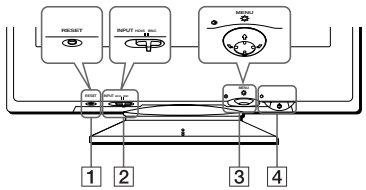

1 RESET (reset) button (page 16)
This button resets the adjustments to the factory settings.

2 INPUT (input) switch (page 8)
This switch selects the HD15 or BNC video input signal.

3 Control button (page 10)
The control button is used to display the menu and make adjustments to the monitor, including brightness and contrast adjustments.

4 ⏻ (power) switch and indicator (pages 7, 16, 20)
This button turns the monitor on and off. The power indicator lights up in green when the monitor is turned on, and either flashes in green and orange, or lights up in orange when the monitor is in power saving mode.

5 AC IN connector (page 7)
This connector provides AC power to the monitor.

Rear

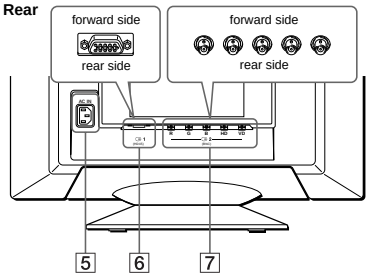

6 Video input 1 connector (HD15) (☞1) (page 6)
This connector inputs RGB video signals (0.700 Vp-p, positive) and sync signals.



Pin No.	Signal
1	Red
2	Green (Sync on Green)
3	Blue
4	ID (Ground)
5	DDC Ground*
6	Red Ground
7	Green Ground
8	Blue Ground
9	DDC + 5V*
10	Ground
11	ID (Ground)
12	Bi-Directional Data (SDA)*
13	H. Sync
14	V. Sync
15	Data Clock (SCL)*

* DDC (Display Data Channel) is a standard of VESA.

7 Video input 2 connector (BNC) (☞2) (page 6)
This connector inputs RGB video signals (0.700 Vp-p, positive) and sync signals.

1-1

US

Setup

Before using your monitor, check that the following accessories are included in your carton:

- Power cord (1)
- HD15 video signal cable (1)
- Macintosh adapter (1)
- Windows Monitor Information Disk (1)
- Warranty card (1)
- Notes on cleaning the screen's surface (1)
- This instruction manual (1)

Step 1: Connect your monitor to your computer

Turn off the monitor and computer before connecting.

Notes

- Do not touch the pins of the video signal cable connector as this might bend the pins.
- When connecting the video signal cable, check the alignment of the HD15 connector. Do not force the connector in the wrong way or the pins might bend.

■ Connecting to an IBM PC/AT or compatible computer

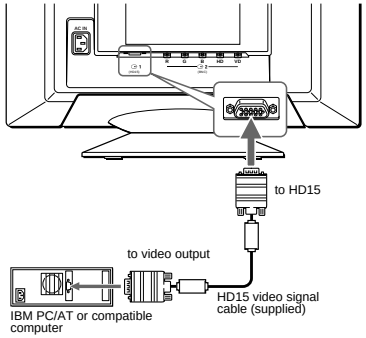

■ Connecting to a Macintosh or compatible computer

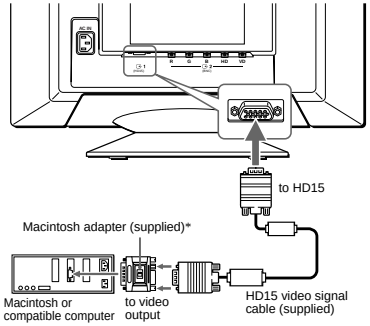

* Connect the supplied Macintosh adapter to the computer before connecting the cable. This adapter is compatible with Macintosh LC, Performa, Quadra, Power Macintosh and Power Macintosh G3 series computers (sold before January, 1999). If you are connecting to a Power Macintosh G3 series that sold after January 1999, you will need a different adapter (not supplied). Macintosh II series and some older versions of PowerBook models may need an adapter with micro switches (not supplied).

■ Connecting to the five BNC connectors

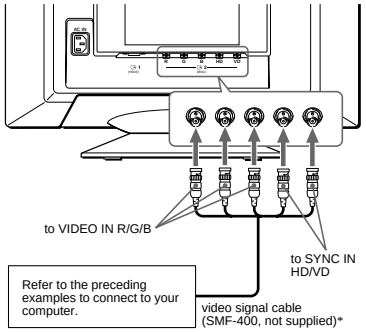
to VIDEO IN R/G/B
to SYNC IN HD/VD
Refer to the preceding examples to connect to your computer.
video signal cable (SMF-400, not supplied)*

* Connect the cables from left to right in the following order: Red-Green-Blue-HD-VD.

Note

Plug & Play (DDC) does not apply to the five BNC connectors. If you want to use Plug & Play, connect your computer to the HD15 connector using the supplied video signal cable.

Step 2: Connect the power cord

With the monitor and computer switched off, first connect the power cord to the monitor, then connect it to a power outlet.

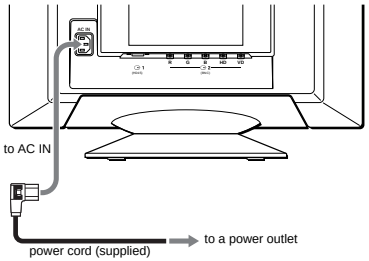

Step 3: Turn on the monitor and computer

First turn on the monitor, then turn on the computer.



The installation of your monitor is complete.
If necessary, use the monitor's controls to adjust the picture.

If no picture appears on your screen

- Check that the monitor is correctly connected to the computer.
- If NO INPUT SIGNAL appears on the screen, try changing the input signal (page 8), and confirm that your computer's graphic board is completely seated in the correct bus slot.
- If you are replacing an old monitor with this model and OUT OF SCAN RANGE appears on the screen, reconnect the old monitor. Then adjust the computer's graphic board so that the horizontal frequency is between 30 – 121 kHz, and the vertical frequency is between 48 – 160 Hz.

For more information about the on-screen messages, see "Trouble symptoms and remedies" on page 18.

For customers using Windows 95/98

To maximize the potential of your monitor, install the new model information file from the supplied Windows Monitor Information Disk onto your PC.
This monitor complies with the "VESA DDC" Plug & Play standard. If your PC/graphics board complies with DDC, select "Plug & Play Monitor (VESA DDC)" or this monitor's model name as the monitor type in the "Control Panel" of Windows 95/98. If your PC/graphics board has difficulty communicating with this monitor, load the Windows Monitor Information Disk and select this monitor's model name as the monitor type.

For customers using Windows NT4.0

Monitor setup in Windows NT4.0 is different from Windows 95/98 and does not involve the selection of monitor type. Refer to the Windows NT4.0 instruction manual for further details on adjusting the resolution, refresh rate, and number of colors.

Adjusting the monitor's resolution and color number

Adjust the monitor's resolution and color number by referring to your computer's instruction manual. The color number may vary according to your computer or video board. The color palette setting and the actual number of colors are as follows:

- High Color (16 bit) → 65,536 colors
- True Color (24 bit) → about 16.77 million colors

In true color mode (24 bit), speed may be slower.

US

Selecting the on-screen menu language (LANG)

English, French, German, Spanish, Italian, Dutch, Swedish, Russian and Japanese versions of the on-screen menus are available. The default setting is English.

1 Press the center of the control button.
See page 10 for more information on using the control button.

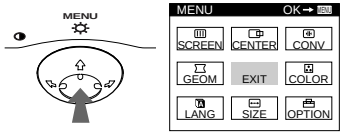

2 Move the control button to highlight A LANG and press the center of the control button again.

3 Move the control button ↓/↑ to select a language.
- ENGLISH
- FRANÇAIS: French
- DEUTSCH: German
- ESPAÑOL: Spanish
- ITALIANO: Italian
- NEDERLANDS: Dutch
- SVENSKA: Swedish
- РУССКИЙ: Russian
- 日本語: Japanese

To close the menu
Press the center of the control button once to return to the main MENU, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.

To reset to English
Press the RESET button while the LANGUAGE menu is displayed on the screen.

Selecting the input signal

You can connect two computers to this monitor using the HD15 and BNC connectors. To select one of the two computers, use the INPUT switch.

Move the INPUT switch.
The selected connector appears on the screen for 3 seconds.



"HD15" or "BNC" appears on the screen.

Note
If no signal is input to the selected connector, NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters the power saving mode. If this happens, switch to the other connector.

Customizing Your Monitor

You can make numerous adjustments to your monitor using the on-screen menu.

Navigating the menu

Press the center of the control button to display the main MENU on your screen. See page 10 for more information on using the control button.

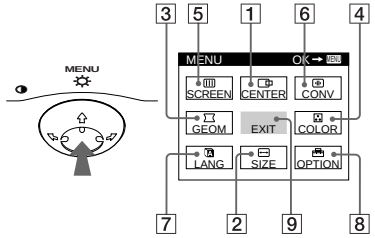

Use the control button to select one of the following menus.

1 CENTER (page 11)
Selects the CENTER menu to adjust the picture's centering, size or zoom.



2 SIZE (page 11)
Selects the SIZE menu to adjust the picture's size, centering or zoom.



3 GEOM (page 12)
Select the GEOM menu to adjust the picture's rotation and shape.



4 COLOR (page 13)
Select the COLOR menu to adjust the picture's color temperature. You can use this to match the monitor's colors to a printed picture's colors.

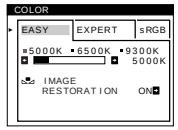

5 SCREEN (page 13)
Select the SCREEN menu to adjust the picture's quality. You can adjust the landing and moire cancellation effect.



6 CONV (page 12)
Select the CONV menu to adjust the picture's horizontal and vertical convergence.



7 LANG (page 8)
Select LANG to choose the on-screen menu's language.

8 OPTION (page 15)
Select OPTION to adjust the monitor's options. The options include:
- degaussing the screen
- changing the on-screen menu position
- locking the controls



9 EXIT
Select EXIT to close the menu.

■ Displaying the current input signal

The horizontal and vertical frequencies of the current input signal are displayed in the main MENU. If the signal matches one of this monitor's factory preset modes, the resolution is also displayed.

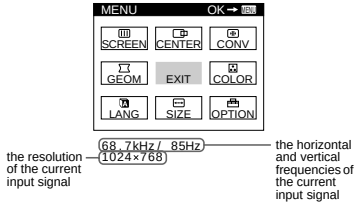

US

■ Using the control button

1 Display the main MENU.
Press the center of the control button to display the main MENU on your screen.



2 Select the menu you want to adjust.
Highlight the desired menu by moving the control button towards the rear to go up (↑), towards the front to go down (↓), and left (←) or right (→) to move sideways.

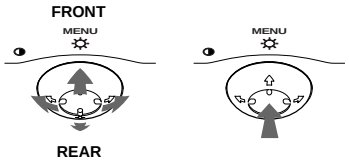

3 Adjust the menu.
Move the control button left (←) or right (→) to make the adjustment.



4 Close the menu.
Press the center of the control button once to return to the main MENU, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.



■ Resetting the adjustments

Press the RESET button. See page 16 for more information on resetting the adjustments.

Adjusting the brightness and contrast

Brightness and contrast adjustments are made using a separate BRIGHTNESS/CONTRAST menu.
These settings are stored in memory for the signals from the currently selected input connector.

1 Move the control button in any direction.
The BRIGHTNESS/CONTRAST menu appears on the screen.



2 Move the control button ↓/↑ to adjust the brightness (☼), and ←/→ to adjust the contrast (◑).

If you are using the sRGB mode

If you selected the sRGB mode in the COLOR menu, the following BRIGHTNESS/CONTRAST menu appears on the screen.



For more information about using the sRGB mode, see “Adjusting the color of the picture (COLOR)” on page 13.

The menu automatically disappears after about 3 seconds.

Automatically sizing and centering the picture (AUTO)

You can easily adjust the picture to fill the screen by using the ⊡ (AUTO) item in the SIZE/CENTER menu.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight ⟷ SIZE or ⊡ CENTER and press the center of the control button again.
The SIZE/CENTER menu appears on the screen.

3 First move the control button ↓/↑ to select ⊡ (AUTO). Then move the control button →.
The picture automatically fills the screen.

Notes

- This function is intended for use with a computer running Windows or similar graphic user interface software that provides a full-screen picture. It may not work properly if the background color is dark or if the input picture does not fill the screen to the edges (such as an MS-DOS prompt).
- Pictures with an aspect ratio of 5:4 (resolution: 1280 × 1024, 1600 × 1280) are displayed at their actual resolution and do not fill the screen to the edges.
- The displayed image moves for a few seconds while this function is performed. This is not a malfunction.

Adjusting the size of the picture (SIZE)

This setting is stored in memory for the current input signal.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight ⟷ SIZE and press the center of the control button again.
The SIZE/CENTER menu appears on the screen.

3 First move the control button ↓/↑ to select ⟷ for horizontal adjustment, or ↕ for vertical adjustment. Then move the control button ←/→ to adjust the size.

Adjusting the centering of the picture (CENTER)

This setting is stored in memory for the current input signal.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight ⊡ CENTER and press the center of the control button again.
The SIZE/CENTER menu appears on the screen.

3 First move the control button ↓/↑ to select ⊡ for horizontal adjustment, or ⊡ for vertical adjustment. Then move the control button ←/→ to adjust the centering.

Enlarging or reducing the picture (ZOOM)

This setting is stored in memory for the current input signal.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight ⟷ SIZE or ⊡ CENTER and press the center of the control button again.
The SIZE/CENTER menu appears on the screen.

3 Move the control button ↓/↑ to select ⊛ (zoom), and move ←/→ to enlarge or reduce the picture.

Note

Adjustment stops when either the horizontal or vertical size reaches its maximum or minimum value.

US

Adjusting the shape of the picture (GEOM)

The GEOM settings allow you to adjust the rotation and shape of the picture.
The (rotation) setting is stored in memory for all input signals. All other settings are stored in memory for the current input signal.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight GEOM and press the center of the control button again.
The GEOMETRY menu appears on the screen.

3 First move the control button ↓/↑ to select the desired adjustment item. Then move the control button ←/→ to make the adjustment.

Select	To
	rotate the picture
	expand or contract the picture sides
	shift the picture sides to the left or right
	adjust the picture width at the top of the screen
	shift the picture to the left or right at the top of the screen

Adjusting the convergence (CONV)

The CONV settings allow you to adjust the quality of the picture by controlling the convergence. The convergence refers to the alignment of the red, green, and blue color signals.
If you see red or blue shadows around letters or lines, adjust the convergence.
These settings are stored in memory for all input signals.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight CONV and press the center of the control button again.
The CONVERGENCE menu appears on the screen.

3 First move the control button ↓/↑ to select the desired adjustment item. Then move the control button ←/→ to make the adjustment.

Select	To
	horizontally shift red or blue shadows
	vertically shift red or blue shadows
TOP V CONVER TOP	vertically shift red or blue shadows at the top of the screen
BOT V CONVER BOTTOM	vertically shift red or blue shadows at the bottom of the screen

Adjusting the quality of the picture (SCREEN)

The SCREEN settings allow you to adjust the quality of the picture by controlling the moire and landing.
- If the color is irregular at the corners of the screen, adjust the landing.
- If elliptical or wavy patterns appear on the screen, cancel the moire.

The CANCEL MOIRE and MOIRE ADJUST settings are stored in memory for the current input signal. All other settings are stored in memory for all input signals.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight SCREEN and press the center of the control button again.
The SCREEN menu appears on the screen.

3 First move the control button ↓/↑ to select the desired adjustment item. Then move the control button ←/→ to make the adjustment.

Select	To
LANDING	reduce any color irregularities in the screen's top left corner to a minimum.
LANDING	reduce any color irregularities in the screen's top right corner to a minimum.
LANDING	reduce any color irregularities in the screen's bottom left corner to a minimum.
LANDING	reduce any color irregularities in the screen's bottom right corner to a minimum.
CANCEL MOIRE*	turn the moire cancellation function ON or OFF. (MOIRE ADJUST) appears in the menu when you select ON.
MOIRE ADJUST	adjust the degree of moire cancellation until the moire is at a minimum.

- Moire is a type of natural interference which produces soft, wavy lines on your screen. It may appear due to interference between the pattern of the picture on the screen and the phosphor pitch pattern of the monitor.

Example of moire

Note
The picture may become fuzzy when CANCEL MOIRE is set to ON.

Adjusting the color of the picture (COLOR)

The COLOR settings allow you to adjust the picture's color temperature by changing the color level of the white color field. Colors appear reddish if the temperature is low, and bluish if the temperature is high. This adjustment is useful for matching the monitor's color to a printed picture's colors.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight COLOR and press the center of the control button again.
The COLOR menu appears on the screen.

3 Move the control button ←/→ to select the adjustment mode.
There are three types of adjustment modes, EASY, EXPERT and sRGB.

4 First move the control button ↓/↑ to select the desired adjustment item. Then move the control button ←/→ to make the adjustment.
Adjust the selected mode according to the following instructions.

US

EASY mode

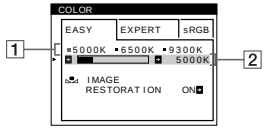

1 Move the control button ↓/↑ to select the color temperature row 1. Then move the control button ←/→ to select a color temperature.
The preset color temperatures are 5000K, 6500K, and 9300K. Since the default setting is 9300K, the whites will change from a bluish hue to a reddish hue as the temperature is lowered to 6500K and 5000K.

2 If necessary, fine tune the color temperature. Move the control button ↓/↑ to select the color temperature row 2. Then move the control button ←/→ to fine tune the color temperature.
If you fine tune the color temperature, the new color settings are stored in memory for each of the three color temperatures and item 1 of the on-screen menu changes as follows.
- [5000K]→[1]
- [6500K]→[2]
- [9300K]→[3]

(continued)

EXPERT mode

You can make additional adjustments to the color in greater detail by selecting the EXPERT mode.

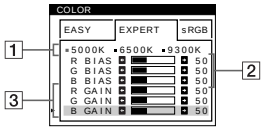

1 Move the control button ↓/↑ to select the color temperature row 1. Then move the control button ←/→ to select a color temperature.

2 Move the control button ↓/↑ to select the adjustment item 2. Then move the control button ←/→ to adjust the BIAS (black level).
This adjusts the dark areas of an image.

3 Move the control button ↓/↑ to select the adjustment item 3. Then move the control button ←/→ to adjust the GAIN (white level).
This adjusts the light areas of an image.

You can adjust the R (red), G (green), B (blue) component of the input signal when making changes to items 2 and 3.

If you fine tune the color temperature, the new color settings are stored in memory for each of the three color temperatures and item 1 of the on-screen menu change as follows.

- [5000K]→[1]
- [6500K]→[2]
- [9300K]→[3]

Setting the color temperature for each of the video input connectors

You can set the fine tuning of the color temperature in EASY or EXPERT mode for each of the video input connectors (HD15 and BNC).

1 Select the same adjustment mode and color temperature in the COLOR menu for both HD15 and BNC.

2 Fine tune the color temperature in each menu for HD15 and BNC.
The settings are stored in memory for each of the HD15 and BNC connectors.

For information on how to select the connector, see page 8.

sRGB mode

The sRGB color setting is an industry standard color space protocol designed to correlate the displayed and printed colors of sRGB compliant computer products. To adjust the colors to the sRGB profile, simply select the sRGB mode in the COLOR menu. However, in order to display the sRGB colors correctly (γ=2.2, 6500K), you must set your computer to the sRGB profile and adjust the brightness (☼) and contrast (◑) to the numbers shown in the menu. For information on how to change the brightness (☼) and contrast (◑), see page 10.

Note

Your computer and other connected products (such as a printer), must be sRGB compliant.

Restoring the color from the EASY or sRGB menus

The colors of most display monitors tend to gradually lose brilliance over several years of service. The IMAGE RESTORATION feature found in the EASY and sRGB menus allows you to restore the color to the original factory quality levels. The explanation below explains how to restore the monitor's color from the EASY menu.

1 Move the control button ←/→ to select EASY or sRGB mode.

2 First move the control button ↓/↑ to select (IMAGE RESTORATION). Then move the control button →.
The picture disappears while the color is being restored (about 2 seconds). After the color is restored, the picture reappears on the screen again.

Notes

- Before using this feature, the monitor must be in normal operation mode (green power indicator on) for at least 30 minutes. If the monitor goes into power saving mode, you must return the monitor to normal operation mode and wait for 30 minutes for the monitor to be ready. You may need to adjust your computer's power saving settings to keep the monitor in normal operation mode for the full 30 minutes. If the monitor is not ready, the following message will appear.

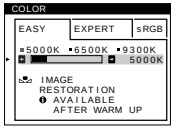

- The monitor may gradually lose its ability to perform this function due to the natural aging of the picture tube.

Additional settings (OPTION)

You can manually degauss (demagnetize) the monitor, change the menu position, and lock the controls.

1 Press the center of the control button.
The main MENU appears on the screen.

2 Move the control button to highlight OPTION and press the center of the control button again.
The OPTION menu appears on the screen.

3 Move the control button ↓/↑ to select the desired adjustment item.
Adjust the selected item according to the following instructions.

Degaussing the screen

The monitor is automatically demagnetized (degaussed) when the power is turned on.

To manually degauss the monitor, first move the control button ↓/↑ to select (DEGAUSS). Then move the control button →.

The screen is degaussed for about 2 seconds. If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result.

Changing the menu's position

Change the menu's position if it is blocking an image on the screen.

To change the menu's on-screen position, first move the control button ↓/↑ to select (OSD H POSITION) for horizontal adjustment, or (OSD V POSITION) for vertical adjustment. Then move the control button ←/→ to shift the on-screen menu.

Locking the controls

To protect adjustment data by locking the controls, first move the control button ↓/↑ to select (CONTROL LOCK). Then move the control button →, to select ON.

Only the (power) switch, EXIT, and (CONTROL LOCK) of the OPTION menu will operate. If any other items are selected, the mark appears on the screen.

To cancel the control lock

Repeat the procedure above and set (CONTROL LOCK) to OFF.

US

Resetting the adjustments

This monitor has the following three reset methods. Use the RESET button to reset the adjustments.

Resetting a single adjustment item

Use the control button to select the adjustment item you want to reset, and press the RESET button.

Resetting all of the adjustment data for the current input signal

Press the RESET button when no menu is displayed on the screen. Note that the following items are not reset by this method:

- on-screen menu language (page 8)
- adjustment mode in the COLOR menu (EASY, EXPERT, sRGB) (page 13)
- on-screen menu position (page 15)
- control lock (page 15)

Resetting all of the adjustment data for all input signals

Press and hold the RESET button for more than two seconds.

Note

The RESET button does not function when (CONTROL LOCK) is set to ON.

Technical Features

Preset and user modes

When the monitor receives an input signal, it automatically matches the signal to one of the factory preset modes stored in the monitor's memory to provide a high quality picture at the center of the screen. (See Appendix for a list of the factory preset modes.) For input signals that do not match one of the factory preset modes, the digital Multiscan technology of this monitor ensures that a clear picture appears on the screen for any timing in the monitor's frequency range (horizontal: 30 – 121 kHz, vertical: 48 – 160 Hz). If the picture is adjusted, the adjustment data is stored as a user mode and automatically recalled whenever the same input signal is received.

Note for Windows users

For Windows users, check your video board manual or the utility program which comes with your graphic board and select the highest available refresh rate to maximize monitor performance.

Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

Power mode	Power consumption	⏻ (power) indicator
normal operation	≤ 145 W	green
1 standby	≤ 100 W	green and orange alternate
2 suspend (sleep)*	≤ 15 W	green and orange alternate
3 active off** (deep sleep)*	Approx. 1 W	orange
power off	0 W	off

* "Sleep" and "deep sleep" are power saving modes defined by the Environmental Protection Agency.

** When your computer enters a power saving mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters a power saving mode.

Troubleshooting

Before contacting technical support, refer to this section.

If thin lines appear on your screen (damper wires)

The lines you are experiencing on your screen are normal for the Trinitron monitor and are not a malfunction. These are shadows from the damper wires used to stabilize the aperture grille and are most noticeable when the screen's background is light (usually white). The aperture grille is the essential element that makes a Trinitron picture tube unique by allowing more light to reach the screen, resulting in a brighter, more detailed picture.



On-screen messages

If there is something wrong with the input signal, one of the following messages appears on the screen.

If NO INPUT SIGNAL appears on the screen

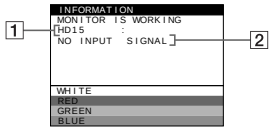

1 The selected connector

This message shows the currently selected connector (HD15 or BNC).

2 The input signal condition
NO INPUT SINGAL

This indicates that no signal is input, or that no signal is input from the selected connector.

If OUT OF SCAN RANGE appears on the screen

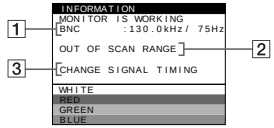

1 The selected connector and the frequencies of the current input signal

This message shows the currently selected connector (HD15 or BNC). If the monitor recognizes the frequencies of the current input signal, the horizontal and vertical frequencies are also displayed.

2 The input signal condition
OUT OF SCAN RANGE

This indicates that the input signal is not supported by the monitor's specifications.

3 The remedies

CHANGE SIGNAL TIMING appears on the screen. If you are replacing an old monitor with this monitor, reconnect the old monitor. Then adjust the computer's graphic board so that the horizontal frequency is between 30 - 121 kHz, and the vertical frequency is between 48 - 160 Hz.

For more information, see "Trouble symptoms and remedies" on page 18.

US

Trouble symptoms and remedies

If the problem is caused by the connected computer or other equipment, please refer to the connected equipment's instruction manual. Use the self-diagnosis function (page 20) if the following recommendations do not resolve the problem.

Symptom	Check these items
No picture	
If the ⏻ (power) indicator is not lit	• Check that the power cord is properly connected. • Check that the ⏻ (power) switch is in the "on" position.
If the NO INPUT SIGNAL message appears on the screen, or if the ⏻ (power) indicator is either orange or alternating between green and orange	• Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets. If you are using the five BNC connectors, connect them in the correct order (from left to right: Red-Green-Blue-HD-VD) (page 6). • Check that the INPUT switch setting is correct (page 8). • Check that the HD15 video input connector's pins are not bent or pushed in. **■Problems caused by the connected computer or other equipment** • The computer is in power saving mode. Try pressing any key on the computer keyboard. • Check that the computer's power is "on." • Check that the graphic board is completely seated in the proper bus slot.
If the OUT OF SCAN RANGE message appears on the screen	**■Problems caused by the connected computer or other equipment** • Check that the video frequency range is within that specified for the monitor. If you replaced an old monitor with this monitor, reconnect the old monitor and adjust the frequency range to the following. Horizontal: 30 – 121 kHz Vertical: 48 – 160 Hz
If no message is displayed and the ⏻ (power) indicator is green or flashing orange	• Use the Self-diagnosis function (page 20).
If using Windows 95/98	• If you replaced an old monitor with this monitor, reconnect the old monitor and do the following. Install the Windows Monitor Information Disk (page 7) and select this monitor ("CPD-G500/G500J") from among the Sony monitors in the Windows 95/98 monitor selection screen. If you choose to select "Plug and Play," connect the monitor to the computer with the HD15 video signal cable. You cannot use the five BNC connectors.
If using a Macintosh system	• Check that the Macintosh adapter and the video signal cable are properly connected (page 6).
Picture flickers, bounces, oscillates, or is scrambled	• Isolate and eliminate any potential sources of electric or magnetic fields such as other monitors, laser printers, electric fans, fluorescent lighting, or televisions. • Move the monitor away from power lines or place a magnetic shield near the monitor. • Try plugging the monitor into a different AC outlet, preferably on a different circuit. • Try turning the monitor 90° to the left or right. **■Problems caused by the connected computer or other equipment** • Check your graphics board manual for the proper monitor setting. • Confirm that the graphics mode (VESA, Macintosh 21" Color, etc.) and the frequency of the input signal are supported by this monitor (Appendix). Even if the frequency is within the proper range, some video boards may have a sync pulse that is too narrow for the monitor to sync correctly. • Adjust the computer's refresh rate (vertical frequency) to obtain the best possible picture.
Picture is fuzzy	• Adjust the brightness and contrast (page 10). • Degauss the monitor* (page 15). • If CANCEL MOIRE is ON, the picture may become fuzzy. Decrease the moire cancellation effect or set CANCEL MOIRE to OFF (page 13).

Symptom	Check these items
Picture is ghosting	• Eliminate the use of video cable extensions and/or video switch boxes. • Check that all plugs are firmly seated in their sockets.
Picture is not centered or sized properly	• Perform the ⊙ (AUTO) function (page 11). • Adjust the size (page 11) or centering (page 11). Note that some video modes do not fill the screen to the edges.
Edges of the image are curved	• Adjust the geometry (page 12).
Wavy or elliptical pattern (moire) is visible	• Set CANCEL MOIRE to ON and adjust the degree of moire cancellation until the moire is at a minimum (page 13). **■Problems caused by the connected computer or other equipment** • Change your desktop pattern.
Color is not uniform	• Degauss the monitor* (page 15). If you place equipment that generates a magnetic field, such as a speaker, near the monitor, or if you change the direction the monitor faces, color may lose uniformity. • Adjust the landing (page 13).
White does not look white	• Adjust the color temperature (page 13). • Check that the five BNC connectors are connected in the correct order (from left to right: Red-Green-Blue-HD-VD) (page 6).
Letters and lines show red or blue shadows at the edges	• Adjust the convergence (page 12).
Monitor buttons do not operate (🔑 appears on the screen)	• If the control lock is set to ON, set it to OFF (page 15).
COLOR RETURN function does not operate 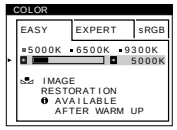	• Before using this function, the monitor must be in normal operation mode (green power indicator on) for at least 30 minutes. For more information on using the IMAGE RESTORATION function, see page 15. • Adjust the computer's power saving settings to keep the monitor in normal operation mode for more than 30 minutes. • The monitor may gradually lose its ability to perform this function due to the natural aging of the picture tube.
A hum is heard right after the power is turned on	• This is the sound of the auto-degauss cycle. When the power is turned on, the monitor is automatically degaussed for two seconds.

* If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result. A humming noise may be heard, but this is not a malfunction.

Displaying this monitor's name, serial number, and date of manufacture.

While the monitor is receiving a video signal, press and hold the center of the control button for more than five seconds to display this monitor's information box.



If the problem persists, call your authorized Sony dealer and give the following information.
• Model name: CPD-G500
• Serial number
• Name and specifications of your computer and graphics board.

Self-diagnosis function

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the ⏻ (power) indicator will either light up green or flash orange. If the ⏻ (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.



If the ⏻ (power) indicator is green

1 Remove any plugs from the video input 1 and 2 connectors, or turn off the connected computer(s).

2 Press the ⏻ (power) button twice to turn the monitor off and then on.

3 Move the control button ➡ for 2 seconds before the monitor enters power saving mode.



If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

If the ⏻ (power) indicator is flashing orange

Press the ⏻ (power) button twice to turn the monitor off and then on.
If the ⏻ (power) indicator lights up green, the monitor is working properly.

If the ⏻ (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the ⏻ (power) indicator and inform your authorized Sony dealer of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

Specifications

CRT	0.24 mm aperture grille pitch 21 inches measured diagonally 90-degree deflection FD Trinitron
Viewable image size	Approx. 403.8 × 302.2 mm (w/h) (16 × 12 inches) 19.8" viewing image
Resolution	
Maximum	Horizontal: 2048 dots Vertical: 1536 lines
Recommended	Horizontal: 1600 dots Vertical: 1200 lines
Standard image area	Approx. 388 × 291 mm (w/h) (15 3/8 × 11 1/2 inches) or Approx. 364 × 291 mm (w/h) (14 3/8 × 11 1/2 inches)
Deflection frequency*	Horizontal: 30 to 121 kHz Vertical: 48 to 160 Hz
AC input voltage/current	100 to 240 V, 50 – 60 Hz, 2.0 – 1.0 A
Power consumption	Approx. 145 W
Dimensions	Approx. 497 × 480 × 478 mm (w/h/d) (19 5/8 × 19 × 18 7/8 inches)
Mass	Approx. 32 kg (70 lb 9 oz)
Plug and Play	DDC1/2B/2Bi, GTF**
Supplied accessories	See page 6

* Recommended horizontal and vertical timing condition
- Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 µs, whichever is larger.
- Horizontal blanking width should be more than 2.3 µsec.
- Vertical blanking width should be more than 450 µsec.

** If the input signal is Generalized Timing Formula (GTF) compliant, the GTF feature of the monitor will automatically provide an optimal image for the screen.

Design and specifications are subject to change without notice.

SECTION 2
DISASSEMBLY

2-1. CABINET REMOVAL

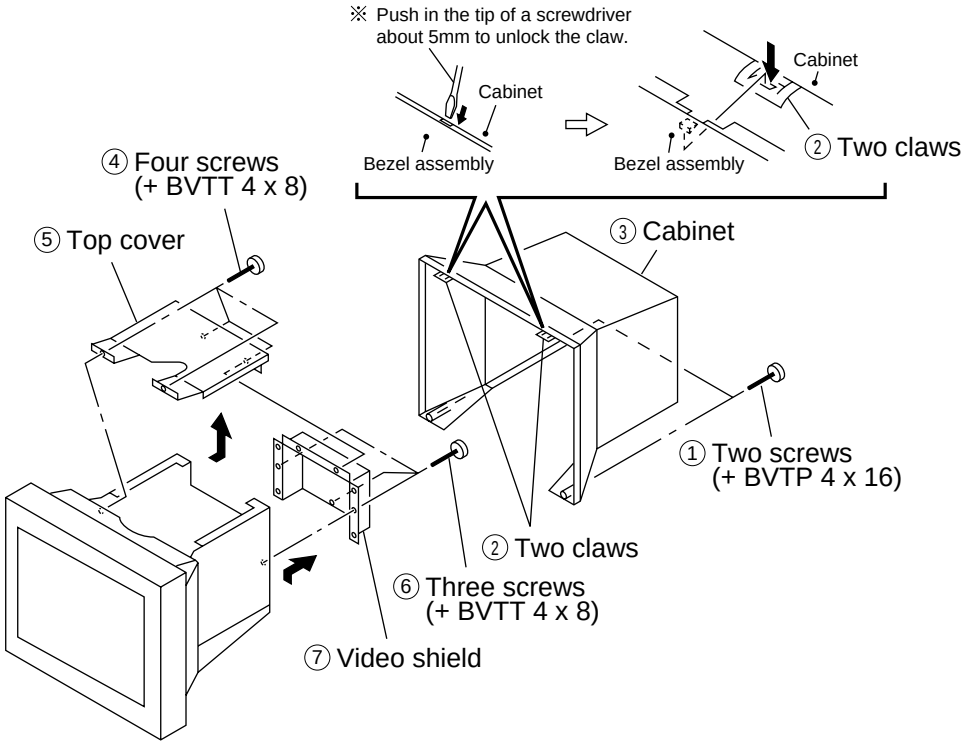
※ Push in the tip of a screwdriver about 5mm to unlock the claw.
Cabinet
Bezel assembly
Cabinet
Bezel assembly
② Two claws
④ Four screws (+ BVTT 4 x 8)
⑤ Top cover
③ Cabinet
① Two screws (+ BVTP 4 x 16)
② Two claws
⑥ Three screws (+ BVTT 4 x 8)
⑦ Video shield

2-2. D BOARD REMOVAL

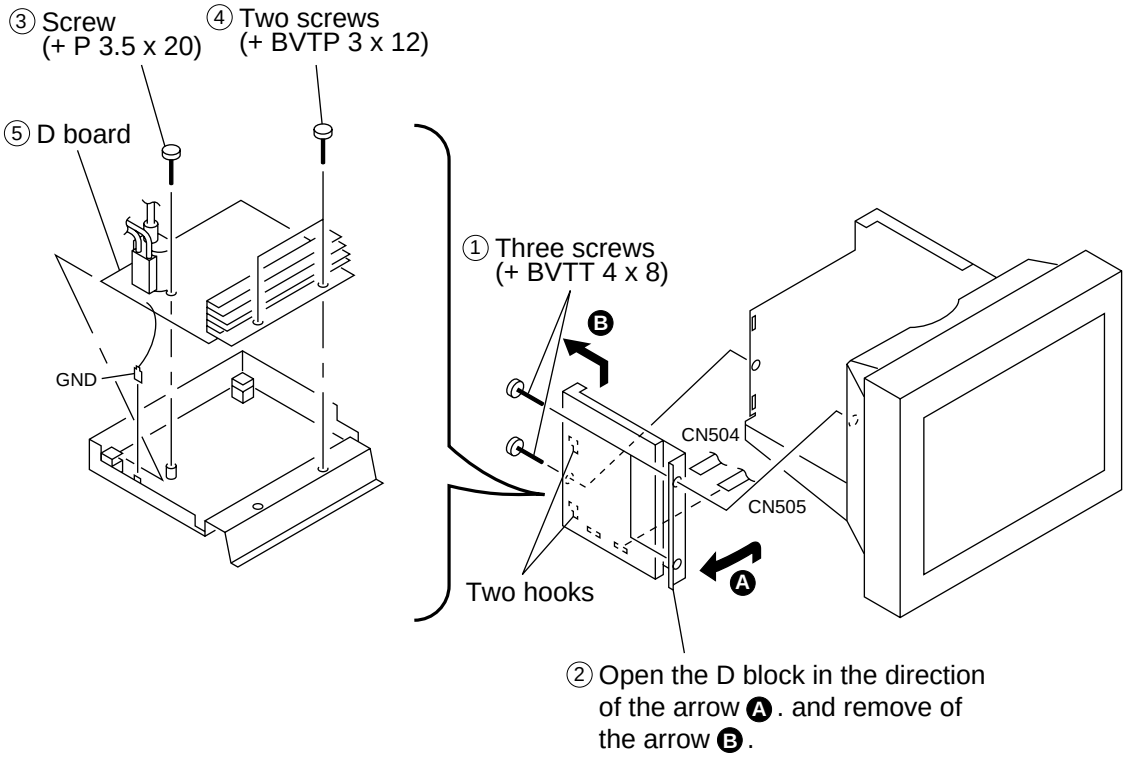
③ Screw (+ P 3.5 x 20)
④ Two screws (+ BVTP 3 x 12)
⑤ D board
GND
① Three screws (+ BVTT 4 x 8)
B
CN504
CN505
A
Two hooks
② Open the D block in the direction of the arrow A. and remove of the arrow B.

2-3. G BOARD REMOVAL

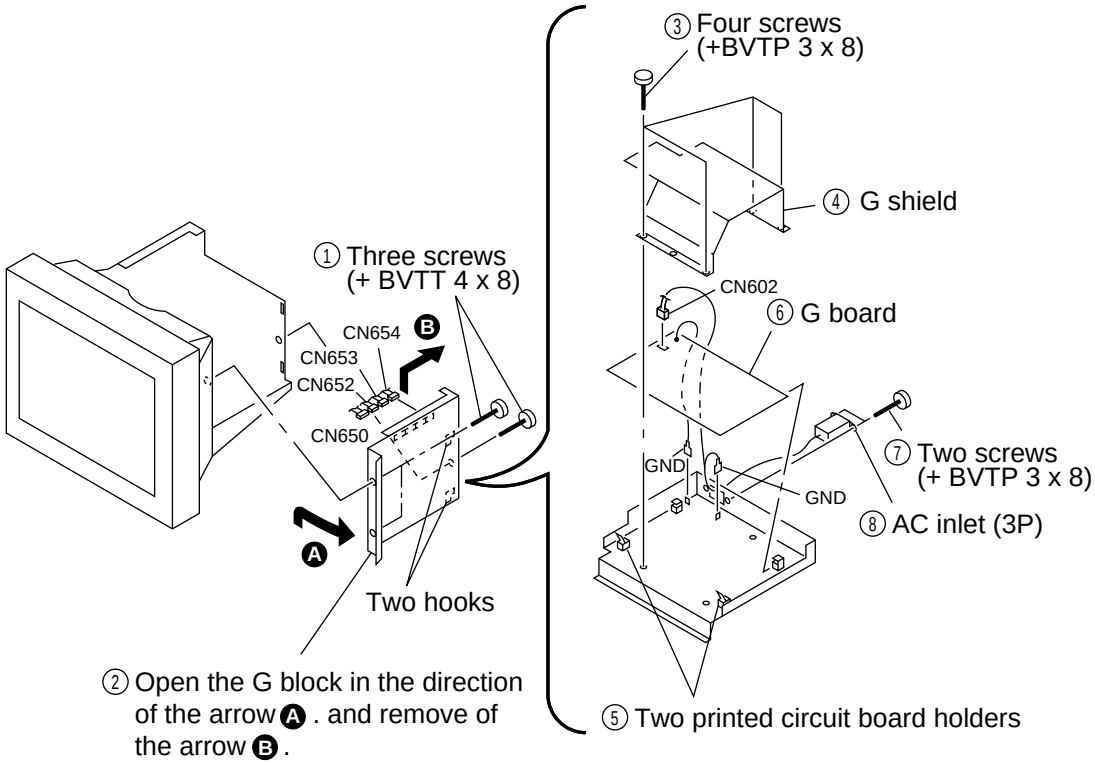

2-4. A BOARD, I/O TERMINAL BOARD ASSEMBLY REMOVAL

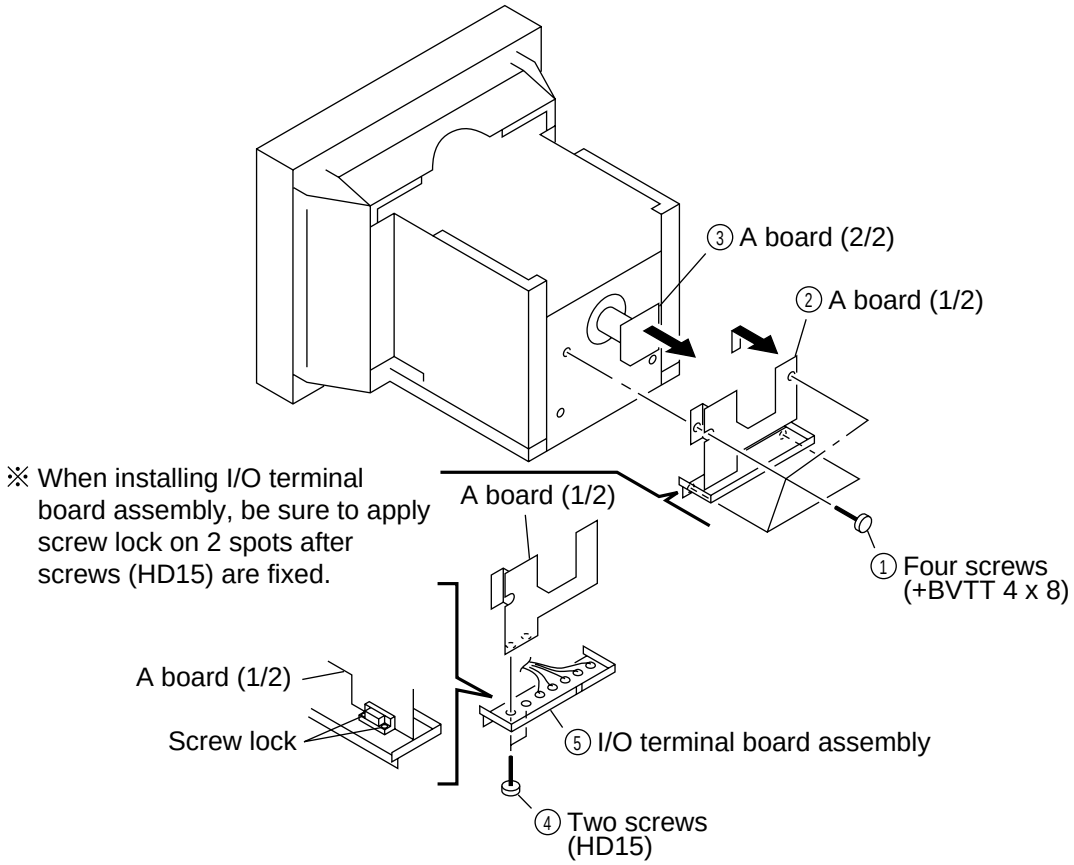
③ A board (2/2)
② A board (1/2)
※ When installing I/O terminal board assembly, be sure to apply screw lock on 2 spots after screws (HD15) are fixed.
A board (1/2)
① Four screws
(+BVTT 4 x 8)
A board (1/2)
Screw lock
⑤ I/O terminal board assembly
④ Two screws
(HD15)

2-5. N BOARD REMOVAL

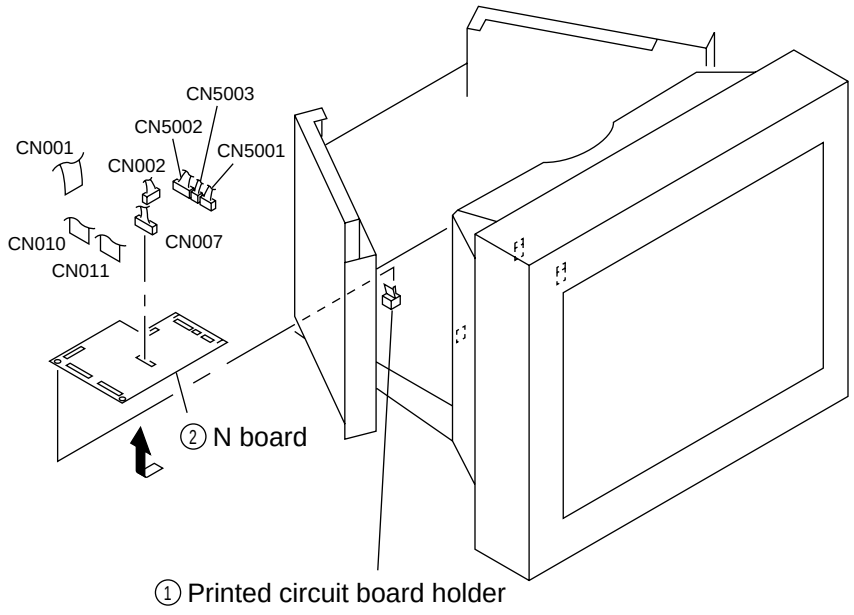

2-6. SERVICE POSITION

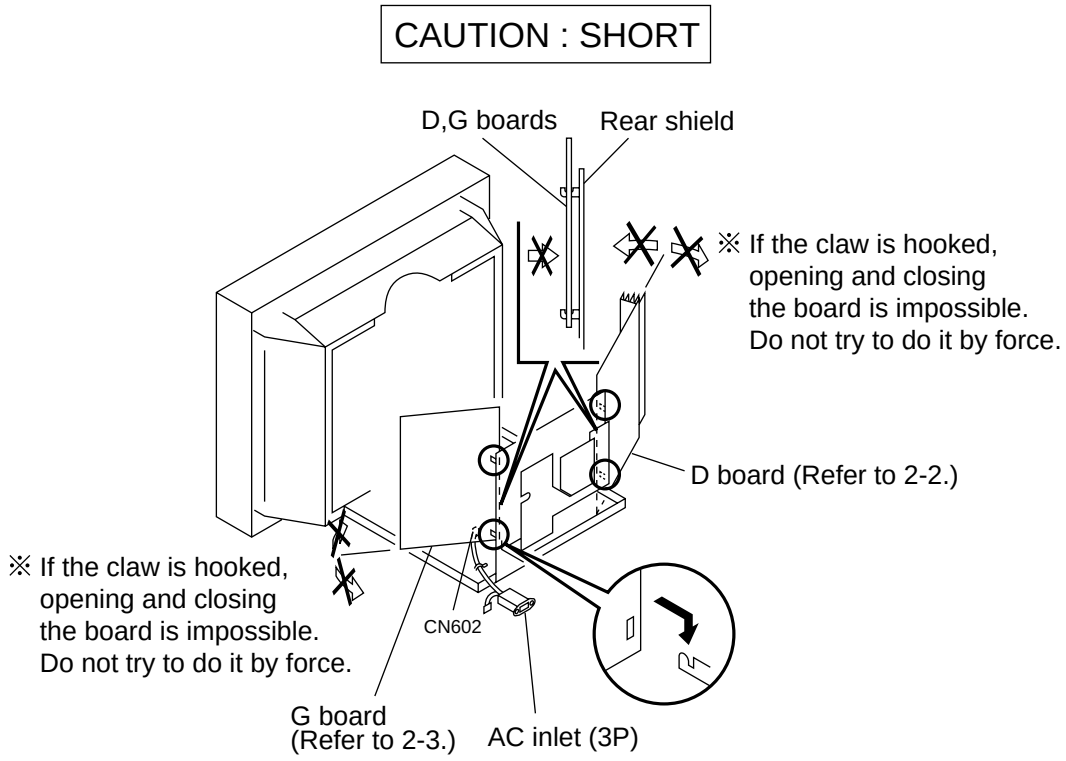
CAUTION : SHORT
D,G boards
Rear shield
※ If the claw is hooked, opening and closing the board is impossible. Do not try to do it by force.
D board (Refer to 2-2.)
※ If the claw is hooked, opening and closing the board is impossible. Do not try to do it by force.
CN602
G board (Refer to 2-3.)
AC inlet (3P)

2-7. BEZEL ASSEMBLY, H1 BOARD REMOVAL

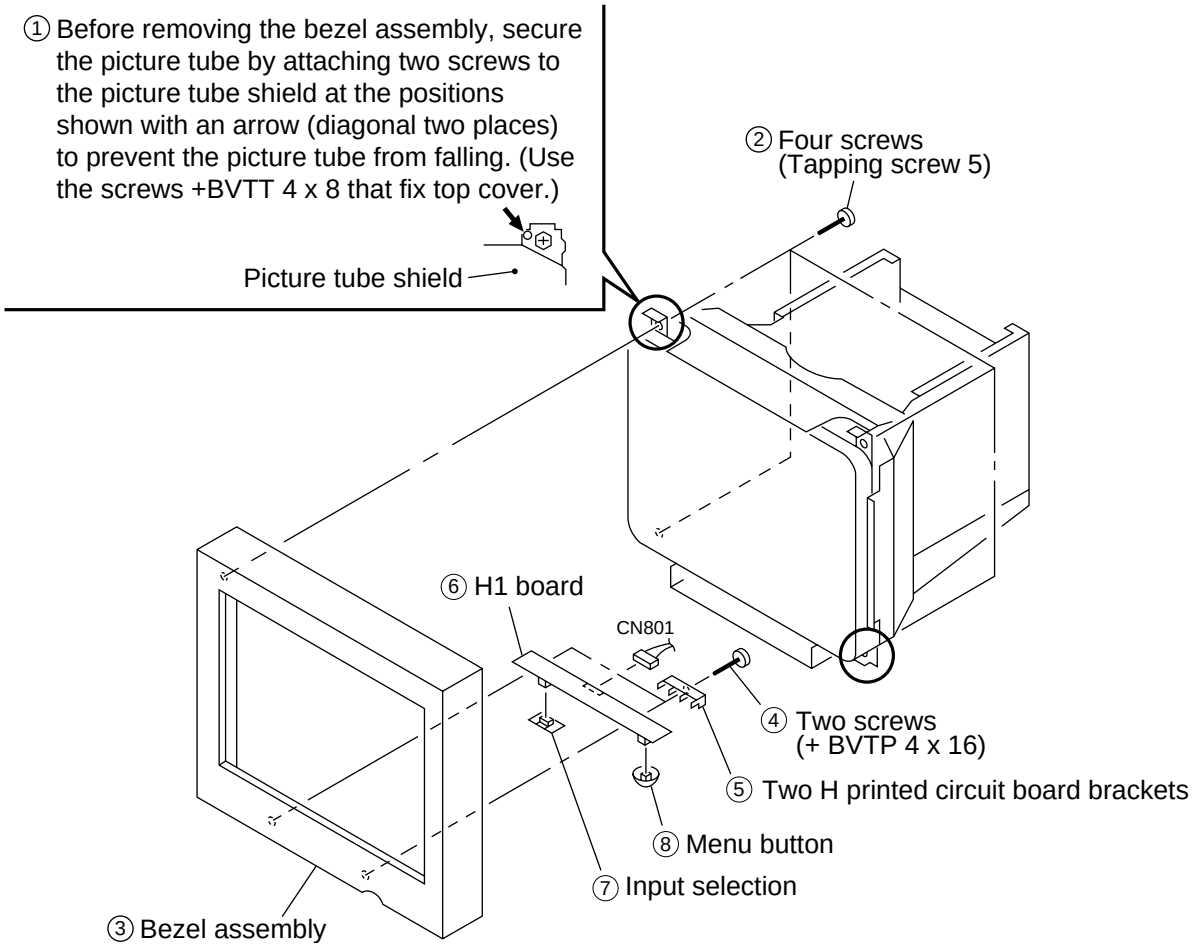
① Before removing the bezel assembly, secure the picture tube by attaching two screws to the picture tube shield at the positions shown with an arrow (diagonal two places) to prevent the picture tube from falling. (Use the screws +BVTT 4 x 8 that fix top cover.)
Picture tube shield
② Four screws (Tapping screw 5)
⑥ H1 board
CN801
④ Two screws (+ BVTP 4 x 16)
⑤ Two H printed circuit board brackets
⑧ Menu button
⑦ Input selection
③ Bezel assembly

2-8. PICTURE TUBE REMOVAL

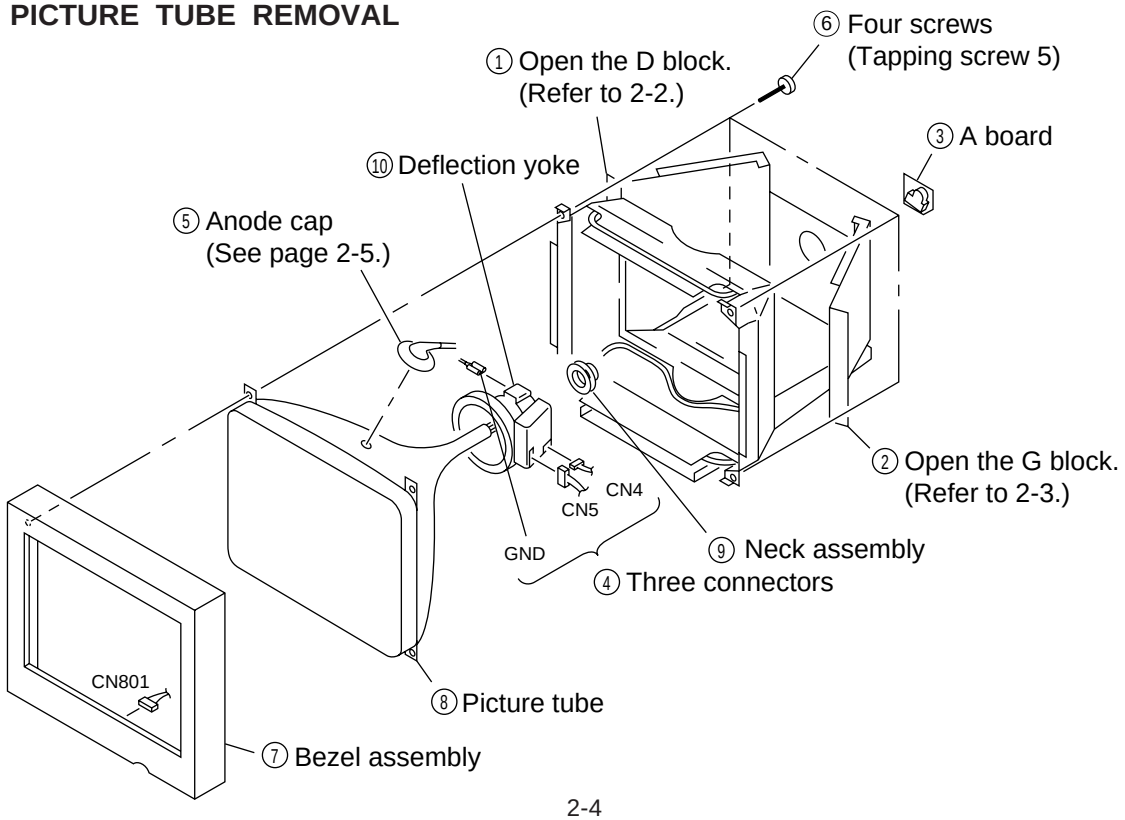

2-9. J BOARD REMOVAL

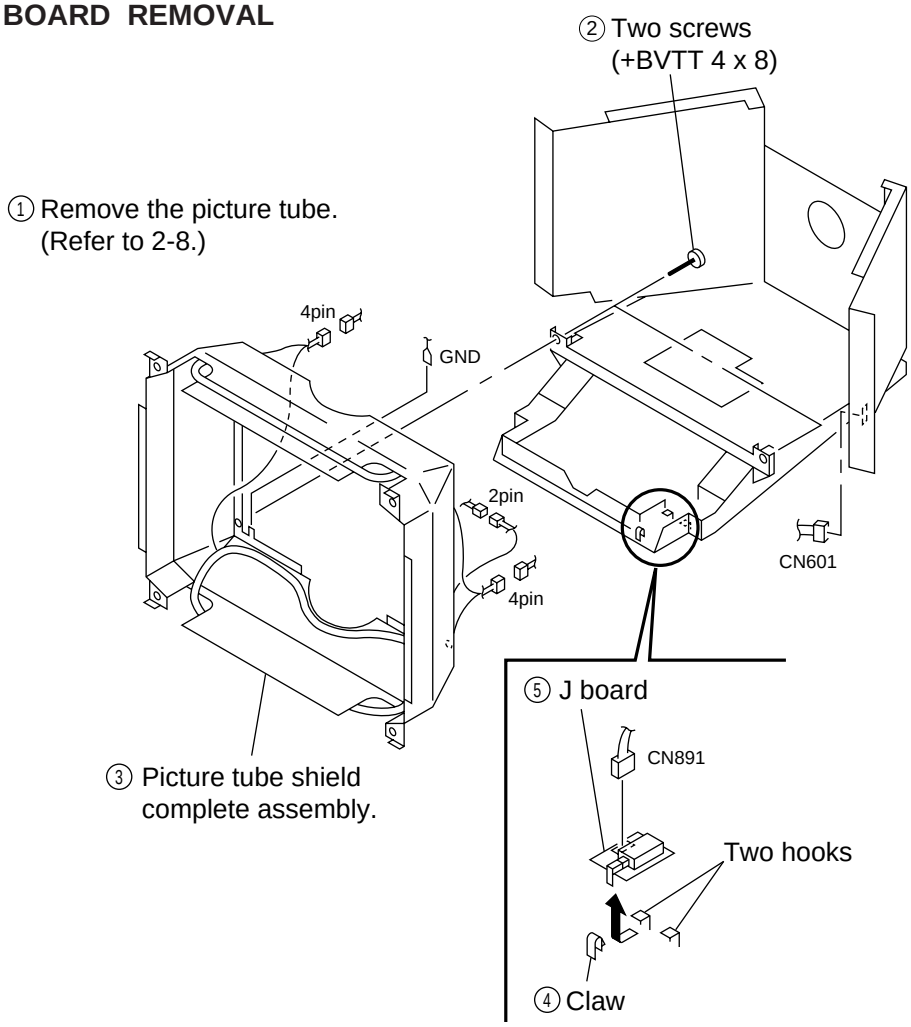

• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

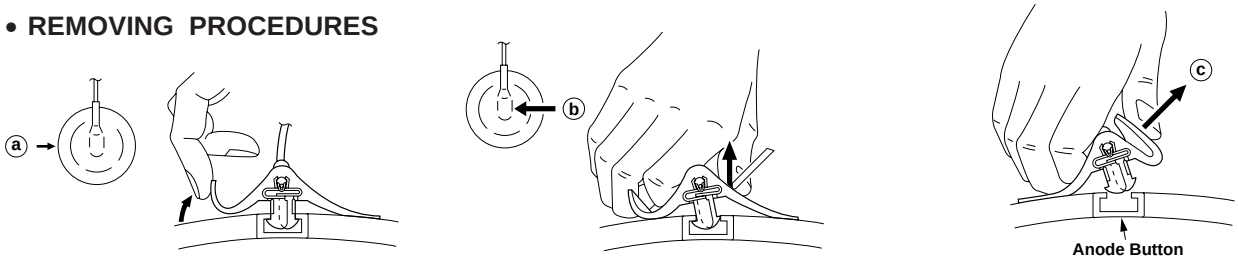

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⓒ.

• HOW TO HANDLE AN ANODE-CAP

① Don't scratch the surface of anode-caps with shartp shaped material!

② Don't press the rubber hardly not to damage inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.

③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or damage the rubber.

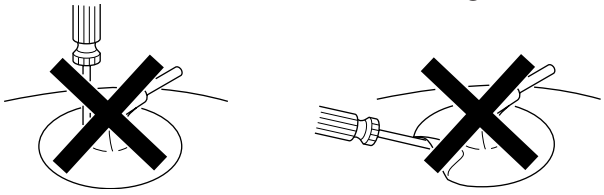

2-10. HARNESS LOCATION

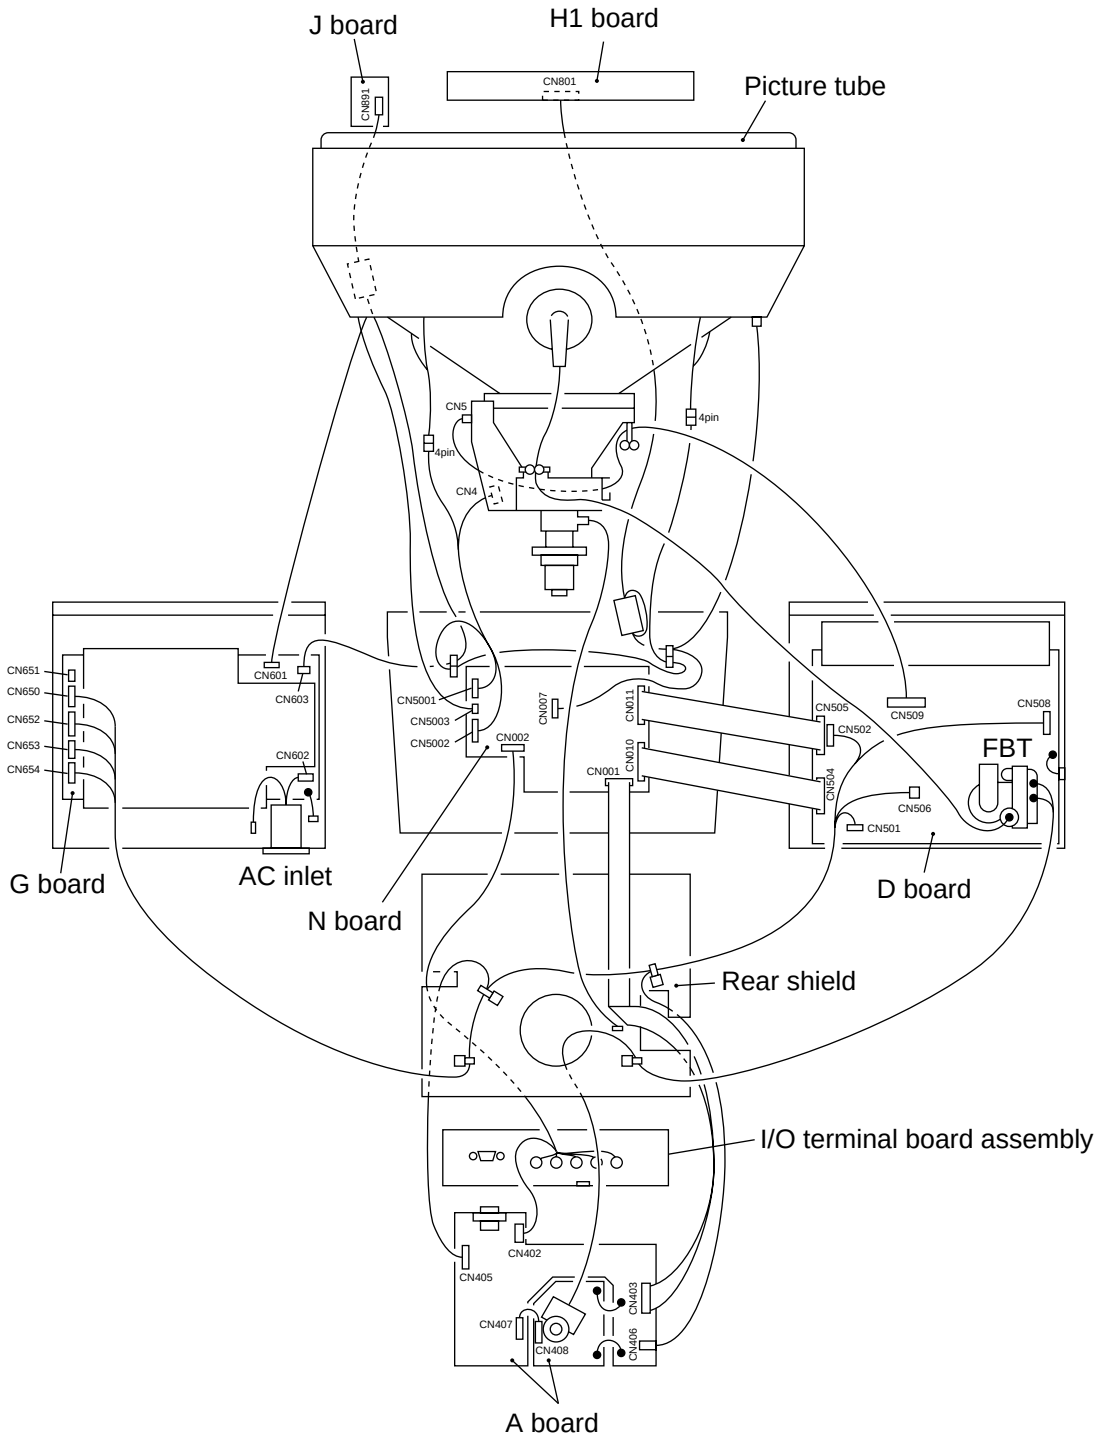

SECTION 3
SAFETY RELATED ADJUSTMENT

When replacing or repairing the shown below table, the following operational checks must be performed as a safety precaution against X-rays emissions from the unit.

	Part Replaced (⋈)
HV ADJ	RV901

	Part Replaced (◪)	
HV Regulator Circuit Check	D Board	C920, IC901, R923 R924, R929, R945, RV901, T902(FBT) • Mounted D Board
HV Protector Circuit Check	D Board	C922, C925, C926, D912, D914, D915, D921, Q907, Q908, R921, R922, R932, R937, R939, T902(FBT) • Mounted D Board
Beam Current Protector Circuit Check	D Board	C910, C921, C933, D901, D902, D913, IC503, IC901, R901, R920, R928, R930, R931, R940, R941, T902(FBT) • Mounted D Board
	G Board	IC652 • Mounted G Board
	N Board	IC001, R031, R032 • Mounted N Board

* Confirm one minute later turning on the power.

a) HV Regulator Circuit Check

1) Enter black crosshatch signal (black on white background), and check that high voltage is in the specified range.
   [Specification]: 27.00 ±0.10 kV
2) Check that the voltage of D912 cathode on the D board is 27.0 V or more.

b) HV Protector Circuit Check

1) Enter black crosshatch signal (black on white background).
2) Apply the specified voltage to the D912 cathode on the D board, and check that high voltage is 0.1 kV or less.
   [Specification]: 31.90 +0.00/–0.05 V

c) Beam Current Protector Circuit Check (1st Protector): D Board

1) Apply 4.5 V DC to CN504 ⑩ pin on the D board, and check high voltage value.
2) Connect constant current source to a section between T902 (FBT) ⑪ pin and ⑫ pin (GND) on the D board, and check that high voltage checked in 1) lowers by 1.50 kV or more when the specified current flows to the ⑪ pin.
   [Specification]: 2.00 +0.00/–0.01 mA

d) Beam Current Protector Circuit Check (2nd Protector): D Board

1) Connect constant current source to a section between T902 (FBT) ⑪ pin and ⑫ pin (GND) on the D board, and check that the voltage of CN504 ⑩ pin becomes 0 V or less when the specified current flows to the ⑪ pin.
   [Specification]: 1.70 +0.00/–0.01 mA

e) Beam Current Protector Circuit Check : G Board

1) Apply 264 V AC.
2) Enter about 5 V to CN650 ④ pin on the G board, and check that the output voltage of CN653 ② pin is about 15 V.
3) Enter about 0±0.2 V to CN654 ④ pin, and check that the output voltage of CN653 ② pin becomes 1.0 V or less.

f) Beam Current Protector Circuit Check : N Board

1) Check that the protector operates, when the voltage of CN010 ⑯ pin on the N board is lowered to 0 V or less (for more than 2 seconds).

SECTION 4
ADJUSTMENTS

Note: Hand degauss must be used on stand-by or power-off condition.
This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

• Landing Rough Adjustment

1. Enter the full white signal. (or the full black dots signal).
2. Adjust the contrast to the maximum.
3. Make the screen monogreen.

Note: Off the outputs from R ch and B ch of SG.

4. Reverse the DY, and adjust coarsely the purity magnet so that a green raster positions in the center of screen.
5. Adjust the tilt of DY, and fix lightly with a clamp.

Note: "TILT" = "128".

• Landing Fine Adjustment

1. Put the set inside the Helmholtz coil. ("LCC SW" = "12")
2. Input the single green signal and set the "CONTRAST"= "255".

Note: After the W/B adjustment with 9300K, measure an average of ΣIk when a full white signal is entered in the CONT MAX/BRT CENT status. Then make adjustment so that the specified screen can be attained after aging for 2 hours with Ik equivalent to 30% of the average value.

3. Demagnetize the metal part of the chassis with the hand degausser and coil degausser, and the CRT surface with the hand degausser.
   Input AC 230V to AC IN, turn on and off the power to perform auto degaussing. (Perform auto degaussing by setting "FUNCTION SW"=1. Return to the original value after use.)
   Demagnetize the CRT surface with the hand degausser again.

Note:

(1) Hand degauss must be used on stand-by or power-off condition.
   This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.
(2) Adjust in a non-magnetic field.
(3) If adjusting in a magnetic fields, add the shift from the non-magnetic field in your estimation.

4. Attach the wobbling coil to the designated part of the CRT neck.
5. Attach the sensor of the landing adjustment unit on the CRT surface.
6. Adjust the DY position and purity, and the DY tilt, and landing of the center and 4 corners with the landing checker.
   After adjustment, set "LCC SW" to "13".
   • Write terrestrial magnetism sensor reading VX and VY to "LCC VX" and LCC VY" respectively. Adjust the landing by moving "LCC NS", "LCC LT", "LCC LB", "LCC RT" and "LCC RB". However, the register adjustment must be limited within the following range.
   "LCC NS" 128 ± 15
   "LCC LT", "LCC LB", "LCC RT", "LCC RB" 128 ± 40
   Save the service data.

<Specifications>
Adjust so that the green is within the specification given right.
4 corner adjust target : within ± 1

(µm)

0 ± 3	0 ± 7.5	0 ± 3
0 ± 3	0 ± 7.5	0 ± 3
0 ± 3	0 ± 7.5	0 ± 3

The red and blue must be within the specification given right with respect to the green.

(µm)

± 6	± 6	± 6
± 6	± 6	± 6
± 6	± 6	± 6

A difference between red and blue must be within the specification given right.

(µm)

10	10	10
10	7	10
10	10	10

* Adjustment and measurement should be made at the points one inch inside the fluorescent screen.

7. For the up/down swing, swing the DY and insert a wedge so that the up and down pins are equal at the top and bottom. Adjust the H.TRP VR of DY so that the horizontal trapezoid is equal at the left and right. Insert the wedge firmly so that the DY does not shake.
8. Check the landing of each corner, and if it does not satisfy the specification, adjust the landing of four corners using "LCC LT", "LCC LB", "LCC RT" and "LCC RB".
   However, the register adjustment must be limited within the following range.
   "LCC NS" 128 ± 15
   "LCC LT", "LCC LB", "LCC RT", "LCC RB" 128 ± 40
   After adjustment, save the service data.
9. Remove the sensor and wobbling coil.
10. Switch the signal to R.G.B., and check that each color is pure.
11. Check that the DY is not tilting, and fix the purity Mg with a white pen. Fix wedges with RTV.

Connect the communication cable of the computer to the connector located on the D board. Run the service software and then follow the instruction.

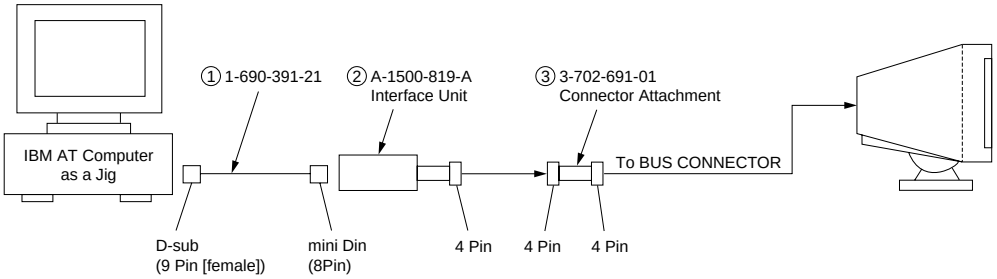

*The parts above (① ～ ③) are necessary for DAS adjustment.

- **Convergence Rough Adjustment**

(1) Receive an image of the white crosshatch signals (white lines on black).
(2) Place the protrusions of the 6-fold poles magnet attached to the CRT neck upon each other.
(3) Make rough adjustment of the H and V direction convergence by using 4-fold poles magnet.

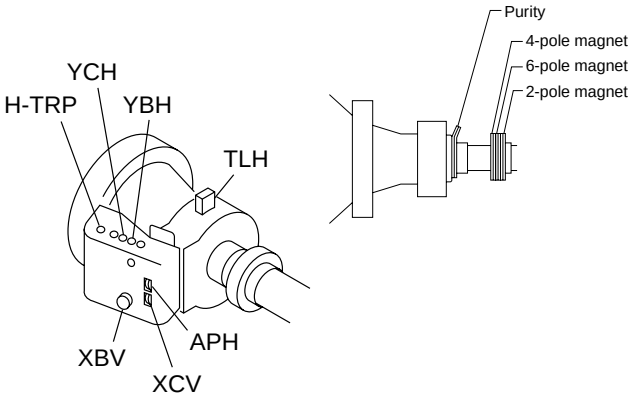

* Set so that the protruding parts of the 2 magnet rings agree with each other.

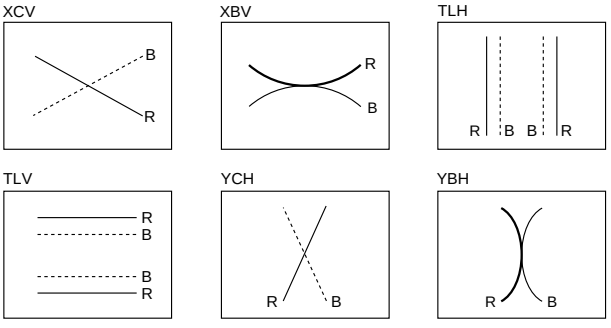

- **Convergence Specification**

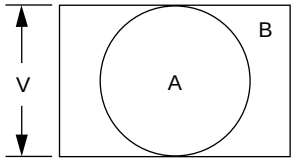

fH	60kHz ≦	60kHz>
A	0.20 mm	0.24 mm
B	0.24 mm	0.28 mm

- **White Balance Adjustment Specification**

1. 9300K
   x=0.283 ± 0.005
   y=0.298 ± 0.005
   (All White)
2. 6500K
   x=0.313 ± 0.005
   y=0.329 ± 0.005
   (All White)
3. 5000K
   x=0.346 ± 0.005
   y=0.359 ± 0.005
   (All White)

- **Vertical and Horizontal Position and Size Specification**

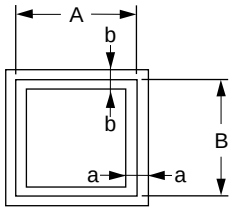

a ≦ 2.0 mm
b ≦ 2.0 mm

MODE	4 : 3	5 : 4
A	388	364
B	291	291

- **Focus adjustment**

Adjust the focus volume 1 and 2 for the optimum focus.

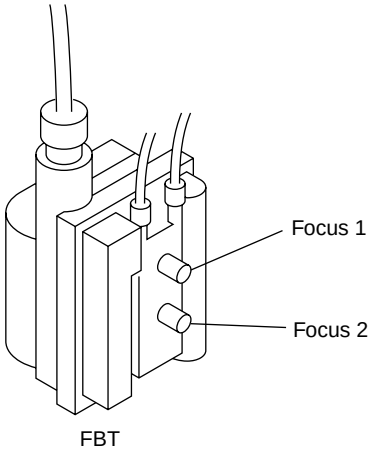

MEMO

SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAMS

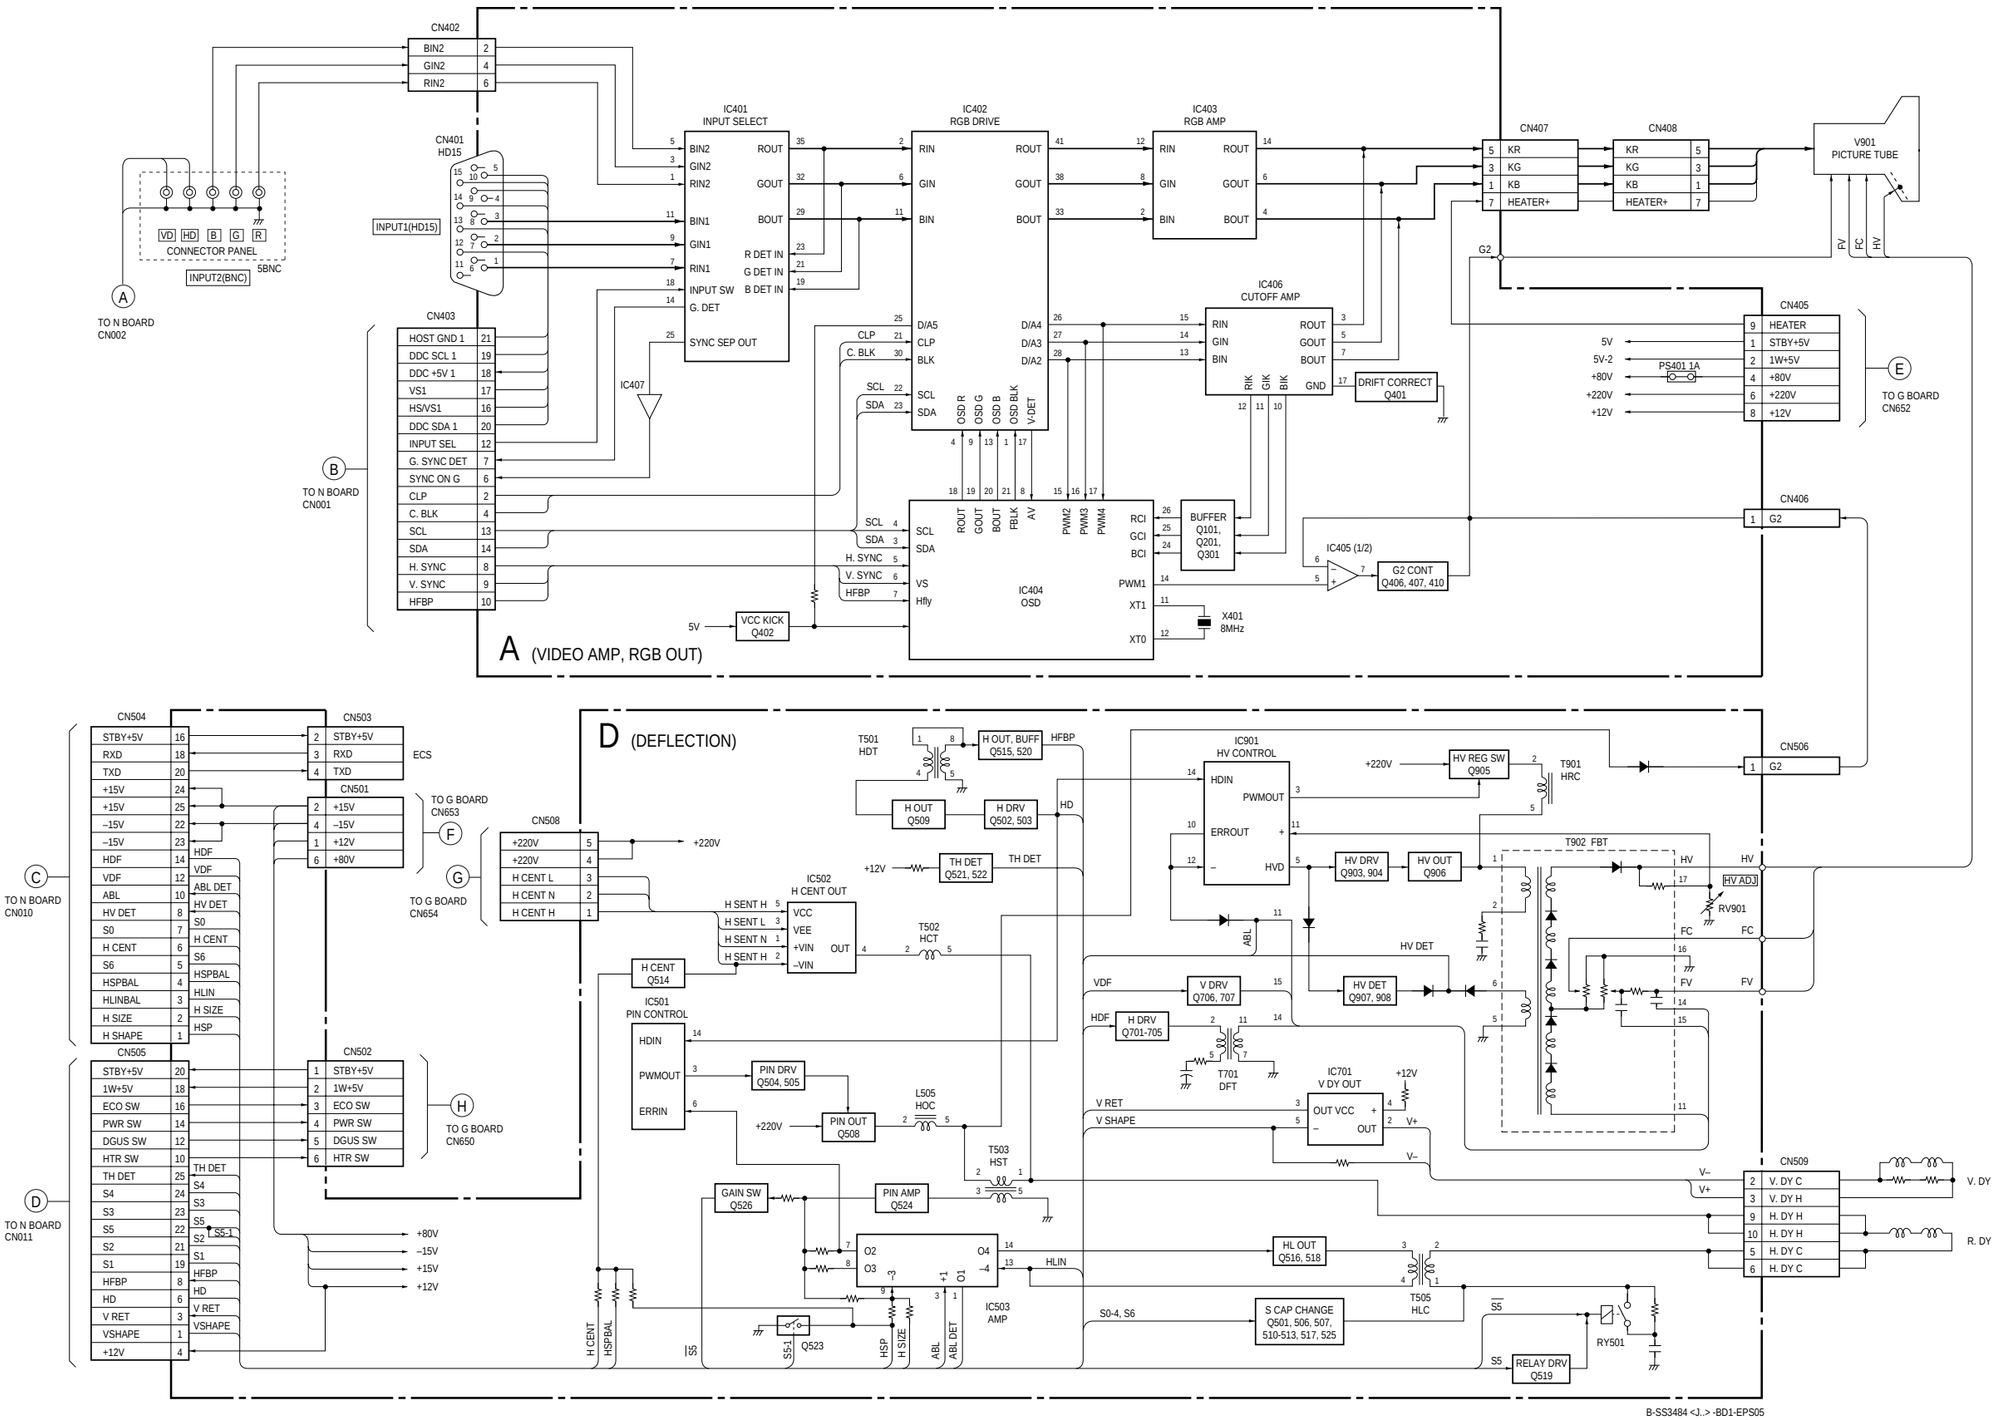

N ⟨ µ-COM, V.CONV, H. CONV, LCC, GEO MAGNETIC SENSOR ⟩

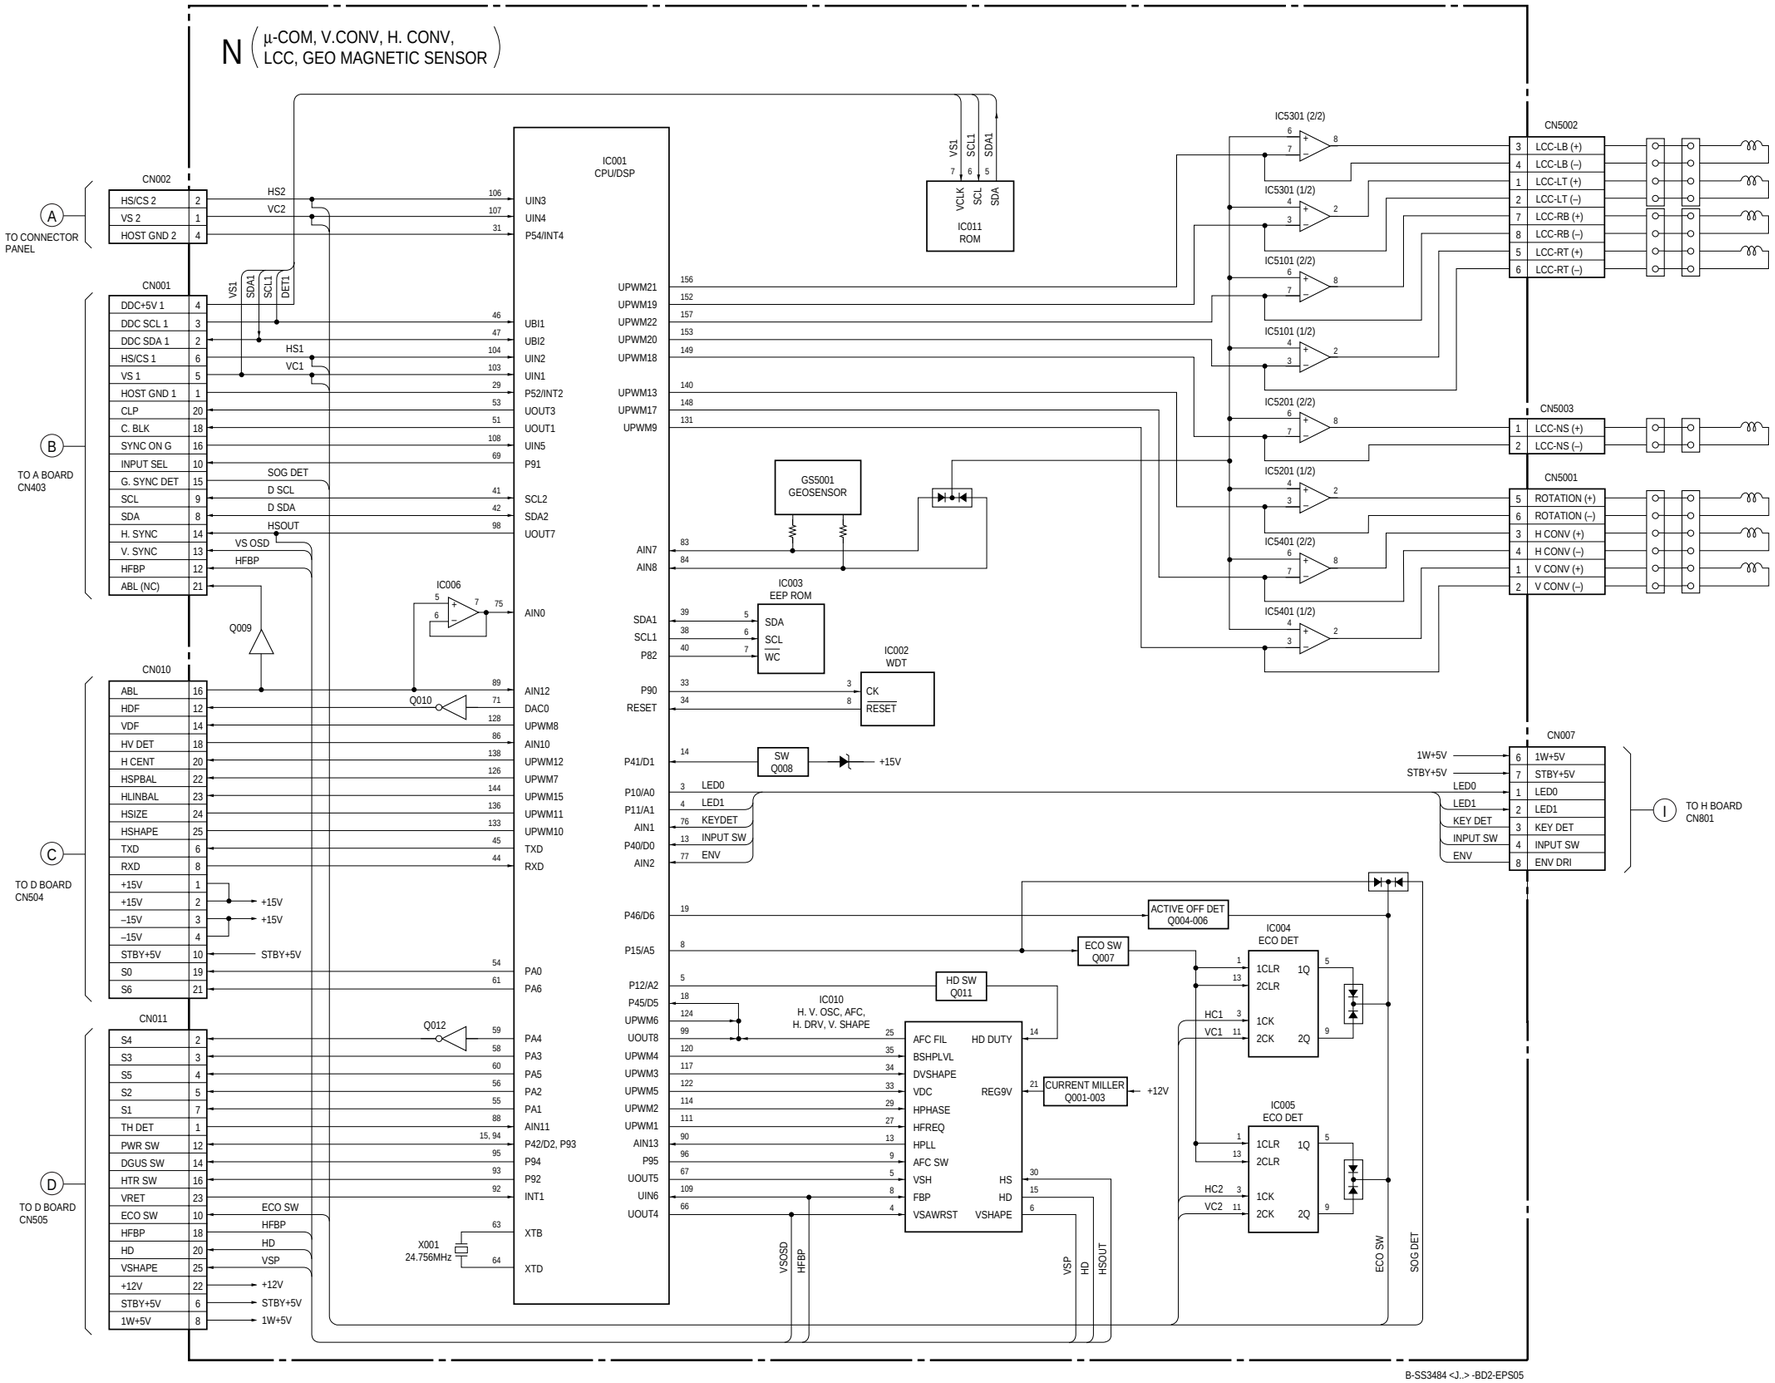

B-SS3484 <J..> -BD2-EPS05

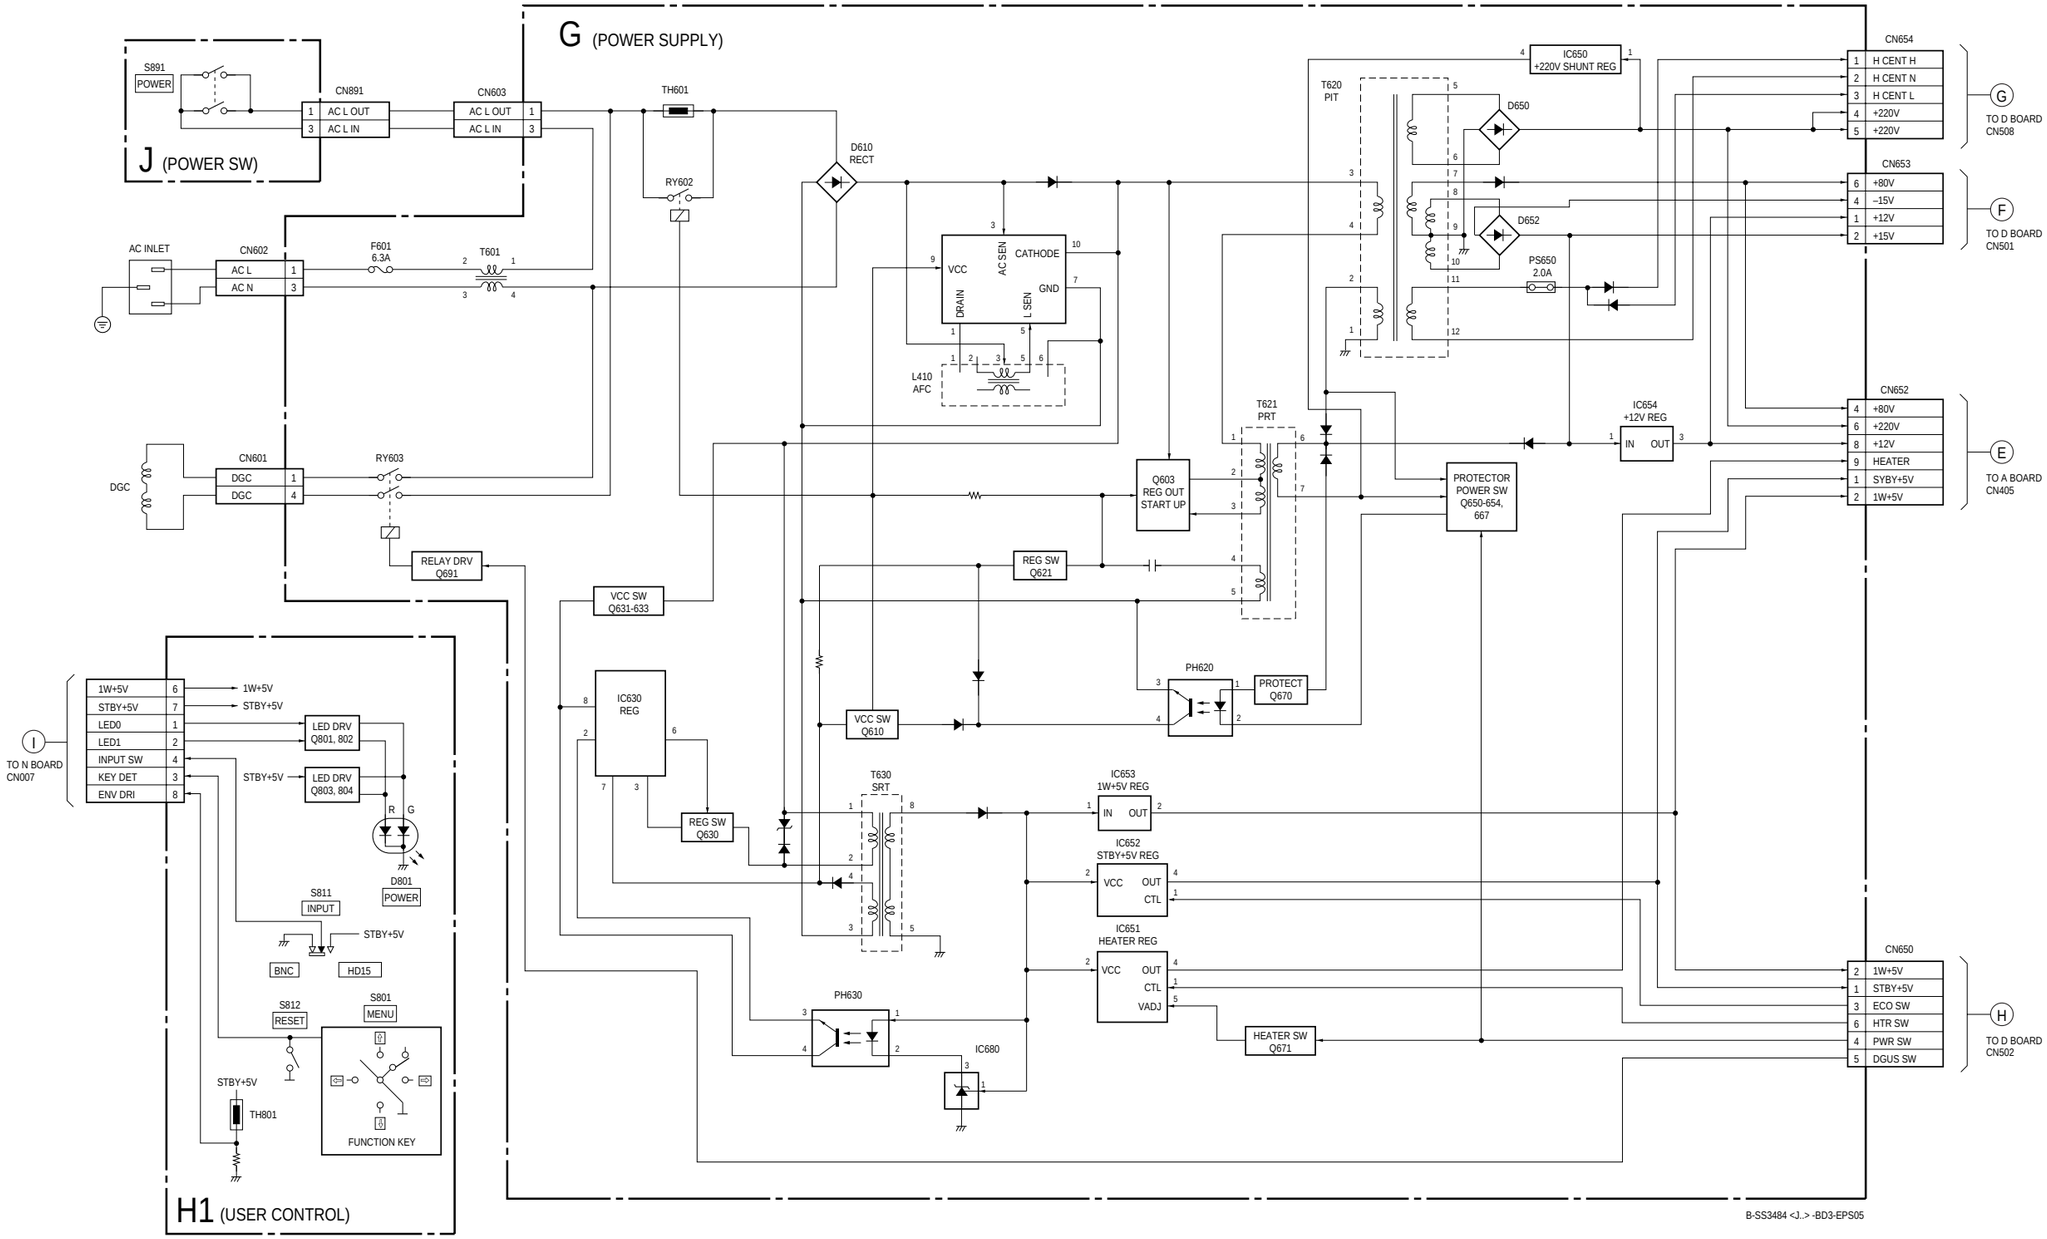
G (POWER SUPPLY)
J (POWER SW)
S891
POWER
CN891
1 AC L OUT
3 AC L IN
CN603
AC L OUT 1
AC L IN 3
TH601
RY602
D610
RECT
AC INLET
CN602
AC L 1
AC N 3
F601
6.3A
T601
VCC
AC SEN
CATHODE
GND
DRAIN
L SEN
L410
AFC
DGC
CN601
DGC 1
DGC 4
RY603
RELAY DRV
Q691
VCC SW
Q631-633
REG SW
Q621
Q603
REG OUT
START UP
T621
PRT
PROTECTOR
POWER SW
Q650-654,
667
T620
PIT
IC650
+220V SHUNT REG
D650
D652
PS650
2.0A
IC654
+12V REG
IN OUT
CN654
1 H CENT H
2 H CENT N
3 H CENT L
4 +220V
5 +220V
CN653
6 +80V
4 –15V
1 +12V
2 +15V
CN652
4 +80V
6 +220V
8 +12V
9 HEATER
1 SYBY+5V
2 1W+5V
G TO D BOARD CN508
F TO D BOARD CN501
E TO A BOARD CN405
IC630
REG
VCC SW
Q610
PH620
PROTECT
Q670
T630
SRT
REG SW
Q630
IC653
1W+5V REG
IN OUT
IC652
STBY+5V REG
VCC OUT CTL
IC651
HEATER REG
VCC OUT CTL VADJ
HEATER SW
Q671
PH630
IC680
CN650
2 1W+5V
1 STBY+5V
3 ECO SW
6 HTR SW
4 PWR SW
5 DGUS SW
H TO D BOARD CN502
I TO N BOARD CN007
1W+5V 6
STBY+5V 7
LED0 1
LED1 2
INPUT SW 4
KEY DET 3
ENV DRI 8
LED DRV Q801, 802
LED DRV Q803, 804
R G
D801
POWER
S811
INPUT
BNC
HD15
S812
RESET
S801
MENU
TH801
FUNCTION KEY
H1 (USER CONTROL)
B-SS3484 <J..> -BD3-EPS05

5-2. FRAME SCHEMATIC DIAGRAM

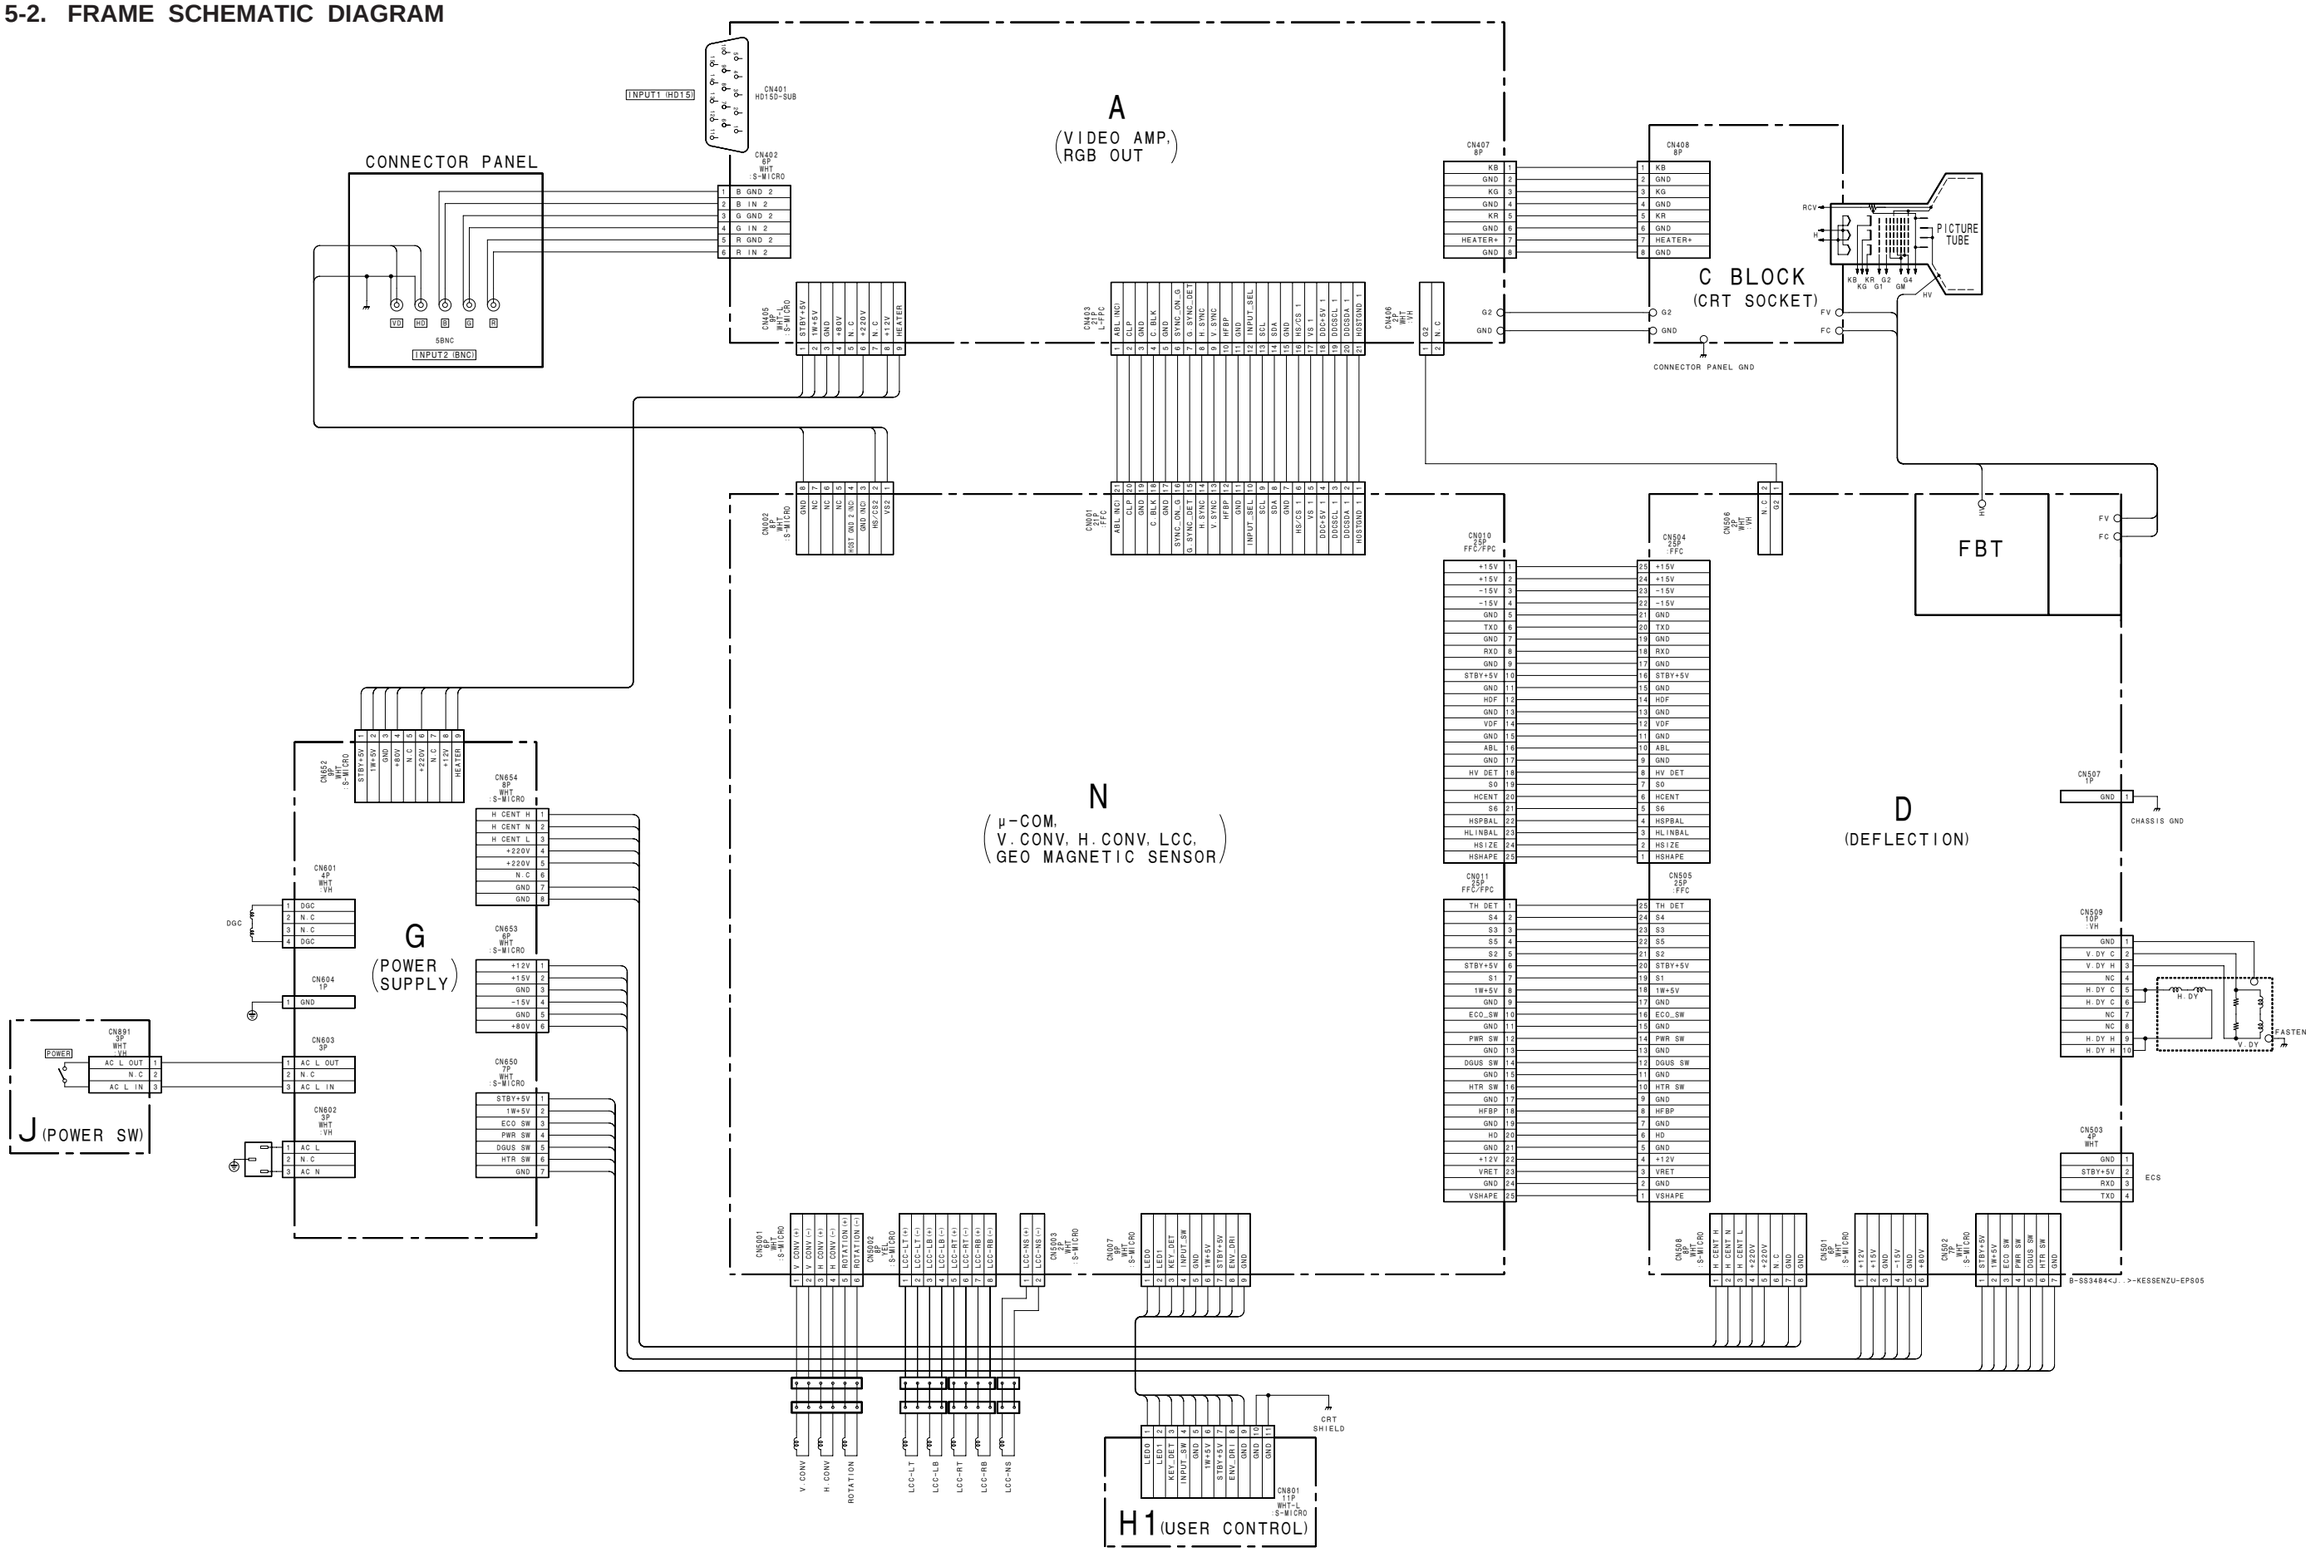

5-3. CIRCUIT BOARDS LOCATION

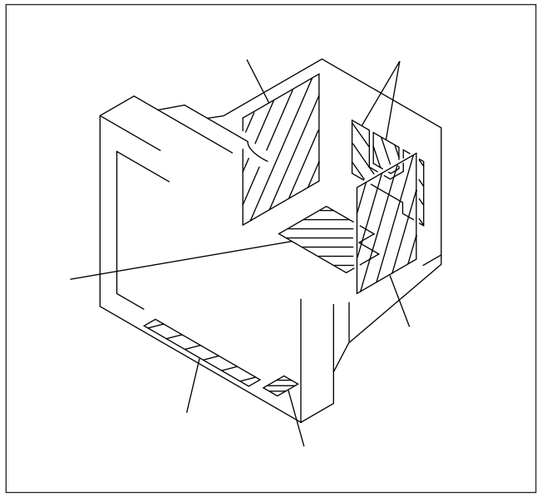

5-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in µF unless otherwise noted. (pF: µµF) Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- The components identified by ⋈ in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.
  Should replacement be required, replace only with the value originally used.
- When replacing components identified by ◪, make the necessary adjustments indicated. (See page 3-1)
- When replacing the part in below table, be sure to perform the related adjustment.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- ∗ : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B – bus.

- Divided circuit diagram

  One sheet of N board circuit diagram is divided into three sheets, each having the code N-ⓐ to N-ⓒ. For example, the destination ab1 on the code N-ⓐ sheet is connected to ab1 on the N-ⓑ sheet.

  a b 1 → Ref. No.
  → Circuit diagram division code

	Part Replaced (⋈)
HV ADJ	RV901

	Part Replaced (◪)
HV Regulator Circuit Check	D Board C920, IC901, R923 R924, R929, R945, RV901, T902(FBT) • Mounted D Board
HV Protector Circuit Check	D Board C922, C925, C926, D912, D914, D915, D921, Q907, Q908, R921, R922, R932, R937, R939, T902(FBT) • Mounted D Board
Beam Current Protector Circuit Check	D Board C910, C921, C933, D901, D902, D913, IC503, IC901, R901, R920, R928, R930, R931, R940, R941, T902(FBT) • Mounted D Board G Board IC652 • Mounted G Board N Board IC001, R031, R032 • Mounted N Board

Terminal name of semiconductors in silk screen printed circuit (∗)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor	T	Collector / Base T Emitter	
②	Transistor	—	Collector / Base Emitter	
③	Diode		Cathode — Anode	
④	Diode	T	Cathode / Anode T (NC)	
⑤	Diode	—	Cathode / Anode (NC)	
⑥	Diode	T	Common / Anode T Cathode	
⑦	Diode	—	Common / Anode Cathode	
⑧	Diode	T	Common / Anode T Anode	
⑨	Diode	—	Common / Anode Anode	
⑩	Diode	T	Common / Cathode T Cathode	
⑪	Diode	—	Common / Cathode Cathode	
⑫	Diode		Anode Anode Cathode / Cathode Anode Anode	
⑬	Transistor (FET)		Drain T Source / Gate	
⑭	Transistor (FET)		Drain T Source / Gate	
⑮	Transistor (FET)		□ Source □ Drain □ Gate	
⑯	Transistor		□ Emitter □ Collector □ Base	
—	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)

Ver.1.5

(1) Schematic Diagram of A Board

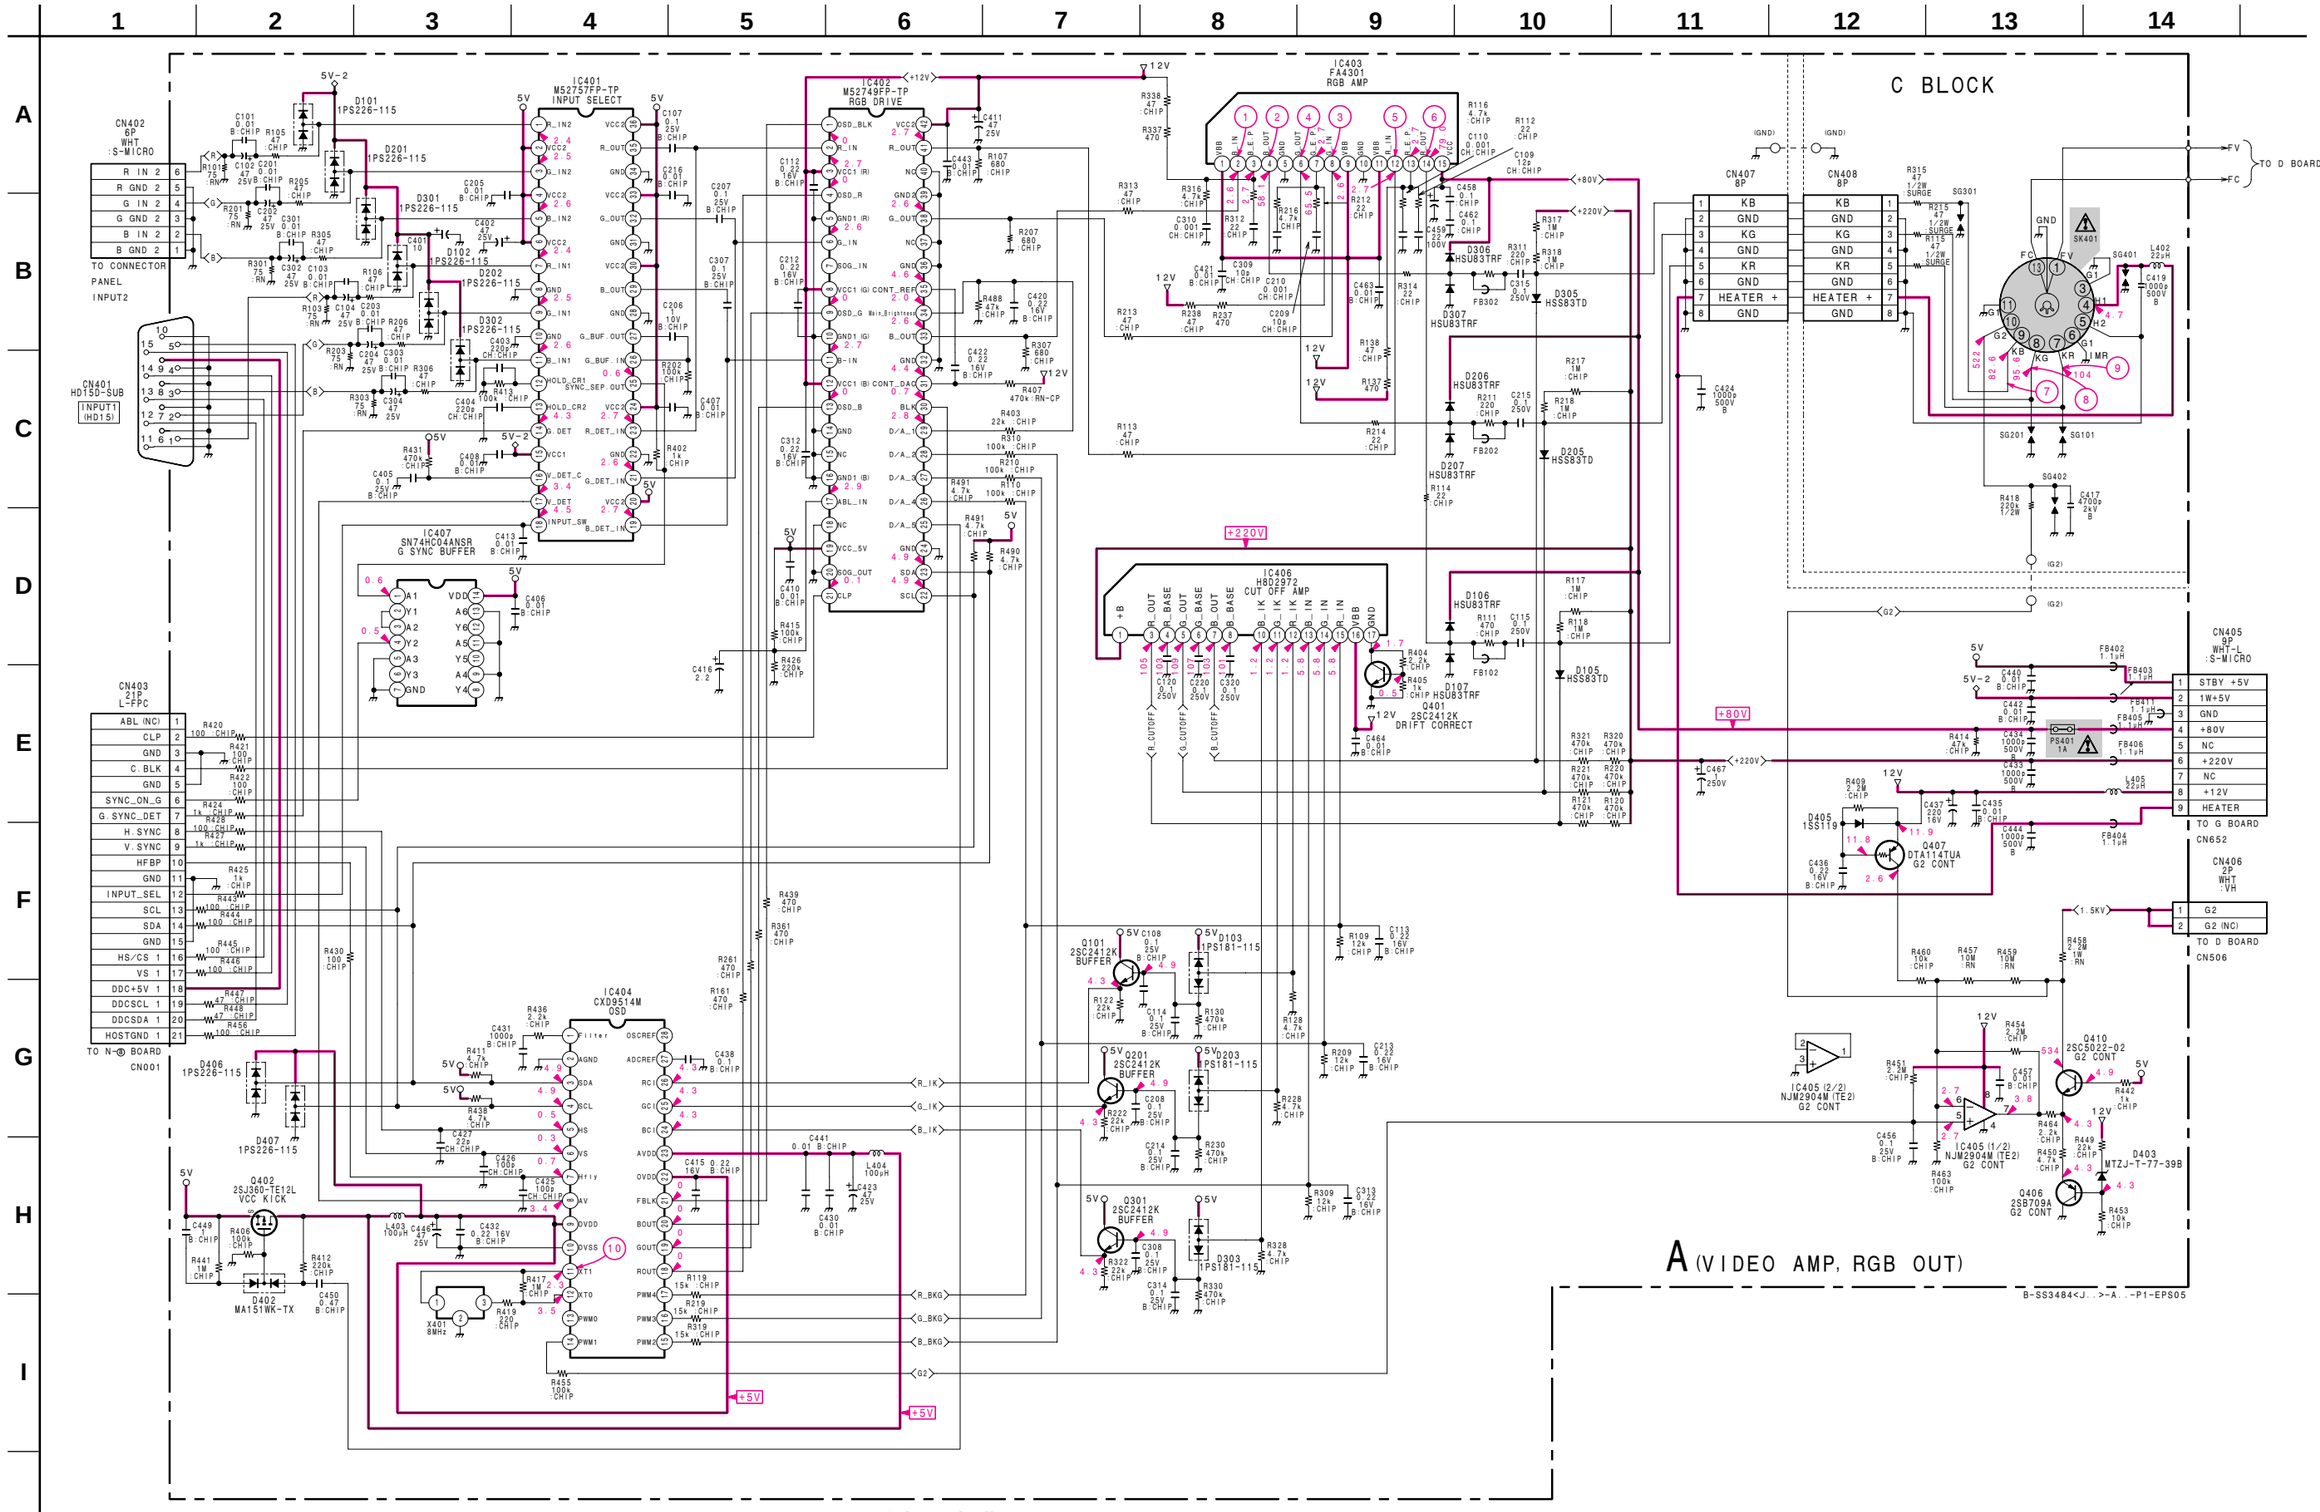

Schematic diagram

A board ➡

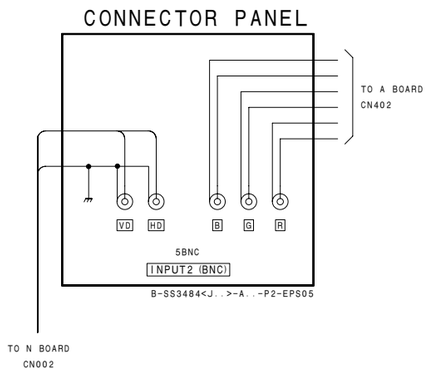

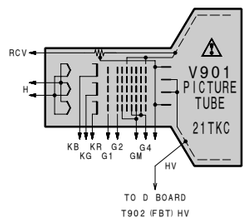

• A BOARD WAVEFORMS

① 4.7 Vp-p (H)	② 66.0 Vp-p (H)	③ 4.8 Vp-p (H)
④ 64.0 Vp-p (H)	⑤ 4.6 Vp-p (H)	⑥ 64.0 Vp-p (H)
⑦ 65.0 Vp-p (H)	⑧ 64.0 Vp-p (H)	⑨ 64.0 Vp-p (H)
⑩ 2.2 Vp-p (8MHz)		

• A BOARD IC401 M52757FP

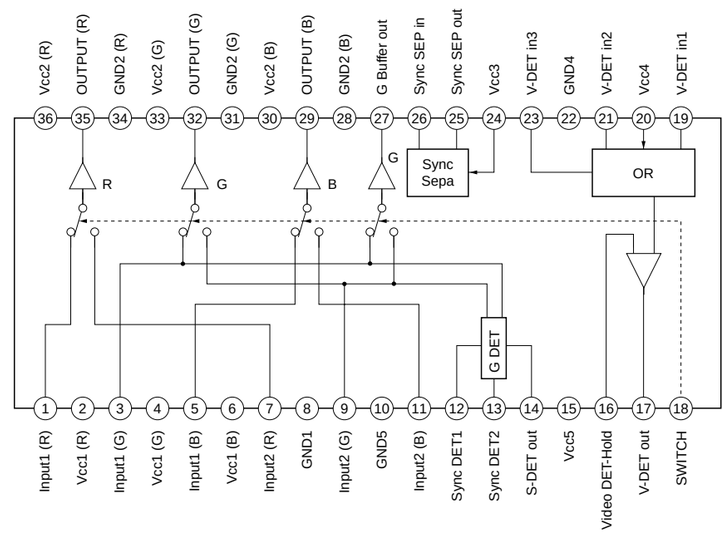

• A BOARD IC402 M52749FP

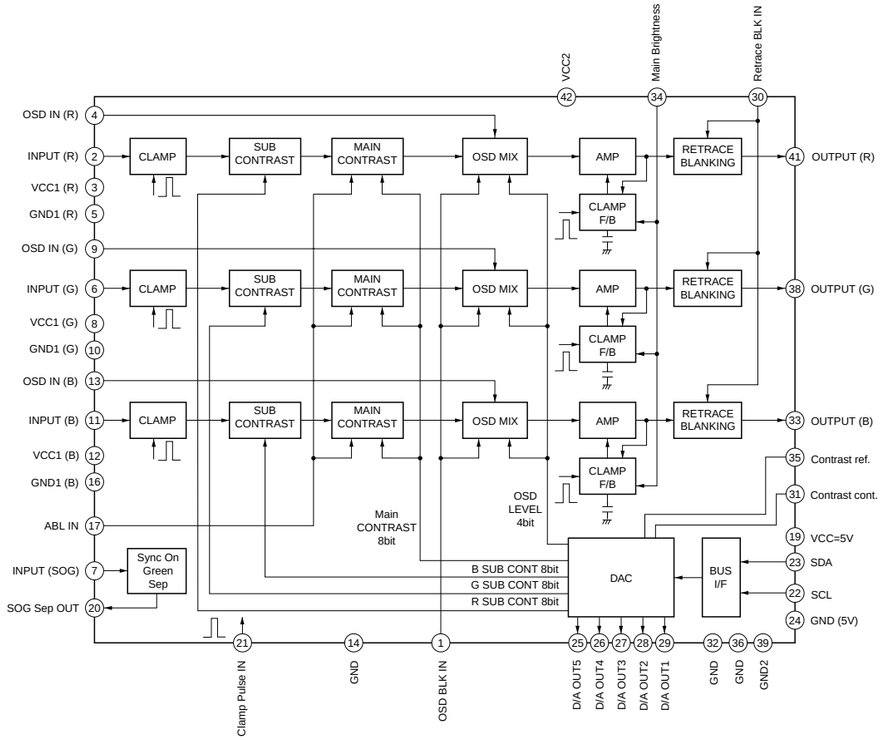

A [VIDEO AMP / RGB OUT]

— A BOARD (Conductor Side) —

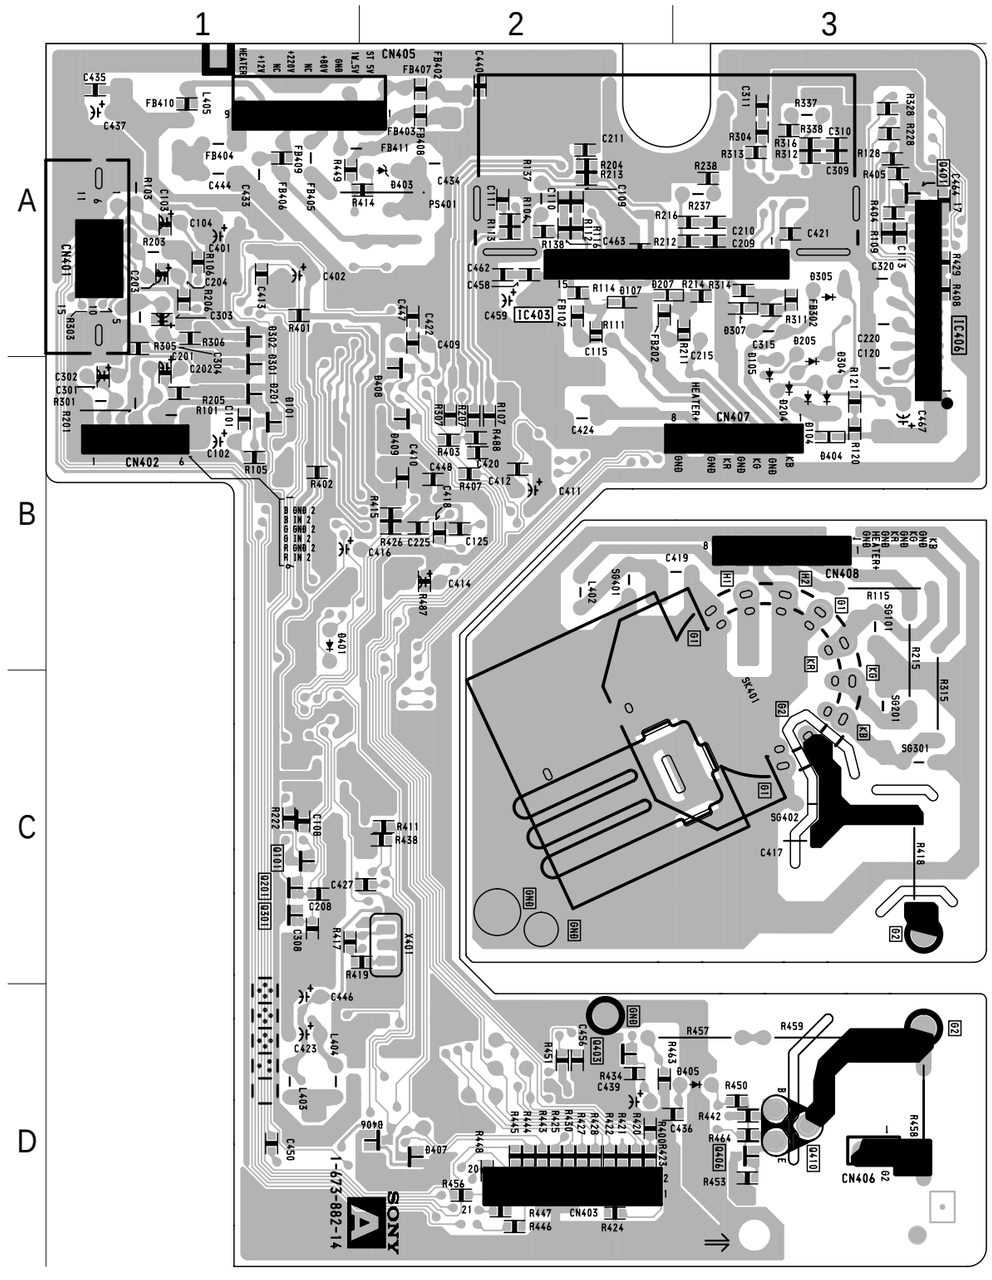

• A BOARD SEMICONDUCTOR LOCATION

IC	(Conductor Side)	(Component Side)
IC401		B-3
IC402		B-2
IC403	A-2	A-2
IC404		C-3
IC405		D-2
IC406	A-3	A-1
IC407		D-2

TRANSISTOR	(Conductor Side)	(Component Side)	*
Q101	C-1		①
Q201	C-1		①
Q301	C-1		①
Q401	A-3		①
Q402		D-3	⑮
Q406	D-3		①
Q407		D-2	②
Q410	D-3	D-1	–
			–

DIODE	(Conductor Side)	(Component Side)	*
D101	B-1		⑥
D102		A-3	⑦
D103		A-1	⑪
D105	B-3	B-1	–
D106		A-2	③
D107	A-2		③
D201	B-1		⑥
D202		A-3	⑦
D203		A-1	⑪
D205	B-3	A-1	–
D206		A-1	③
D207	A-2		③
D301	B-1		⑥
D302	A-1		⑥
D303		A-1	⑪
D305	A-3	A-1	–
D306		A-1	③
D307	A-3		③
D402		D-3	⑨
D403	A-2	A-2	–
D405	D-3	D-1	–
D406	D-2		⑥
D407	D-2		⑥

CRYSTAL	(Conductor Side)	(Component Side)
X401	C-2	C-2

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

— A BOARD (Component Side) —

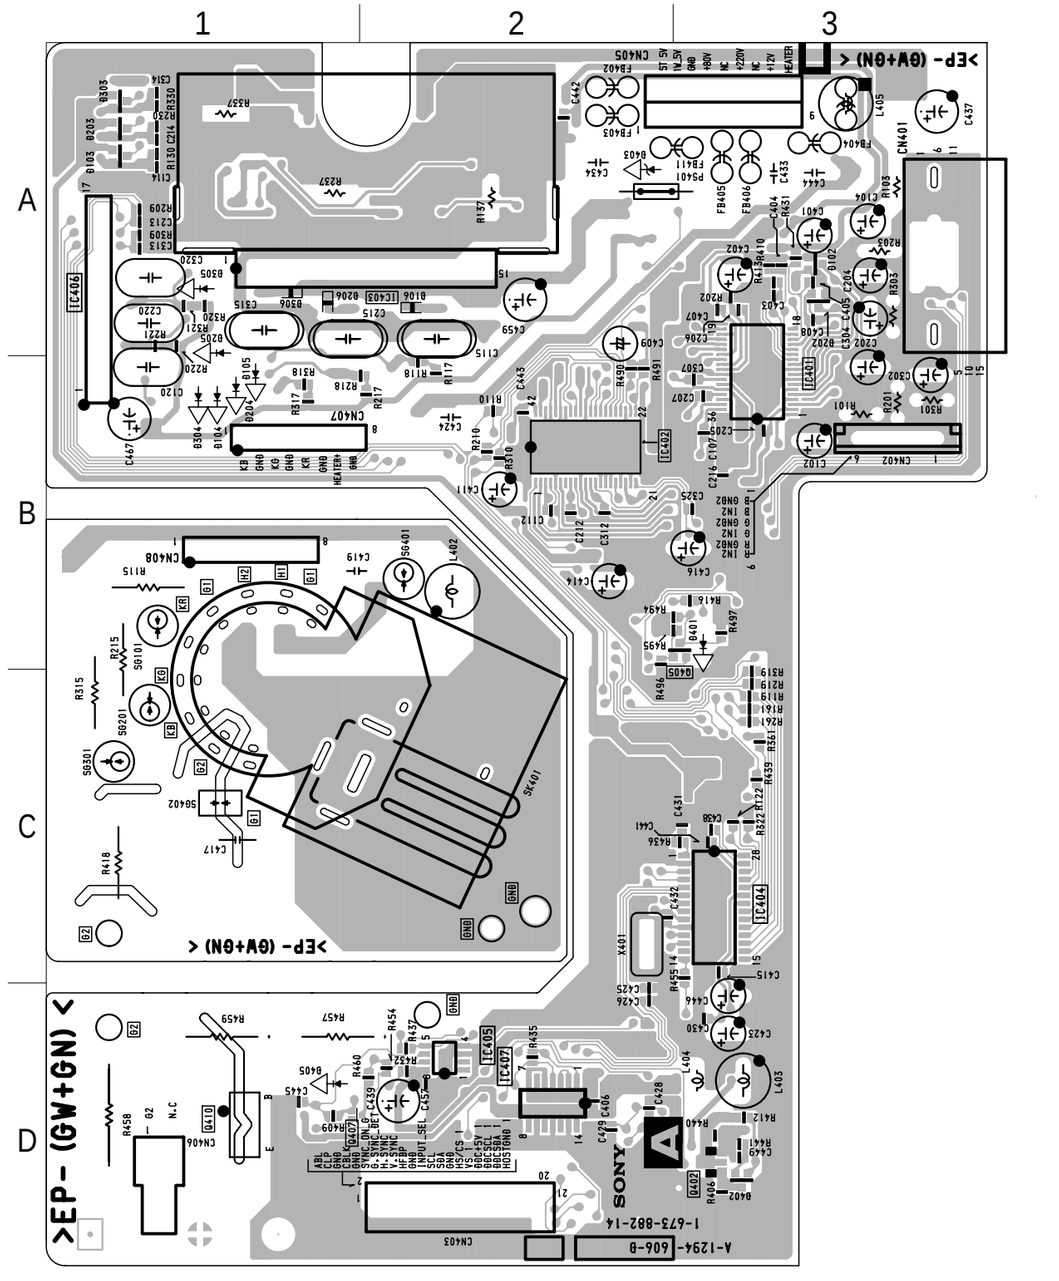

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

Schematic diagram
← A board

(2) Schematic Diagrams of H1, J Boards

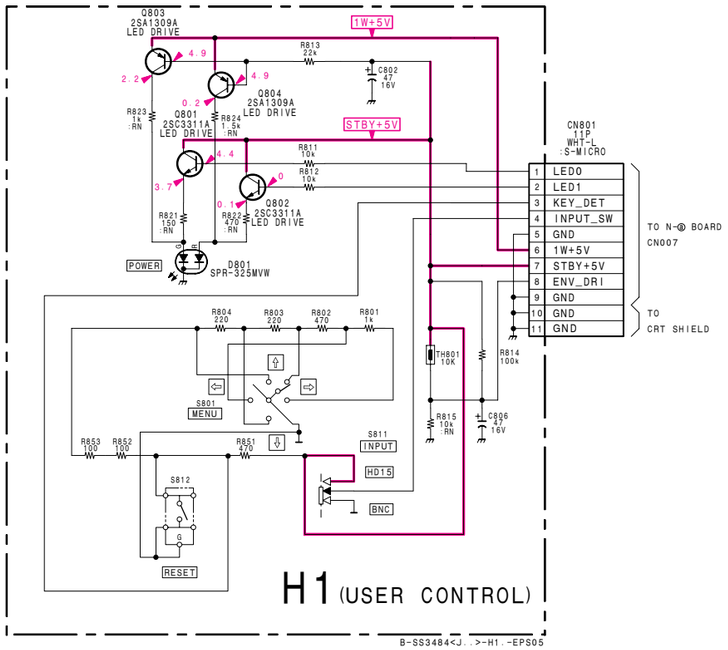

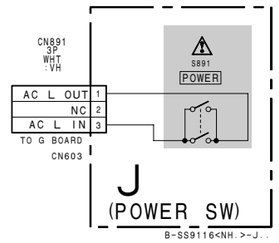

— J BOARD —

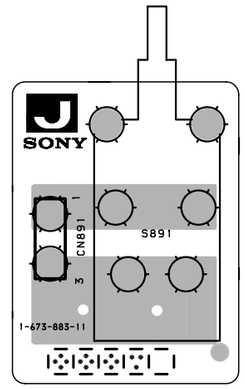

— H1 BOARD —

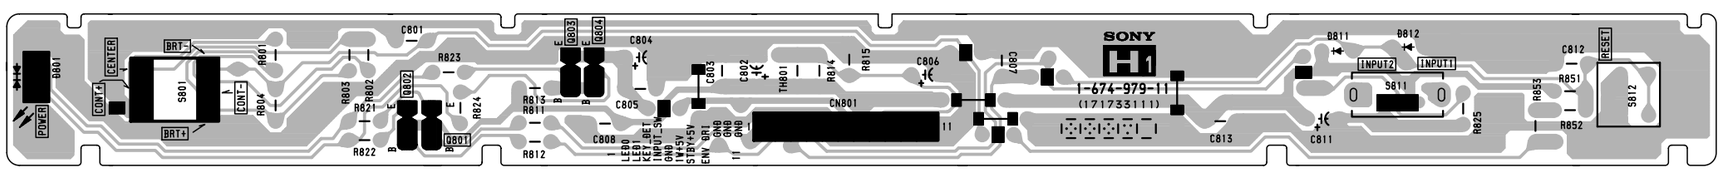

(3) Schematic Diagram of D Board

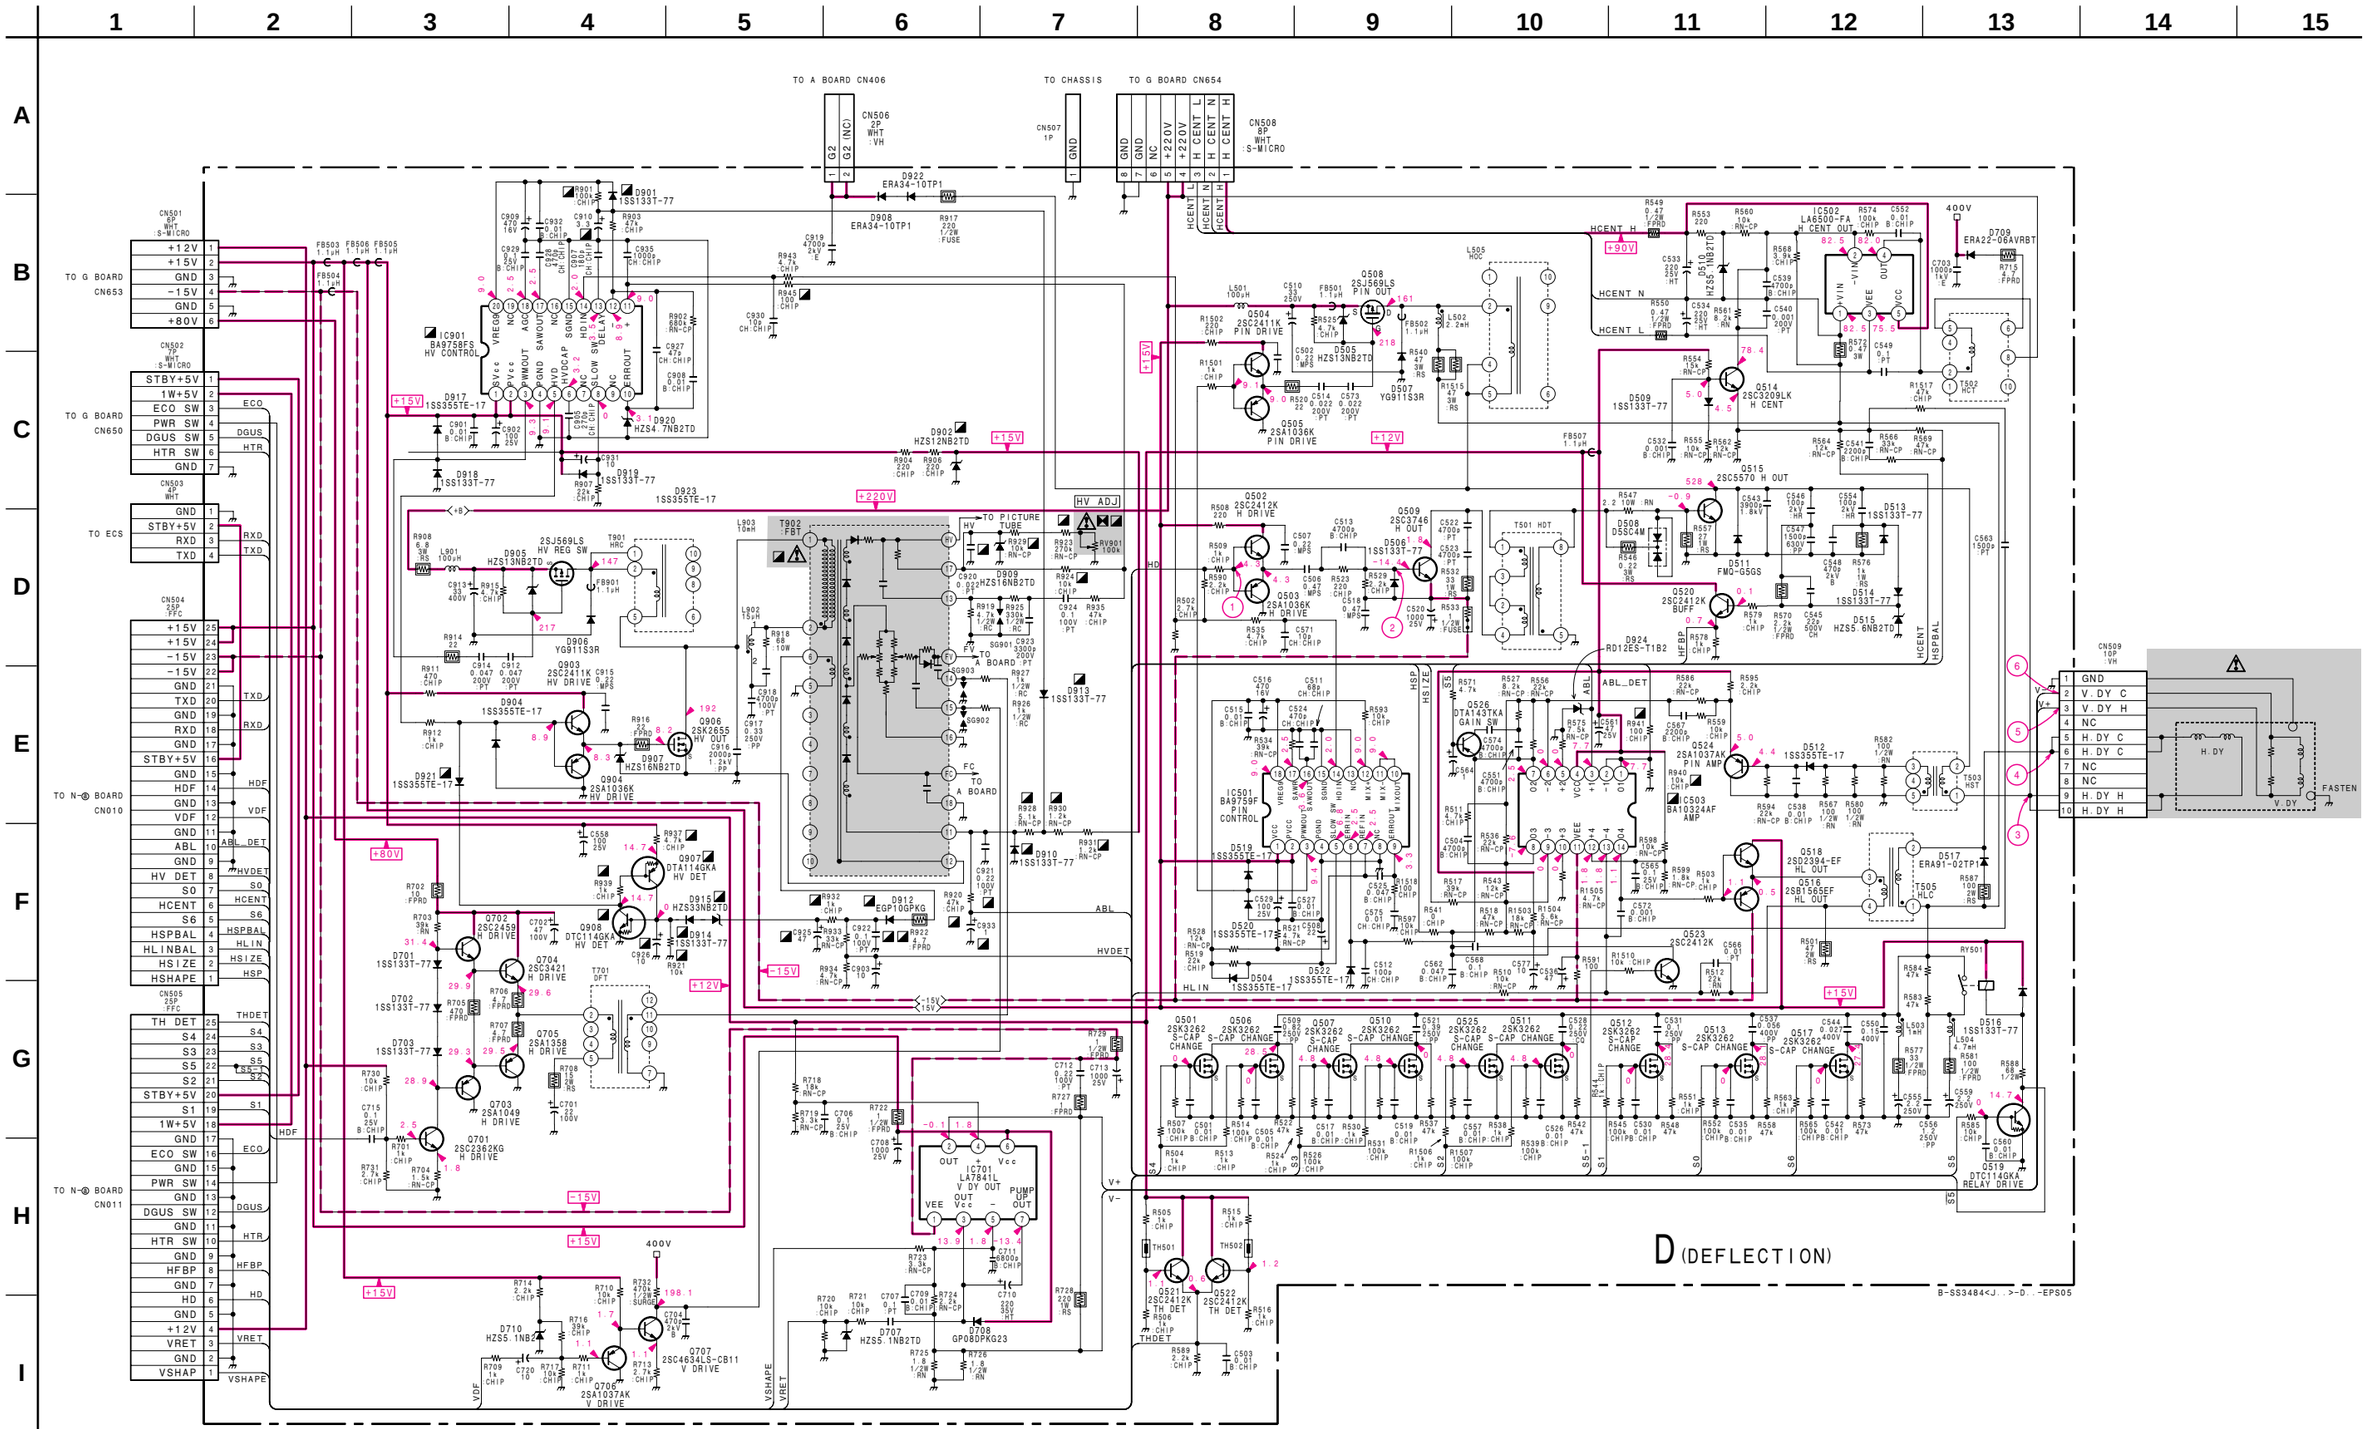

Schematic diagrams
← H1 J boards

Schematic diagram
D board →

• D BOARD WAVEFORMS

① 8.8 Vp-p (H)	② 1.9 Vp-p (H)	③ 568 Vp-p (H)
④ 50.6 Vp-p (H)	⑤ 54.5 Vp-p (H)	⑥ 2.1 Vp-p (H)

• D BOARD SEMICONDUCTOR LOCATION

IC		
IC501	C-4	
IC502	A-1	
IC503	C-4	
IC701	A-5	
IC901	C-1	

TRANSISTOR		
		*
Q501	B-5	-
Q502	A-4	①
Q503	A-4	①
Q504	C-4	①
Q505	D-4	①
Q506	B-5	-
Q507	C-5	-
Q508	A-2	-
Q509	A-4	-
Q510	C-5	-
Q511	C-5	-
Q512	C-5	-
Q513	C-5	-
Q514	B-2	-
Q515	A-3	-
Q516	B-4	-
Q517	D-5	-
Q518	B-4	-
Q519	D-4	①
Q520	B-5	①
Q521	B-5	①
Q522	C-5	①
Q524	B-3	①
Q525	C-5	-
Q526	C-4	①
Q701	D-4	-
Q702	D-3	-
Q703	D-4	-
Q704	D-3	-
Q705	D-4	-
Q706	D-3	①
Q707	D-3	-
Q903	B-3	①
Q904	C-3	①
Q905	C-3	-
Q906	C-3	-
Q907	B-2	①
Q908	B-2	①

DIODE		
		*
D504	D-4	③
D505	A-1	-
D506	A-4	-
D507	A-2	-
D508	A-3	-
D509	B-2	-
D510	A-1	-
D511	A-2	-
D512	B-3	③
D513	B-2	-
D514	B-3	-
D515	B-2	-
D516	B-4	-
D517	B-3	-
D519	C-4	③
D520	D-4	③
D522	C-4	③
D701	D-4	-
D702	D-4	-
D703	D-4	-
D707	A-5	-
D708	A-5	-
D709	B-2	-
D710	D-3	-
D901	B-1	-
D902	B-2	-
D904	B-3	③
D905	C-3	-
D906	C-3	-
D907	B-3	-
D908	C-3	-
D909	C-1	-
D910	C-2	-
D912	C-2	-
D913	B-1	-
D914	C-2	-
D915	C-2	-
D917	B-2	③
D918	B-1	-
D919	B-1	-
D920	B-1	-
D921	B-2	③
D922	C-3	-
D924	C-4	③

VARIABLE RESISTOR	
RV901	B-1

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

— D BOARD —

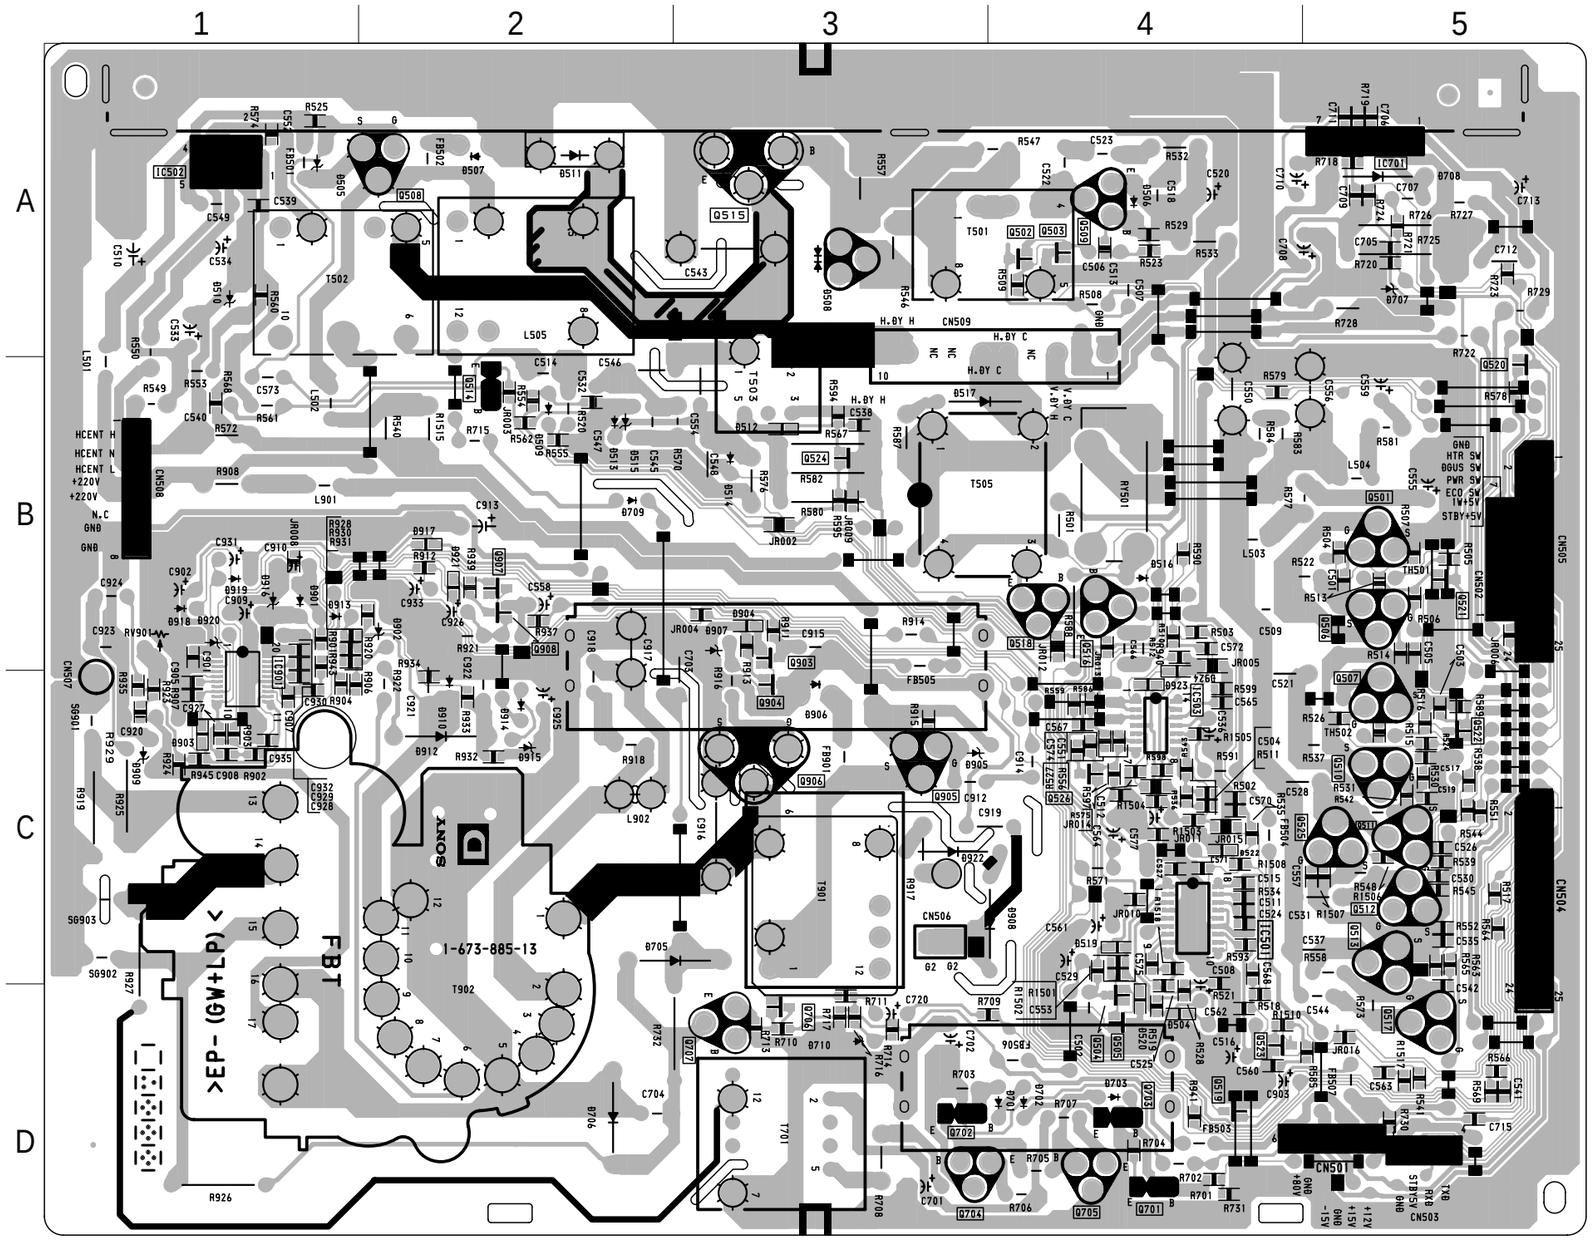

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

(4) Schematic Diagrams of N (ⓐ, ⓑ, ⓒ) Board

- Divided circuit diagram
  One sheet of N board circuit diagram is divided into three sheets, each having the code N-ⓐ to N-ⓒ. For example, the destination ab1 on the code N-ⓐ sheet is connected to ab1 on the N-ⓑ sheet.



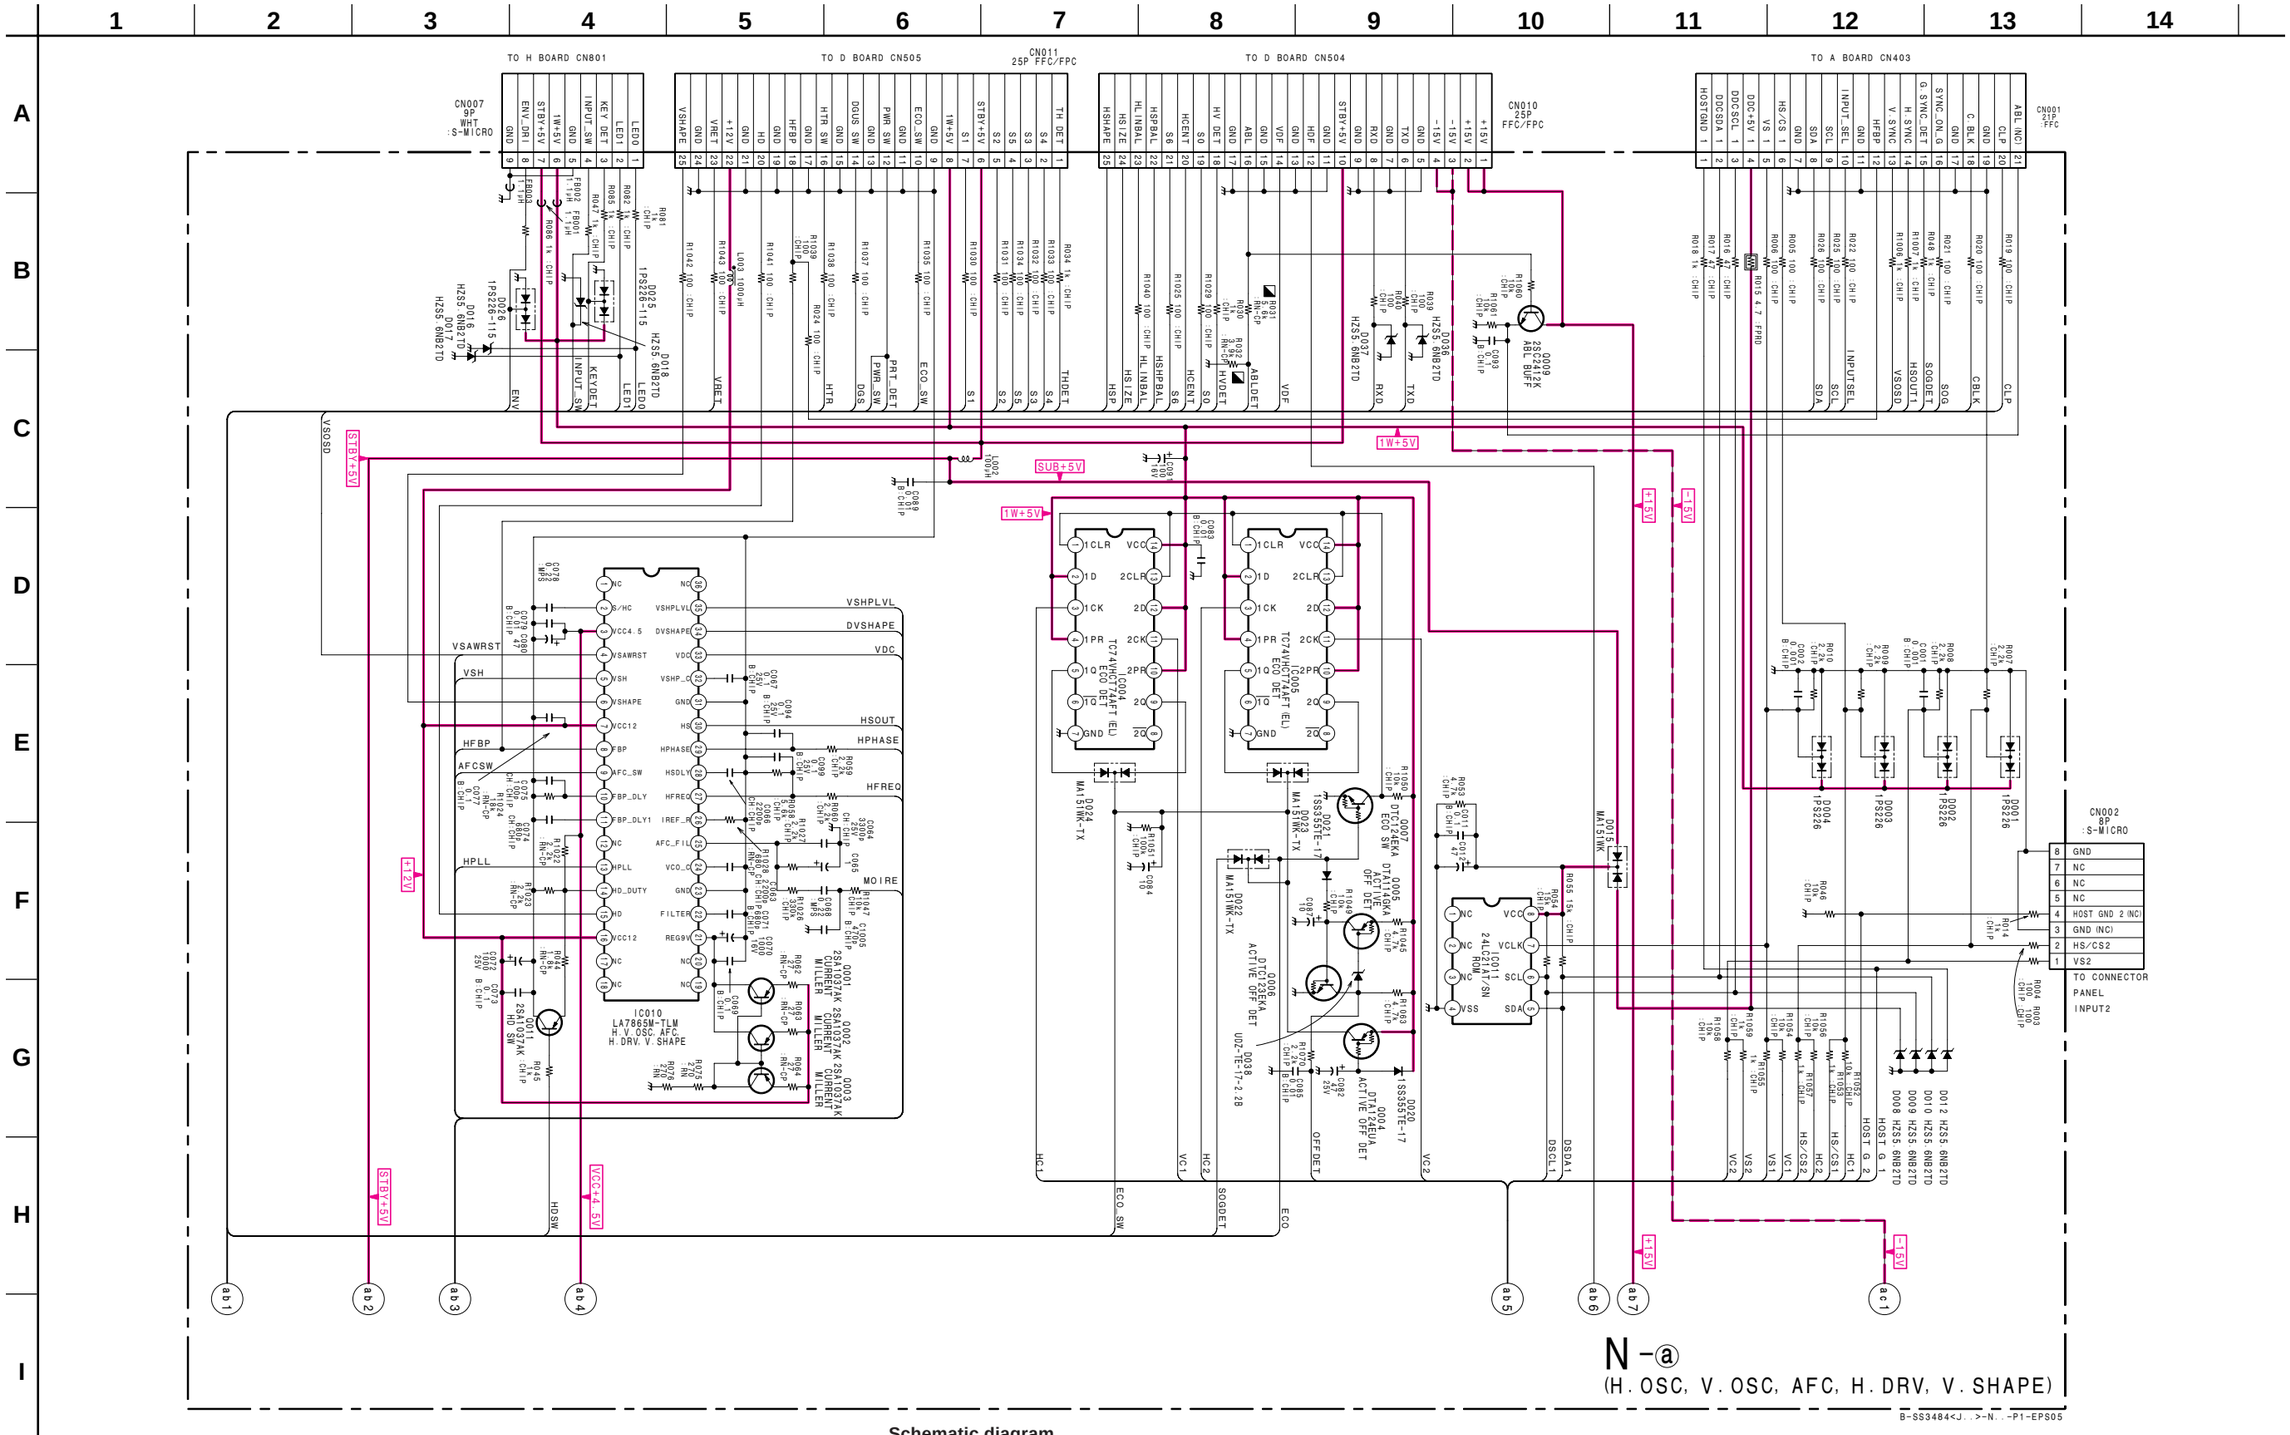

Schematic diagram

N-ⓐ board ➡

N-ⓑ

(μ-COM, GEO MAGNETIC SENSOR)

IC001
CXD8744Q
CPU/DSP

IC006
TL082CPS-E20
ABL DET AMP

IC003
M24128-BRMN6
2K EEPROM

IC004
MM1078BFB
WDT

GS5001
GEOMAGNETIC SENSOR

Q008
DTC114GKAT146
SW

Q010
2SA1037AK
INV.

Q012
DTC124EKA
INV.

D013
HZS10NBTD

D018
HZS5.1NBTD

D027
ISS355TE-17

D028
ISS355TE-17

STBY+5V

+15V

VCC+4.5V

MOIRE

MOIREPLS

VDC

VSHPLVL

DVSHAPE

HPHASE

HFREQ

HFBP

SOG

VS2

HS/CS2

VS1

HS/CS1

HSOUT

AFCSW

HPLL

VSH

VSAMRST

HSHPBAL

VDF

VCONV

HSP

HSIZE

HCENT

ROTATION

HLINBAL

HCONV

LCCNS

LCCLT

LCCRT

LCCLB

LCCRB

MOIRECONT

OFFDET

ENV

KEYDET

TEMP

INPUTSEL

EEPMC

DSDA1

DSCL1

TXD

RXD

SDA

SCL

S6

S5

S3

S2

S4

S1

S0

CLP

CBLK

LED0

LED1

HDSW

EOO

INPUT_SW

PRT_DET

VX

VY

HVDET

THDET

ABLDET

HTR

PWR_SW

DGS

VRET

HSOUT1

HPHASESEL

CLPBLV

MOIREPLS

RESET

VDD

GND

SCL

SDA

P80

P81

P82

P83

P84

P85

P86

P87

P90

P91

P92

P93

P94

P95

P96

P97

P00

P01

P02

P03

P04

P05

P06

P07

P10

P11

P12

P13

P14

P15

P16

P17

P20

P21

P22

P23

P24

P25

P26

P27

P30

P31

P32

P33

P34

P35

P36

P37

P40

P41

P42

P43

P44

P45

P46

P47

P50

P51

P52

P53

P54

P55

P56

P57

P60

P61

P62

P63

P64

P65

P66

P67

P70

P71

P72

P73

P74

P75

P76

P77

AIN0

AIN1

AIN2

AIN3

AIN4

AIN5

AIN6

AIN7

AIN8

AIN9

AIN10

AIN11

AIN12

AIN13

AVDD1

AVDD2

AVSS1

AVSS2

DAC0

DAC1

GND4

GND5

OSCVDD

OSCVSS

XTO

XTB

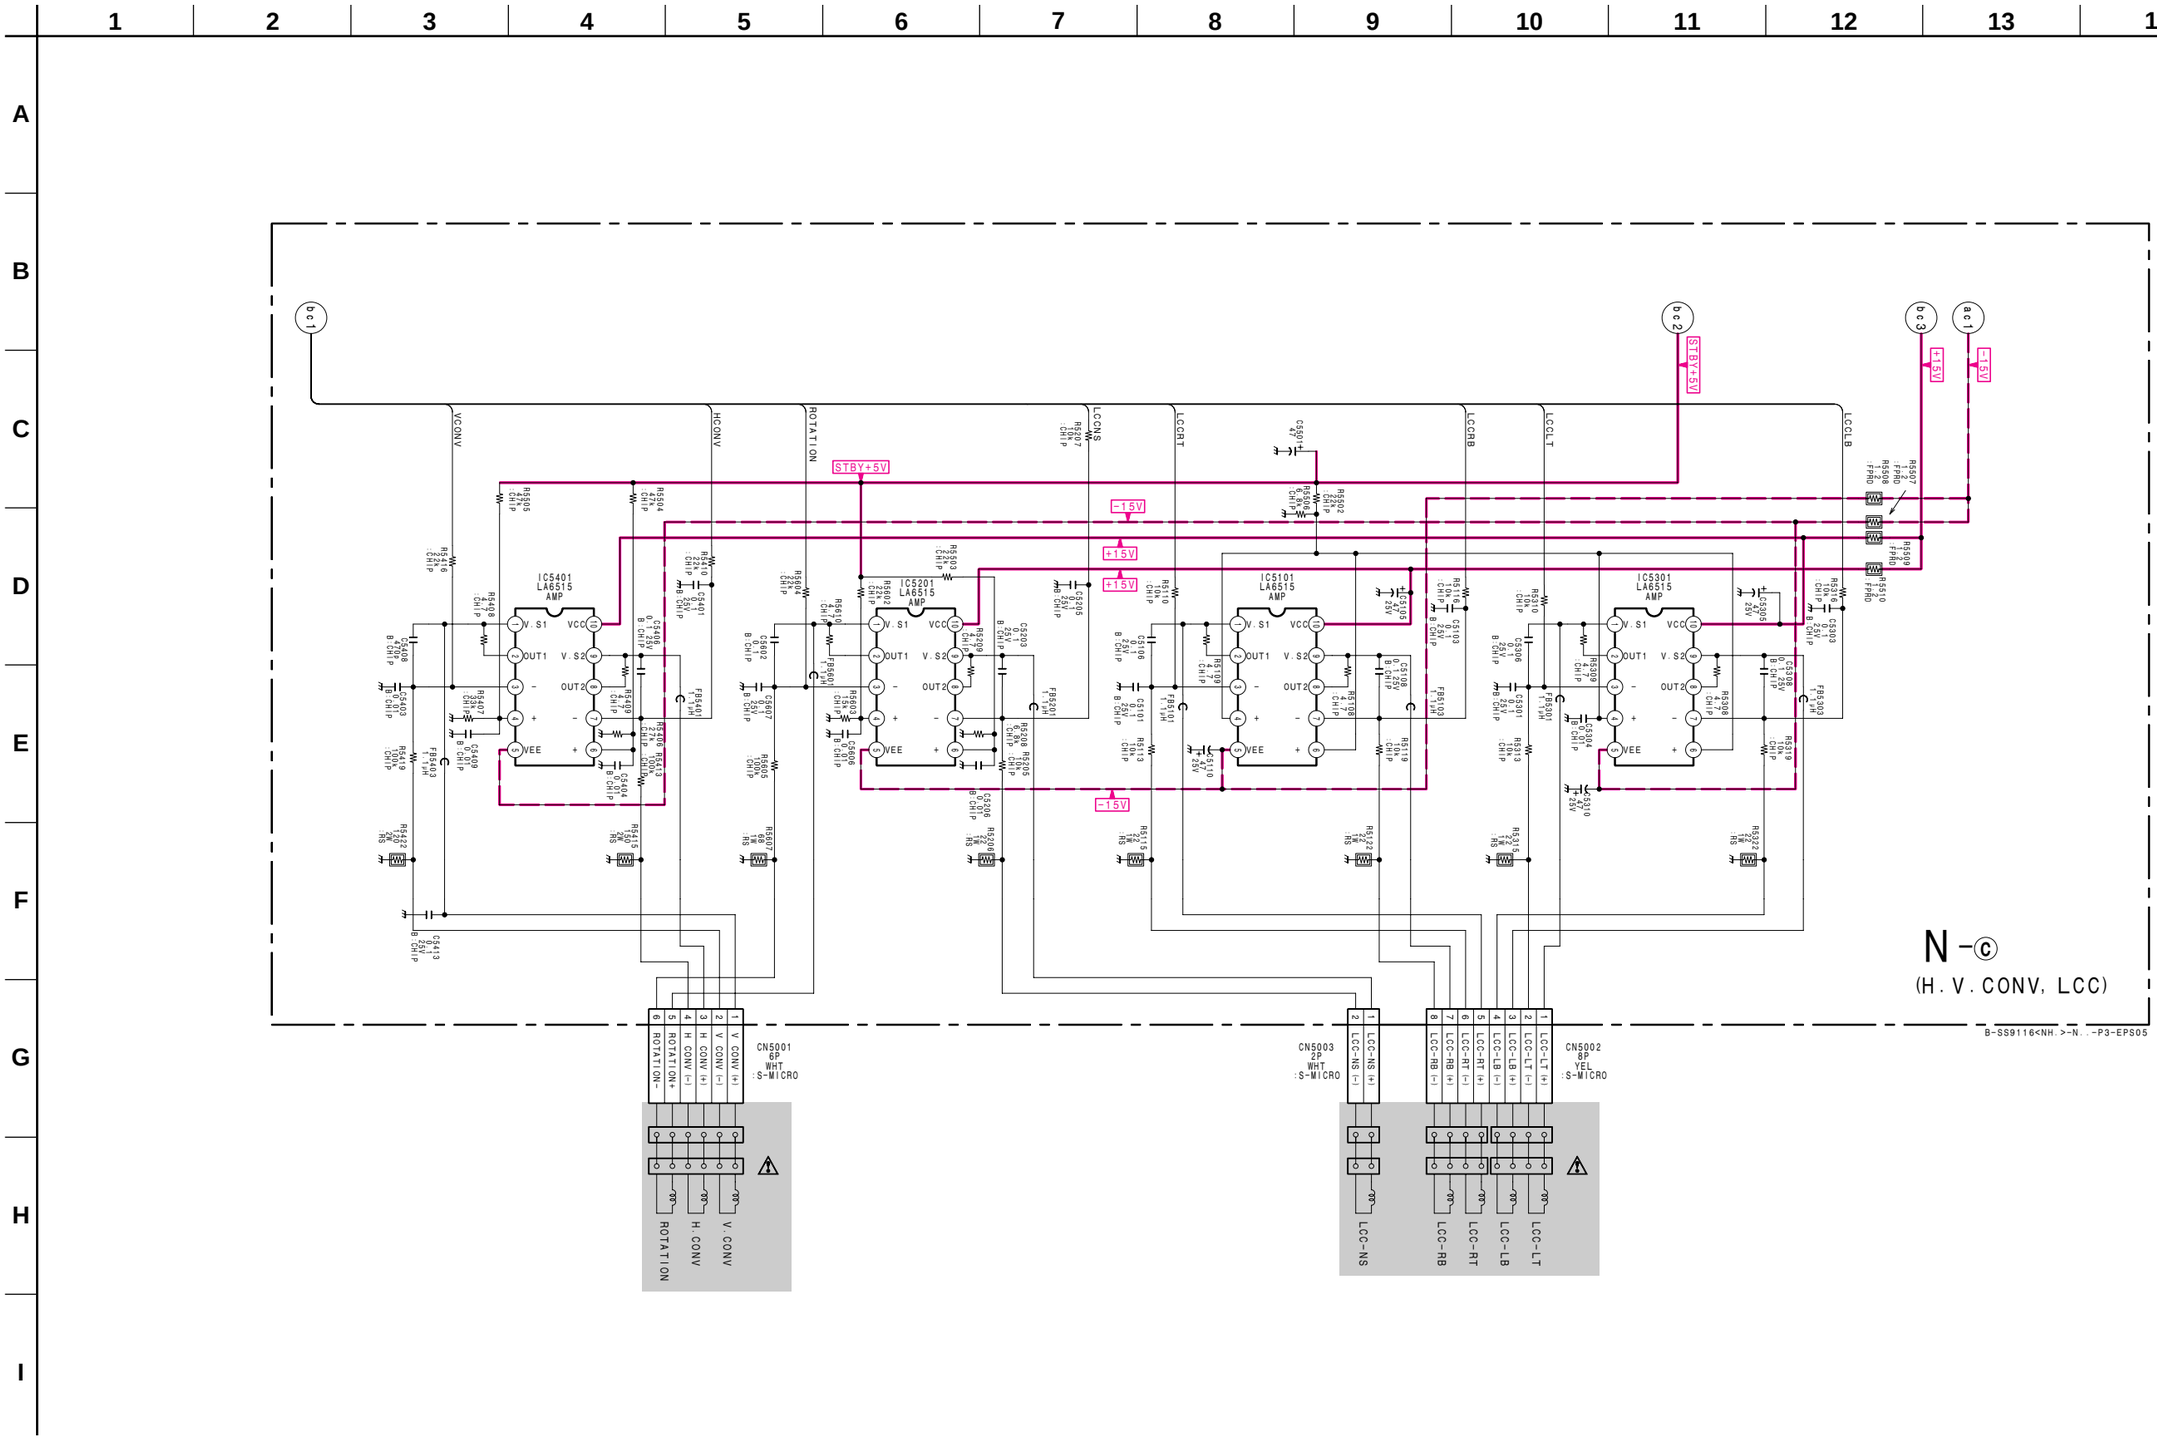

Schematic diagram

← N -ⓑ board

Schematic diagram

N -ⓒ board →

N [µ-COM, V.CONV, H.CONV, LCC, GEO MAGNETIC SENSOR]

— N BOARD (Conductor Side) —

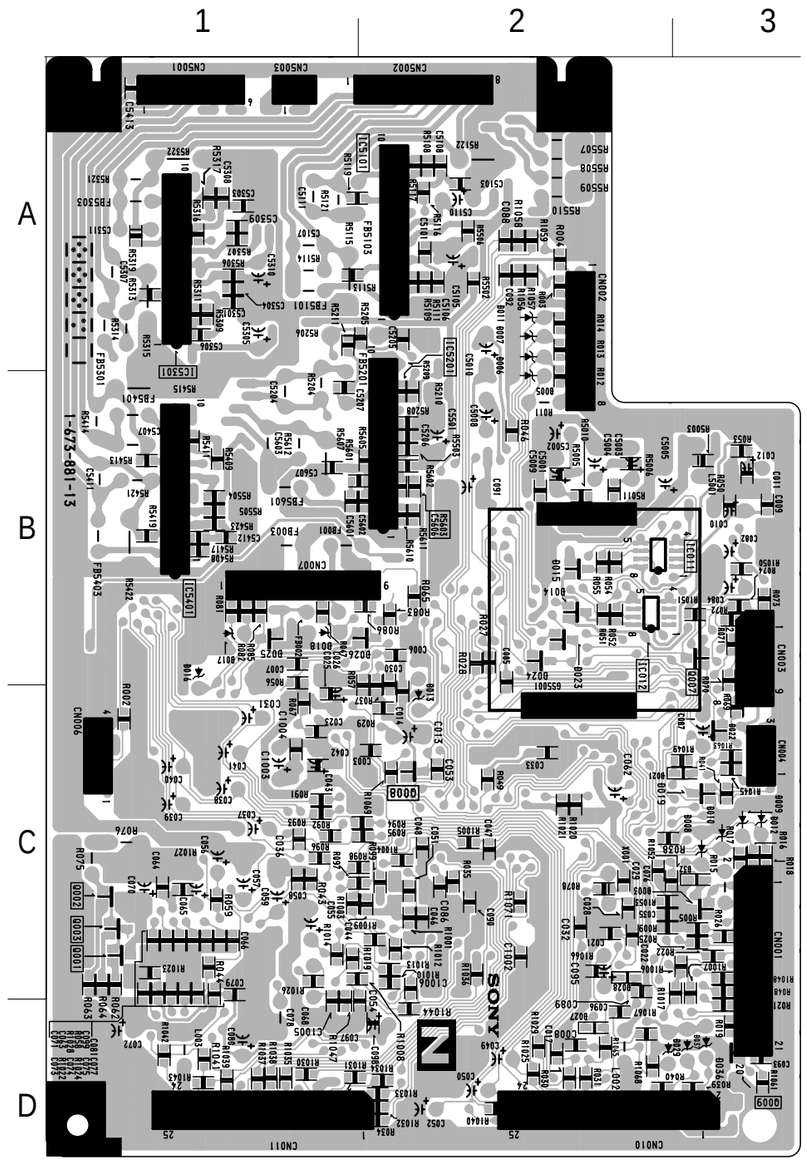

• N BOARD SEMICONDUCTOR LOCATION

IC

	(Conductor Side)	(Component Side)
IC001		C-2
IC002		C-2
IC003		C-2
IC004		B-2
IC005		B-2
IC006		D-1
IC010		C-2
IC011	B-2	
IC5101	A-2	A-2
IC5201	B-2	B-2
IC5301	A-1	A-2
IC5401	B-1	B-2

TRANSISTOR

	(Conductor Side)	(Component Side)	*
Q001	C-1		①
Q002	C-1		①
Q003	C-1		①
Q004		B-1	②
Q005		C-1	②
Q006		C-1	②
Q007	B-3		①
Q008	C-2		①
Q009	D-3		①
Q010		C-1	①
Q011		C-2	②
Q012		D-2	②

DIODE

	(Conductor Side)	(Component Side)	*
D001		A-1	⑦
D002		A-1	⑦
D003	C-3		⑥
D004		C-1	⑦
D008	C-3	C-1	–
D009	C-3	C-1	–
D010	C-3	C-1	–
D012	C-3	C-1	–
D013	C-2	C-2	–
D015	B-2		⑧
D016	B-1	B-2	–
D017	B-1	B-2	–
D018	B-1	B-2	–
D020		B-1	③
D021	C-3		③
D022	C-3		⑥
D023	B-2		⑧
D024	B-2		⑧
D025	B-1		⑥
D026	B-2		⑥
D027	D-2		③
D028	D-2		③
D029	D-3	D-1	–
D036	D-3	D-1	–
D037	D-3	D-1	–
D038		C-1	③

CRYSTAL

	(Conductor Side)	(Component Side)
X001	C-2	C-1

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

— N BOARD (Component Side) —

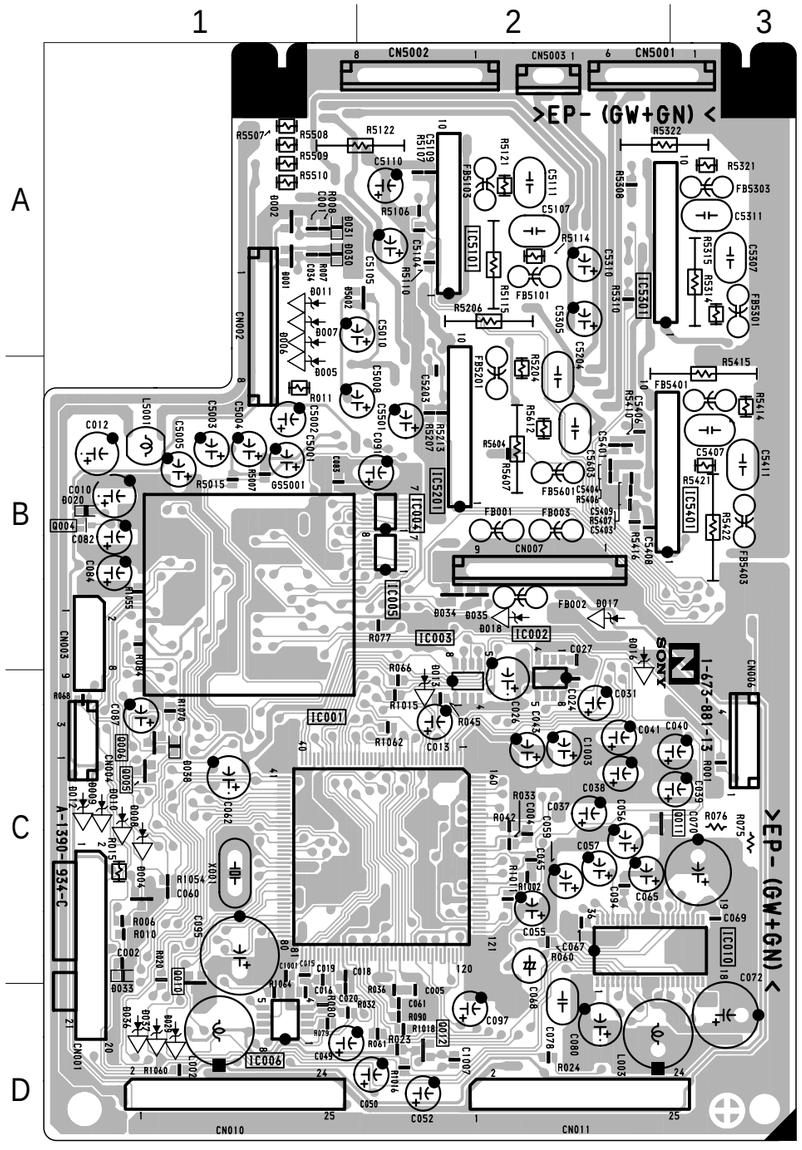

(5) Schematic Diagram of G Board

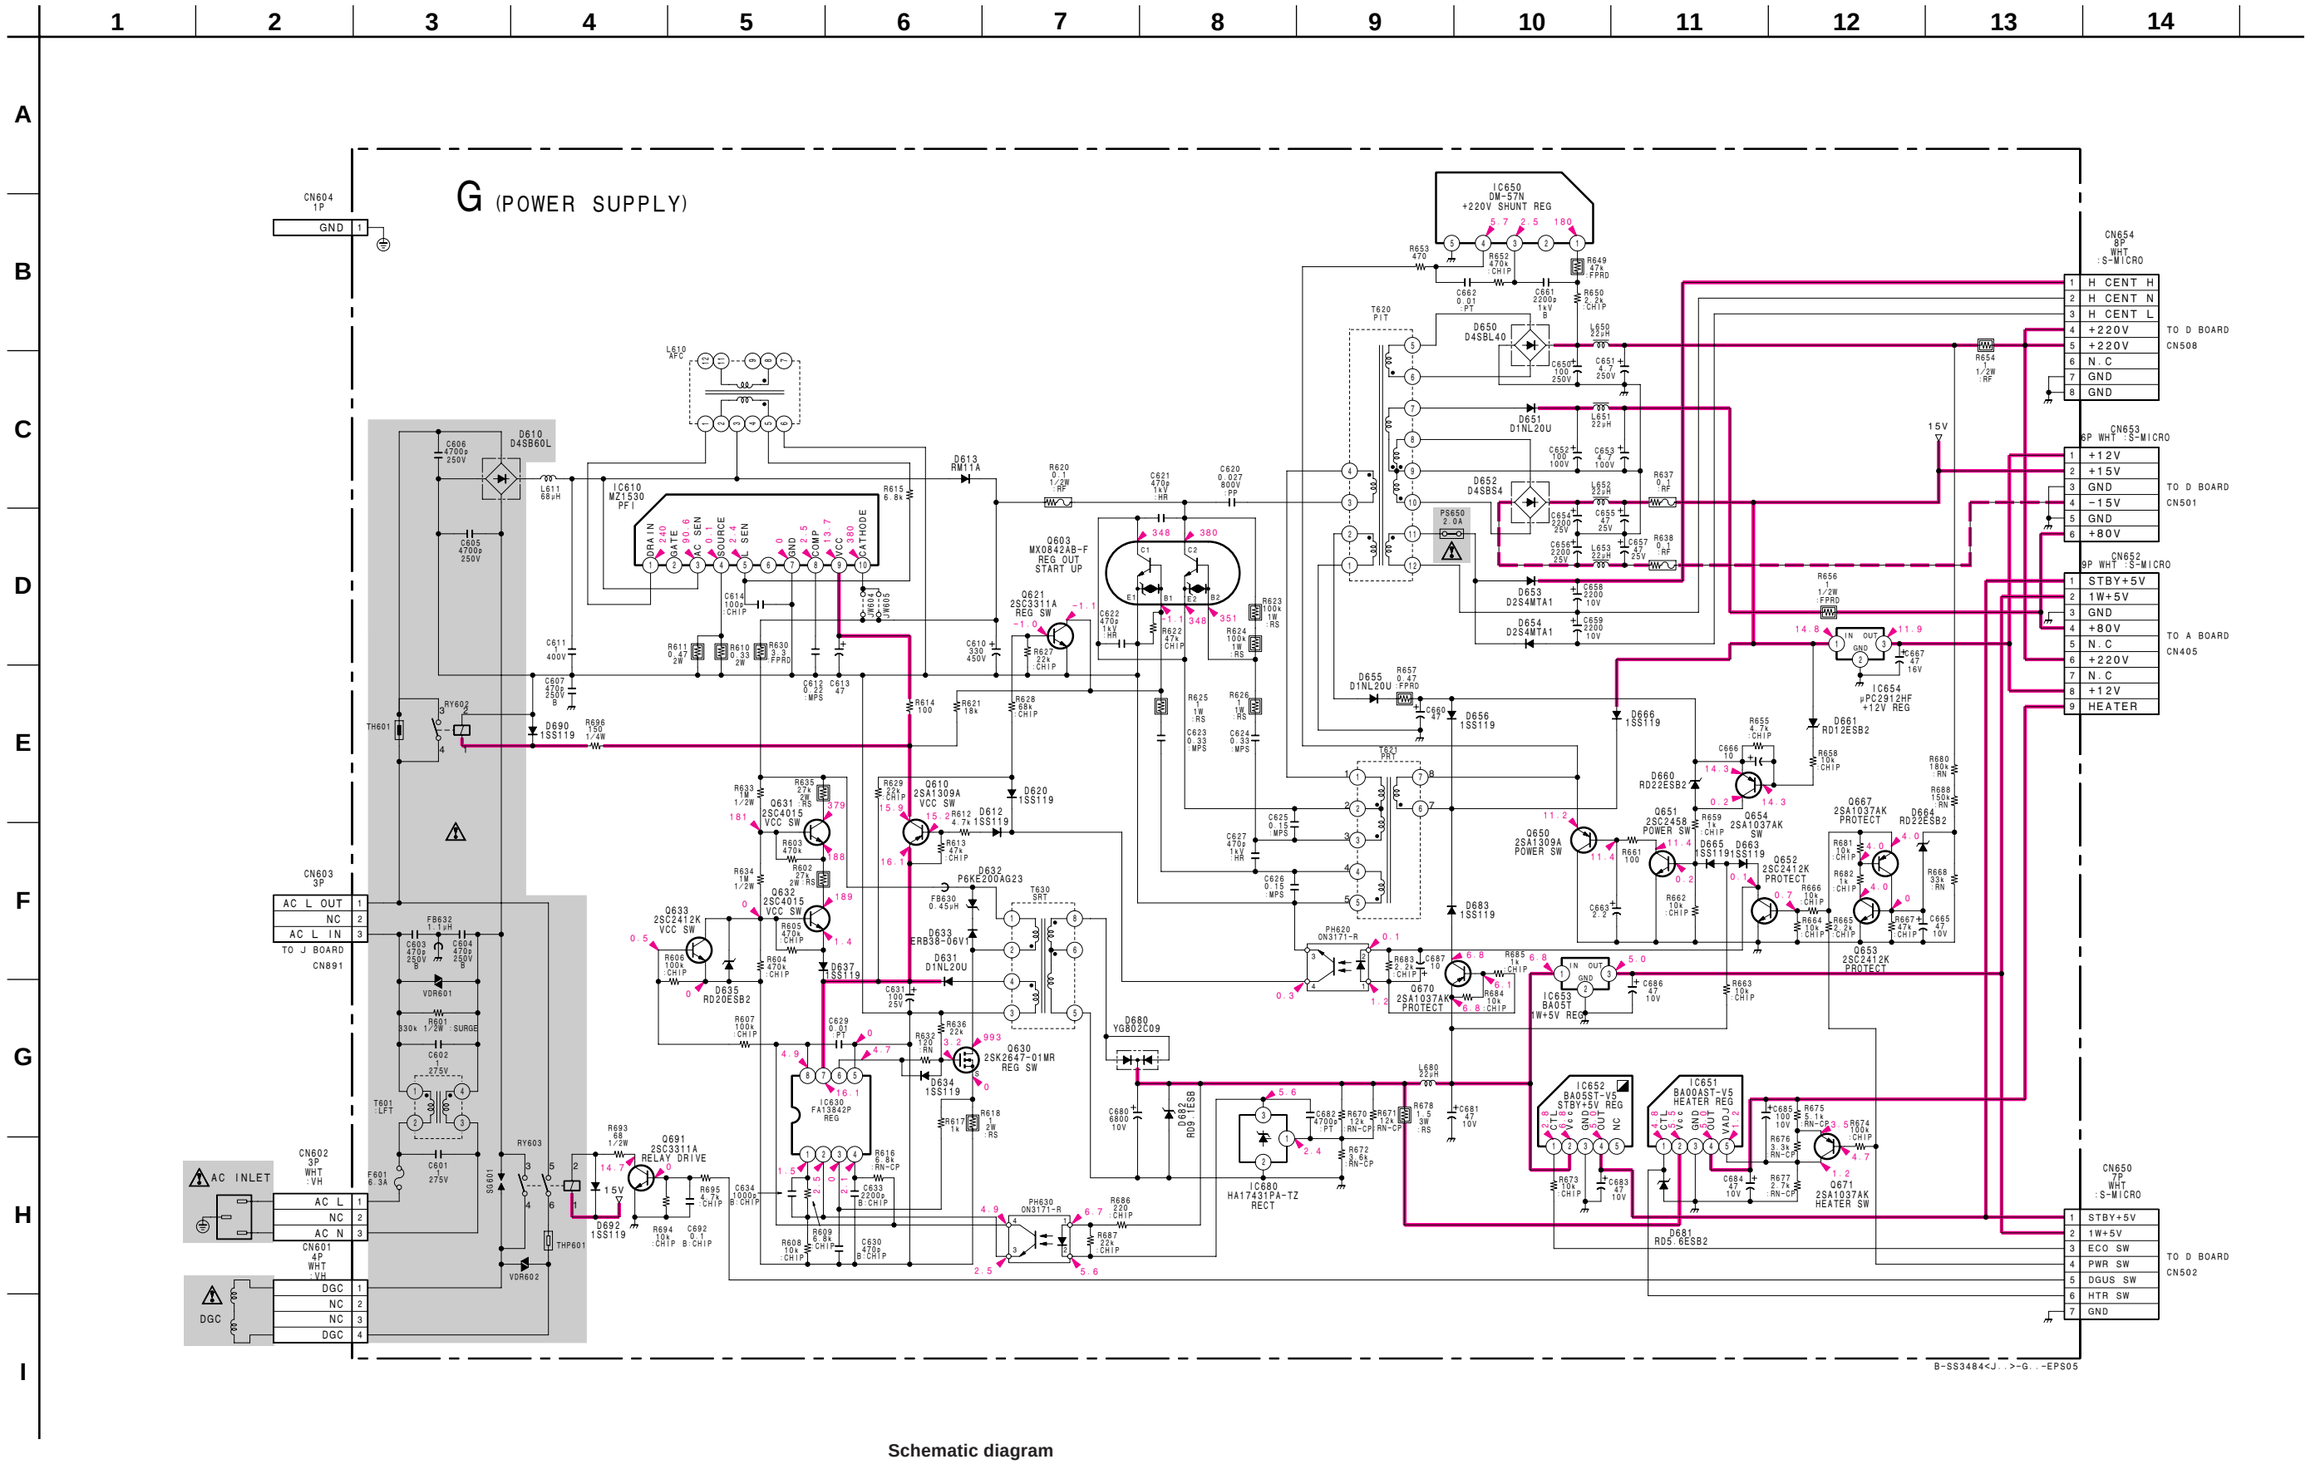

Schematic diagram

G board ➡

G ［POWER SUPPLY］

— G BOARD —

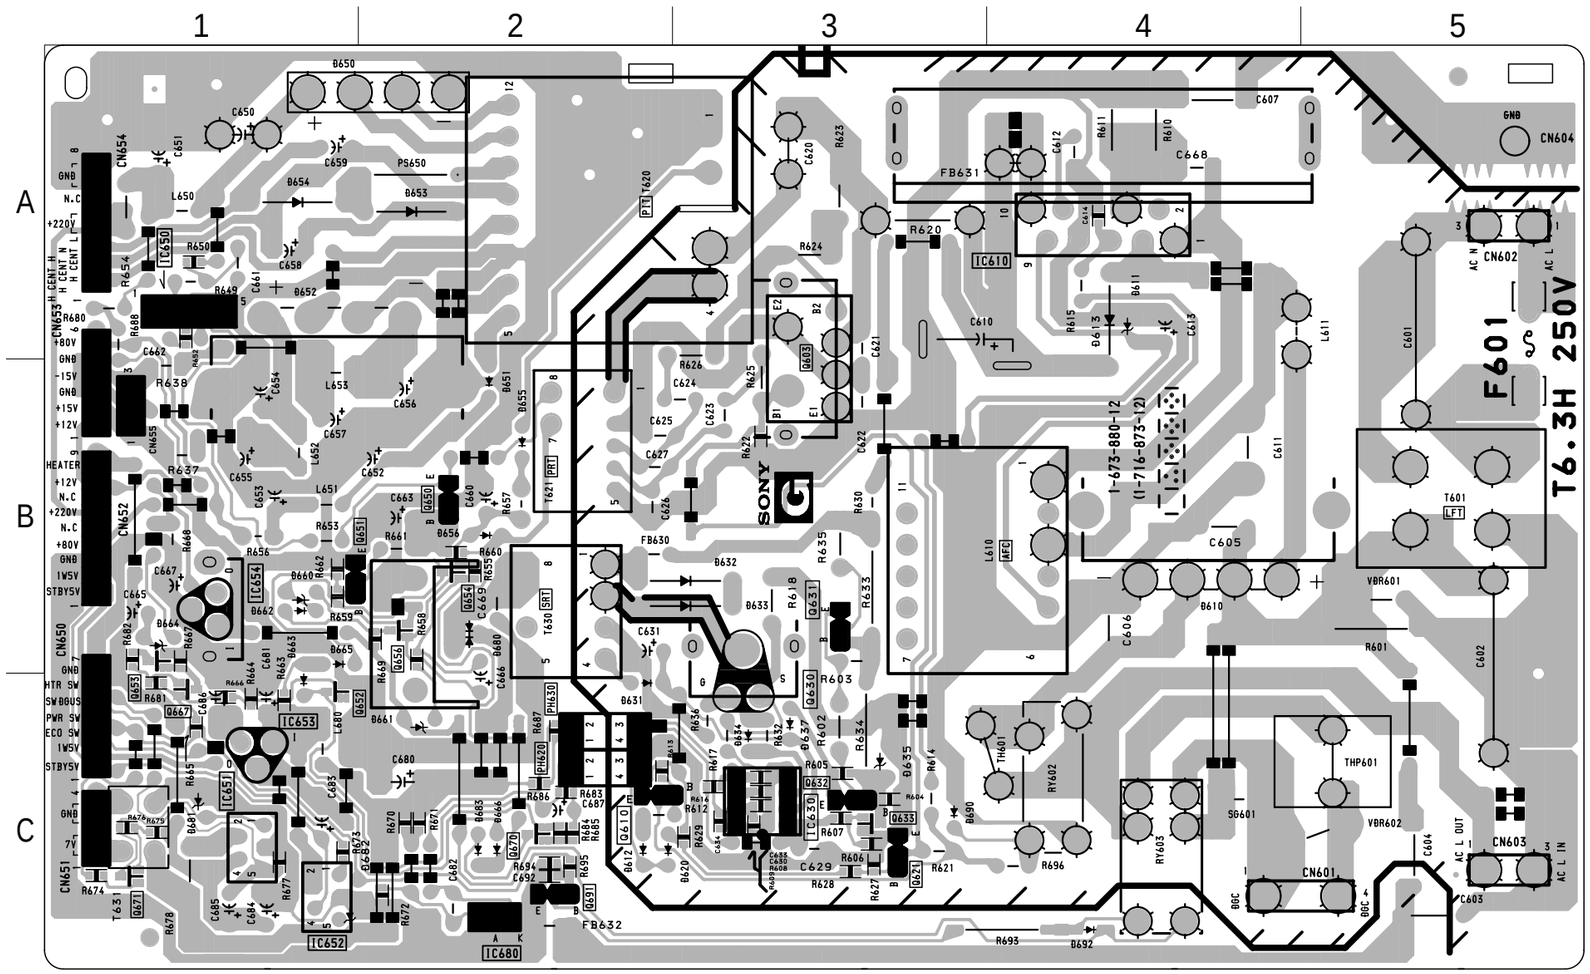

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

- **G BOARD SEMICONDUCTOR LOCATION**

IC		
IC610	A-4	
IC630	C-3	
IC650	A-1	
IC651	C-1	
IC652	C-1	
IC653	C-1	
IC654	B-1	
IC680	C-2	
TRANSISTOR		
		*
Q603	A-3	-
Q610	C-2	-
Q621	C-3	-
Q630	C-3	-
Q631	B-3	-
Q632	C-3	-
Q633	C-3	①
Q650	B-2	-
Q651	B-1	-
Q652	C-1	①
Q653	B-1	①
Q654	B-2	①
Q667	C-1	①
Q670	C-2	①
Q671	C-1	①
Q691	C-2	-
DIODE		
D610	B-4	
D612	C-2	
D613	A-4	
D620	C-2	
D631	C-2	
D632	B-3	
D633	B-3	
D634	C-3	
D635	C-3	
D637	C-3	
D650	A-2	
D651	B-2	
D652	A-1	
D653	A-2	
D654	A-1	
D655	B-2	
D656	B-2	
D660	B-1	
D661	C-2	
D663	C-1	
D664	B-1	
D665	B-1	
D666	C-2	
D680	B-2	
D681	C-1	
D682	C-1	
D683	C-2	
D690	C-3	
D692	C-4	

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

5-5. SEMICONDUCTORS

BA00AST-V5
BA05ST-V5
LA6500-FA



BA05T



BA10324AF-E2
SN74HC04ANS
SN74HC04ANSR
TC74VHCT74AFT(EL)
XRA10324AF

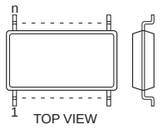

14pin SOP

NJM2904M
NJM2904M(TE2)
TL082CPS-E20
TL082M
24LC21AT/SN

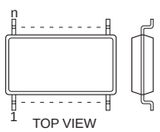

8pin SOP

BA9758FS-E2

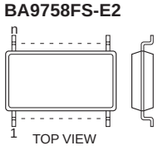

20pin SOP

BA9759F-E2

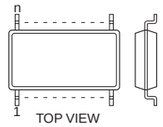

18pin SOP

CXD8744Q

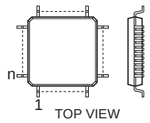

160pin QFP

CXD9514M

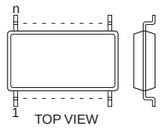

28pin SOP

DM-57N

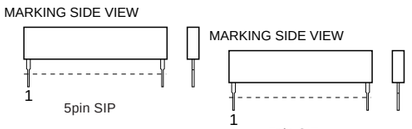

5pin SIP 7pin SIP

FA13842P
M24C16-MN6T
MM1170BFB



8pin DIP

FA4301

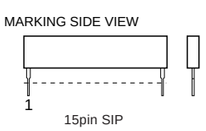

15pin SIP

HA17431PA
HA17431PA-TZ



H8D2972

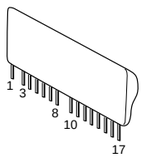

LA6515



10pin SIP

LA7841L

LA7865M-TLM

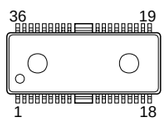

MZ1530

M52749FP-TP

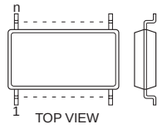

42pin SOP

M52757FP-TP

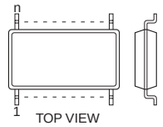

36pin SOP

µPC2912HF (12)



DTA114GKAT146
DTA114TUA-T106
DTA124EUA-T106
DTC114GKA
DTC114GKAT146
DTC124EK
DTC124EKA-T146
2SA1036K-Q
2SA1036K-T-146-Q
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1162-G
2SB709A-QRS-TX
2SC1623-L5L6
2SC2411K-CQ
2SC2411K-T-146-CQ
2SC2412K-T-146-QR

DTA124ESA
DTA124ESA-TP
2SA1175-HFE
2SA1309A-QRSTA
2SC2459-GR-TPE4
2SC2784
2SC2785-HFE
2SC3311A-QRSTA



MX0842AB-F



2SA1049-GR
2SA1049TP-GR
2SC2458-YGR
2SC2458TP-YGR



2SA1358-Y
2SC3421-Y



2SB1565EF
2SC3746
2SC5022-02



2SC2362K-G
2SC2362KG-AA



2SC3209LK
2SC3209LK-TP



2SC4015TV2



2SC5570(LBSONY)



2SD2394-EF



2SJ569LS-CB11
2SK2655-01R-F165
2SK3262-01MR-F119



2SK2103T100



2SK2647-01MR-F91



D1NL20U-TR
D2S4MF
D2S4MTA1

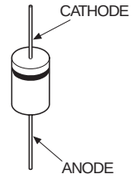

D4SB60L
D4SBL40
D4SBS4
D4SBS4-F

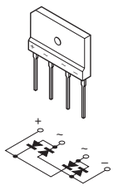

D5SC4M
MA151WK-TX
1SS184



EGP10D
EGP10GPKG23
ERA91-02
ERA91-02TP1

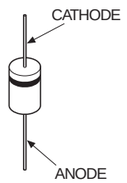

ERA22-06AVRBT
ERA22-08
ERA34-10TP1
ERB38-06V1
GP08D
GP08DPKG23
HSS83TD
P6KE200AG23
RD2.2M-T1B
RGP02-20EL-6394

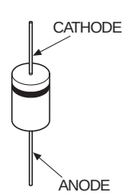

FMQ-G5GS



HSU83TRF

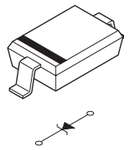

HZS10NB2TD
HZS12NB2TD
HZS13NB2TD
HZS16NB2TD
HZS33NB2
HZS33NB2TD
HZS4.7NB2
HZS4.7NB2TD
HZS5.1NB2TD
HZS5.6NB2TD
MTZJ-T-77-39B
MTZJ-39B
RD10ESB2
RD12ES-B2
RD12ES-T1B2
RD13ES-B2
RD20ES-B2
RD20ES-T1B2
RD22ES-B2
RD22ES-T1B2
RD5.1ESB2
RD5.6ES-T1B2
RD5.6ESB2
RD6.8ES-B2
1SS119-25
1SS119-25TD
1SS133T-77

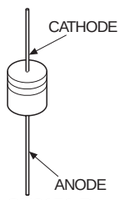

ON3171-R



RD9.1ES-L2
RD9.1ES-T1B



RM11A
RM11C

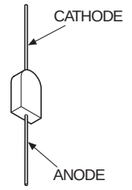

SPR-325MVW

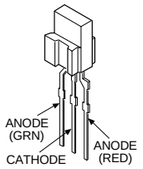

YG802C09



YG911S3R

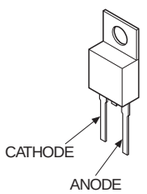

1PS181-115



1PS226-115



1SS355TE-17

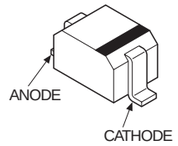

1SS376TE-17

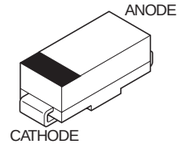

SECTION 6
EXPLODED VIEWS

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. CHASSIS

● 7-685-648-79 +BVTP 3X12
■ 7-685-663-71 +BVTP 4X16
◆ 7-685-646-79 +BVTP 3X8
△ 7-685-881-09 +BVTT 4X8

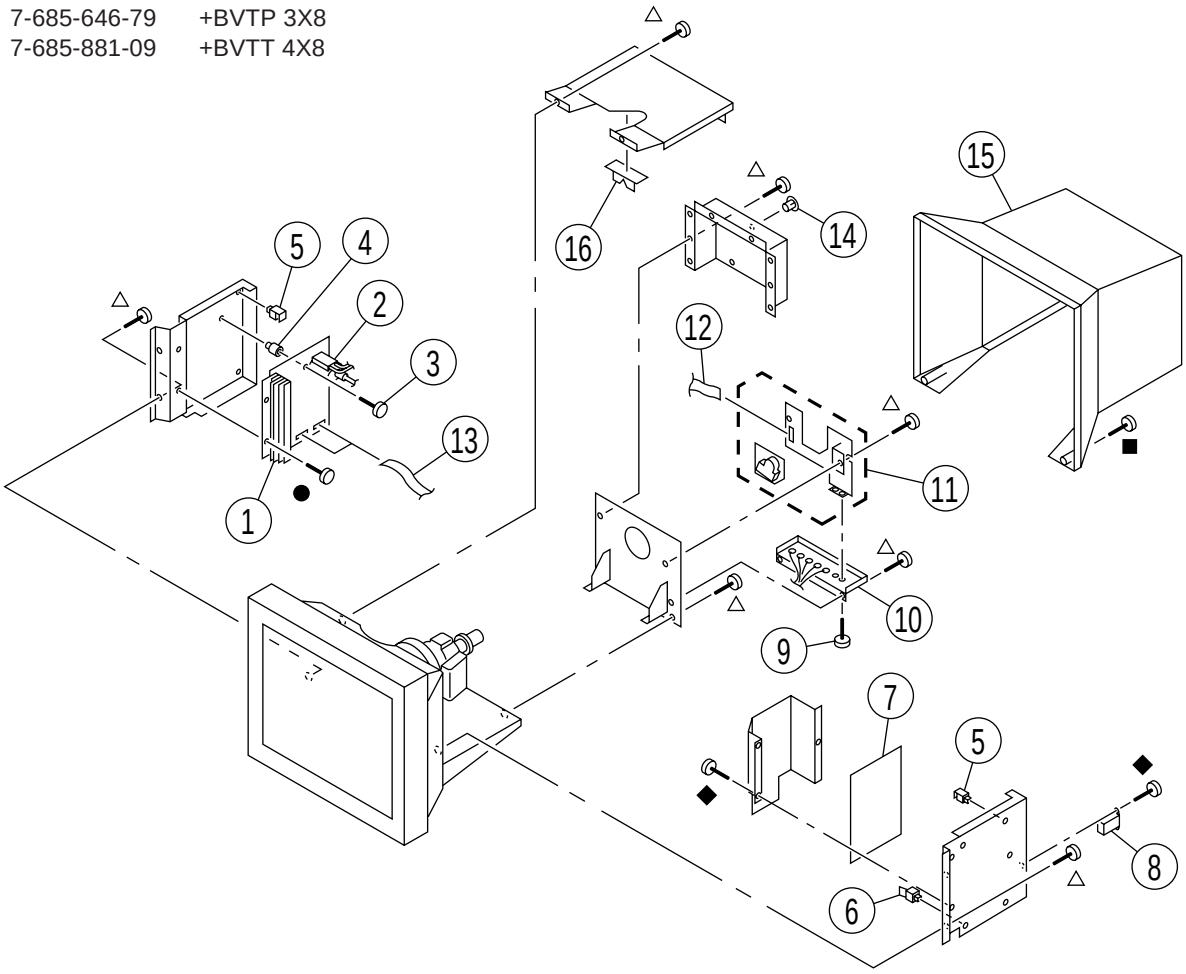

REF.NO.	PART NO.	DESCRIPTION	REMARK
1	* A-1346-827-B	D BOARD, COMPLETE	2 [U/C, AEP, SH, EQ for Japan-made set]
1	* A-1346-860-A	D BOARD, COMPLETE	2 [U/C for Mexico-made set]
1	* A-1346-859-A	D BOARD, COMPLETE	2 [AEP for UK-made set]
2	⚠ X-4560-175-1	TRANSFORMER ASSY, FLYBACK (NX4502//J1D4)	
3	4-062-115-01	SCREW +P 3.5X20 TYPE2	
4	* 4-060-359-01	HOLDER, PRINTED CIRCUIT BOARD	
5	* 3-701-903-11	HOLDER, PRINTED CIRCUIT BOARD	
6	4-070-730-01	HOLDER, PRINTED CIRCUIT BOARD	
7	* A-1316-443-B	G BOARD, COMPLETE	[U/C, AEP, SH, EQ for Japan-made set]
7	* A-1316-481-A	G BOARD, COMPLETE	[U/C for Mexico-made set]
7	* A-1316-480-A	G BOARD, COMPLETE	[AEP for UK-made set]
8	⚠ 1-251-382-31	INLET, AC 3P (WITH NOISE FILTER)	
9	4-070-122-01	SCREW (HD15)	
10	1-694-569-11	TERMINAL BOARD ASSY, I/O	
11	* A-1298-874-D	A BOARD, COMPLETE	[U/C, AEP, SH, EQ for Japan-made set]
11	* A-1298-992-A	A BOARD, COMPLETE	[U/C for Mexico-made set]
11	* A-1298-988-A	A BOARD, COMPLETE	[AEP for UK-made set]
12	1-900-246-08	CONNECTOR ASSY (F)	
13	1-900-246-07	CONNECTOR ASSY (F)	
14	* 4-069-570-01	SPACER, PRINTED CIRCUIT BOARD	
15	4-071-116-01	CABINET	[U/C, AEP, SH, EQ for Japan-made set]
15	4-071-493-01	CABINET	[U/C for Mexico-made set]
15	4-071-452-01	CABINET	[AEP for UK-made set]
16	* 4-063-711-01	SUPPORT, HV CABLE	

6-2. PICTURE TUBE

■ 7-685-663-71 +BVTP 4X16
△ 7-685-881-09 +BVTT 4X8

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

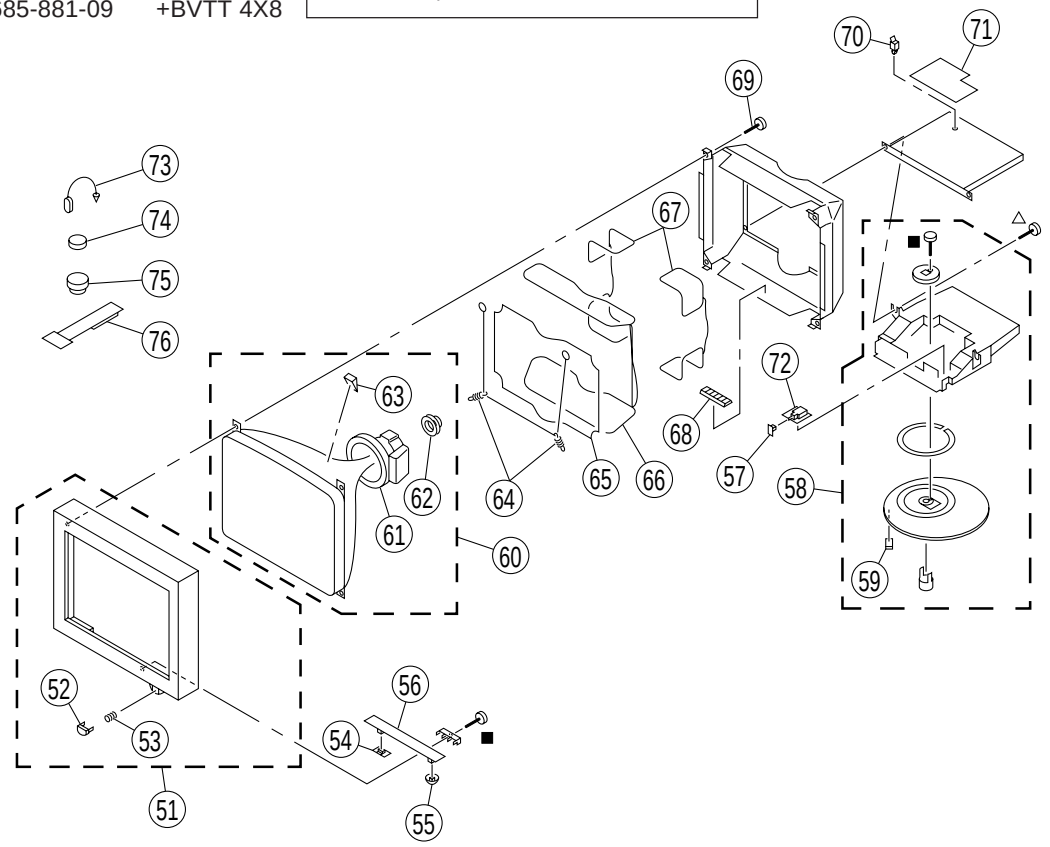

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-4036-843-1	BEZEL ASSY	52, 53
		[U/C, AEP, SH, EQ for Japan-made set]	
51	X-4036-928-1	BEZEL ASSY	52, 53
		[U/C for Mexico-made set]	
51	X-4036-914-1	BEZEL ASSY	52, 53
		[AEP for UK-made set]	
52	4-070-660-01	BUTTON, POWER	
		[U/C, AEP, SH, EQ for Japan-made set]	
52	4-071-152-01	BUTTON, POWER [U/C for Mexico-made set]	
52	4-204-957-01	BUTTON, POWER [AEP for UK-made set]	
53	3-635-339-01	SPRING, COMPRESSION	
		[Except U/C for Mexico-made set]	
53	3-653-339-21	SPRING, COMPRESSION	
		[U/C for Mexico-made set]	
54	4-071-112-01	SELECTION, INPUT	
		[U/C, AEP, SH, EQ for Japan-made set]	
54	4-071-489-01	SELECTOR, INPUT [U/C for Mexico-made set]	
54	4-071-453-01	KNOB, INPUT SELECTION	
		[AEP for UK-made set]	
55	4-070-665-01	BUTTON, MENU	
		[U/C, AEP, SH, EQ for Japan-made set]	
55	4-071-155-01	BUTTON, MENU [U/C for Mexico-made set]	
55	4-204-970-01	BUTTON, MENU [AEP for UK-made set]	
56	* A-1372-682-A	H1 BOARD, COMPLETE	
		[U/C, AEP, SH, EQ for Japan-made set]	
56	* A-1372-691-A	H1 BOARD, COMPLETE	
		[U/C for Mexico-made set]	
56	* A-1372-690-A	H1 BOARD, COMPLETE	
		[AEP for UK-made set]	
57	* 4-394-972-21	CAP, POWER	
58	X-4036-844-2	STAND ASSY	59

REF.NO.	PART NO.	DESCRIPTION	REMARK
59	* 4-061-996-11	CUSHION	
60	8-738-813-61	ITC ASSY (21TKC-R1) [U/C, AEP]	61-63
60	8-738-821-61	ITC ASSY (21TKC-RS1)	61-63
		[SH, EQ for Japan-made set]	
61	8-451-509-11	DEFLECTION YOKE (Y21TKM-M)	
62	⚠ 1-452-912-61	NECK ASSEMBLY (NA-2914)	
63	2-162-100-21	SPACER, DEFLECTION YOKE	
64	* 4-047-316-01	SPRING, EXTENSION	
		[Except U/C for Mexico-made set]	
64	* 4-061-573-01	SPRING, TENSION [U/C for Mexico-made set]	
65	⚠ 1-419-130-21	COIL, LANDING CORRECTION	
66	⚠ 1-419-128-21	COIL, DEGAUSSING	
67	⚠ 1-419-129-21	COIL, LANDING CORRECTION	
68	4-062-670-01	SPACER, PICTURE TUBE	
69	4-365-808-01	SCREW (5), TAPPING	
70	4-070-730-01	HOLDER, PRINTED CIRCUIT BOARD	
71	* A-1394-946-C	N BOARD, COMPLETE	
		[U/C, AEP, SH, EQ for Japan-made set]	
71	* A-1394-951-A	N BOARD, COMPLETE	
		[U/C for Mexico-made set]	
71	* A-1394-950-A	N BOARD, COMPLETE [AEP for UK-made set]	
72	* A-1388-250-A	J BOARD, COMPLETE	
		[U/C, AEP, SH, EQ for Japan-made set]	
72	* A-1388-261-A	J BOARD, COMPLETE	
		[U/C for Mexico-made set]	
72	* A-1388-260-A	J BOARD, COMPLETE [AEP for UK-made set]	
73	4-308-870-00	CLIP, LEAD WIRE	
74	1-452-032-00	MAGNET, DISK; 10mm ø	
75	1-452-094-00	MAGNET, ROTATABLE DISK; 15mm ø	
76	4-051-736-21	PIECE A(90), CONV. CORRECT	

6-3. PACKING MATERIALS

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

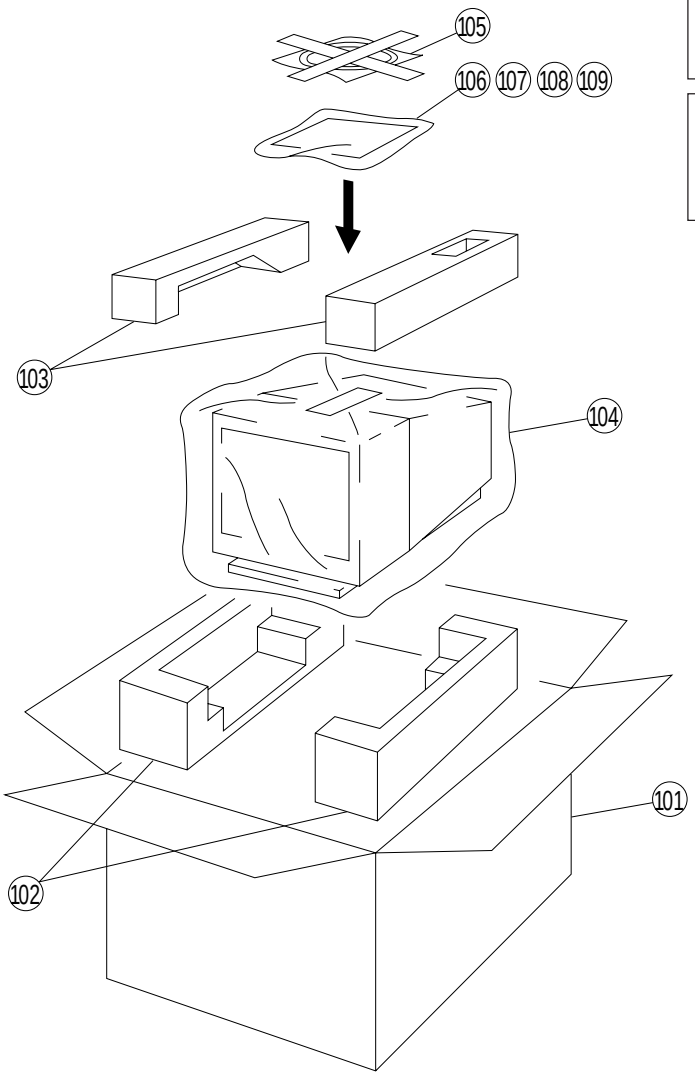

REF.NO.	PART NO.	DESCRIPTION	REMARK
101	*4-071-736-01	INDIVIDUAL CARTON	[U/C, SH, EQ for Japan-made set]
101	*4-071-779-01	INDIVIDUAL CARTON	[AEP for UK-made set]
101	*4-072-126-01	INDIVIDUAL CARTON	[AEP for Japan-made set]
101	*4-072-874-01	INDIVIDUAL CARTON	[U/C for Mexico-made set]
102	*4-071-731-01	CUSHION (LOWER) (ASSY)	[U/C, AEP, SH, EQ for Japan-made set]
102	*4-071-781-01	CUSHION (LOWER) (ASSY)	[AEP for UK-made set]
102	*4-072-876-01	CUSHION (LOWER) (ASSY)	[U/C for Mexico-made set]
103	*4-071-730-01	CUSHION (UPPER) (ASSY)	[U/C, AEP, SH, EQ for Japan-made set]
103	*4-071-780-01	CUSHION (UPPER) (ASSY)	[AEP for UK-made set]
103	*4-072-875-01	CUSHION (UPPER) (ASSY)	[U/C for Mexico-made set]
104	*4-041-927-31	BAG, POLYETHYLENE	[U/C, AEP, SH, EQ for Japan-made set]
104	*4-368-079-01	BAG, POLYETHYLENE	[AEP for UK-made set]
104	*4-047-293-01	BAG, POLYETHYLENE	[U/C for Mexico-made set]
105	1-793-504-11	CABLE ASSY	(15P DSUBX2 CONNECTOR)
106	3-867-232-12	MANUAL, INSTRUCTION	[U/C, SH, EQ for Japan-made set]
106	3-867-232-21	MANUAL, INSTRUCTION	[AEP for Japan-made set]
106	3-867-232-31	MANUAL, INSTRUCTION	[U/C for Mexico-made set]
106	3-867-232-41	MANUAL, INSTRUCTION	[AEP for UK-made set]
107	1-772-380-11	DISK, INFORMATION	
108	⚠1-785-429-11	ADAPTOR, CONVERSION for Macintosh	[Except AEP]
108	1-785-512-31	CONNECTOR, D SUB (15P CHANGER)	for Macintosh new G3 [AEP]
109	⚠1-782-783-31	CORD SET POWER [U/C]	
109	⚠1-782-784-21	CORD SET POWER [AEP, EQ]	
109	⚠1-782-785-11	CORD, AC POWER	[SH for Japan-made set]

MEMO

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

The components identified by ⧓ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS
- All resistors are in ohms
- F : nonflammable

REF.NO.	PART NO.	DESCRIPTION			REMARK
	* A-1298-874-D	A BOARD, COMPLETE [U/C, AEP, SH, EQ for Japan-made set]			
	* A-1298-992-A	A BOARD, COMPLETE [U/C for Mexico-made set]			
	* A-1298-988-A	A BOARD, COMPLETE [AEP for UK-made set]			
		**********			
	7-682-950-01	SCREW +PSW 3X12 (IC403)			
		<CAPACITOR>			
C101	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C102	1-104-664-11	ELECT	47µF	20%	25V
C103	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C104	1-104-664-11	ELECT	47µF	20%	25V
C107	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C108	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C109	1-163-229-11	CERAMIC CHIP	12pF	5%	50V
C110	1-163-275-11	CERAMIC CHIP	0.001µF	5%	50V
C112	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C113	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C114	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C115	1-104-341-11	FILM	0.1µF	10%	250V
C120	1-104-341-11	FILM	0.1µF	10%	250V
C201	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C202	1-104-664-11	ELECT	47µF	20%	25V
C203	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C204	1-104-664-11	ELECT	47µF	20%	25V
C205	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C206	1-109-982-11	CERAMIC CHIP	1µF	10%	10V
C207	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C208	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C209	1-163-227-11	CERAMIC CHIP	10pF	0.5pF	50V
C210	1-163-275-11	CERAMIC CHIP	0.001µF	5%	50V
C212	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C213	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C214	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C215	1-104-341-11	FILM	0.1µF	10%	250V
C216	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C220	1-104-341-11	FILM	0.1µF	10%	250V
C301	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C302	1-104-664-11	ELECT	47µF	20%	25V
C303	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C304	1-104-664-11	ELECT	47µF	20%	25V
C307	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C308	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C309	1-163-227-11	CERAMIC CHIP	10pF	0.5pF	50V
C310	1-163-275-11	CERAMIC CHIP	0.001µF	5%	50V
C312	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C313	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C314	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C315	1-104-341-11	FILM	0.1µF	10%	250V
C320	1-104-341-11	FILM	0.1µF	10%	250V
C401	1-126-964-11	ELECT	10µF	20%	50V
C402	1-104-664-11	ELECT	47µF	20%	25V
C403	1-163-259-91	CERAMIC CHIP	220pF	5%	50V
C404	1-163-259-91	CERAMIC CHIP	220pF	5%	50V
C405	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C406	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C407	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C408	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C410	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C411	1-104-664-11	ELECT	47µF	20%	25V
C413	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C415	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C416	1-126-961-11	ELECT	2.2µF	20%	50V
C417	1-104-574-11	CERAMIC	0.0047µF	10%	2KV
C419	1-162-318-11	CERAMIC	0.001µF	10%	500V
C420	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C421	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C422	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C423	1-104-664-11	ELECT	47µF	20%	25V
C424	1-162-318-11	CERAMIC	0.001µF	10%	500V
C425	1-163-251-11	CERAMIC CHIP	100pF	5%	50V
C426	1-163-251-11	CERAMIC CHIP	100pF	5%	50V
C427	1-163-235-11	CERAMIC CHIP	22pF	5%	50V
C430	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C431	1-163-275-11	CERAMIC CHIP	0.001µF	5%	50V
C432	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C433	1-162-318-11	CERAMIC	0.001µF	10%	500V
C434	1-162-318-11	CERAMIC	0.001µF	10%	500V
C435	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C436	1-164-489-11	CERAMIC CHIP	0.22µF	10%	16V
C437	1-126-934-11	ELECT	220µF	20%	16V
C438	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V
C440	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V

A

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
C441	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C442	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C443	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C444	1-162-318-11	CERAMIC 0.001µF 10% 500V	
C446	1-104-664-11	ELECT 47µF 20% 25V	
C449	1-109-982-11	CERAMIC CHIP 1µF 10% 10V	
C450	1-107-823-11	CERAMIC CHIP 0.47µF 10% 16V	
C456	1-164-004-11	CERAMIC CHIP 0.1µF 10% 25V	
C457	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C458	1-115-339-11	CERAMIC CHIP 0.1µF 10% 50V	
C459	1-128-560-11	ELECT 22µF 20% 100V	
C462	1-115-339-11	CERAMIC CHIP 0.1µF 10% 50V	
C463	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C464	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C467	1-107-957-11	ELECT 1µF 20% 250V	
		<CONNECTOR>	
CN401	1-793-183-11	CONNECTOR, D SUB 15P	
CN402*	1-564-509-11	PLUG, CONNECTOR 6P	
CN403	1-784-463-11	CONNECTOR, FFC/FPC 21P	
CN405*	1-564-524-11	PLUG, CONNECTOR 9P	
CN406*	1-766-179-11	PIN, CONNECTOR (PC BOARD) 2P	
		<DIODE>	
D101	8-719-062-51	DIODE 1PS226-115	
D102	8-719-062-51	DIODE 1PS226-115	
D103	8-719-066-10	DIODE 1PS181-115	
D105	8-719-051-85	DIODE HSS83TD	
D106	8-719-052-12	DIODE 1SS376TE-17	
D107	8-719-052-12	DIODE 1SS376TE-17	
D201	8-719-062-51	DIODE 1PS226-115	
D202	8-719-062-51	DIODE 1PS226-115	
D203	8-719-066-10	DIODE 1PS181-115	
D205	8-719-051-85	DIODE HSS83TD	
D206	8-719-052-12	DIODE 1SS376TE-17	
D207	8-719-052-12	DIODE 1SS376TE-17	
D301	8-719-062-51	DIODE 1PS226-115	
D302	8-719-062-51	DIODE 1PS226-115	
D303	8-719-066-10	DIODE 1PS181-115	
D305	8-719-051-85	DIODE HSS83TD	
D306	8-719-052-12	DIODE 1SS376TE-17	
D307	8-719-052-12	DIODE 1SS376TE-17	
D402	8-719-801-78	DIODE 1SS184	
D403	8-719-982-36	ZENER DIODE MTZJ-39B	
D405	8-719-911-19	DIODE 1SS119-25	
D406	8-719-062-51	DIODE 1PS226-115	
D407	8-719-062-51	DIODE 1PS226-115	
		<FERRITE BEAD>	
FB102	1-500-419-22	FERRITE	
FB202	1-500-419-22	FERRITE	
FB302	1-500-419-22	FERRITE	
FB402	1-412-911-11	FERRITE 1.1µH	
FB403	1-412-911-11	FERRITE 1.1µH	
FB404	1-412-911-11	FERRITE 1.1µH	
FB405	1-412-911-11	FERRITE 1.1µH	
FB406	1-412-911-11	FERRITE 1.1µH	
FB411	1-412-911-11	FERRITE 1.1µH	
		<IC>	
IC401	8-759-584-87	IC M52757FP-TP	
IC402	8-759-584-86	IC M52749FP-TP	
IC403	8-749-015-91	IC FA4301	
IC404	8-759-585-72	IC CXD9514M	
IC405	8-759-701-01	IC NJM2904M	
IC406	8-749-015-92	IC H8D2972	
IC407	8-759-925-74	IC SN74HC04ANS	
		<COIL>	
L402	1-412-529-11	INDUCTOR 22µH	
L403	1-412-537-31	INDUCTOR 100µH	
L404	1-414-940-21	INDUCTOR 100µH	
L405	1-412-529-11	INDUCTOR 22µH	
		<IC LINK>	
PS401⚠	1-533-590-31	LINK, IC (1A/90V AC, 60V DC)	
		<TRANSISTOR>	
Q101	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q201	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q301	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q401	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q402	8-729-050-41	TRANSISTOR 2SJ360TE12L	
Q406	8-729-216-22	TRANSISTOR 2SA1162-G	
Q407	8-729-028-74	TRANSISTOR DTA114TUA-T106	
Q410	8-729-032-61	TRANSISTOR 2SC5022-02	
		<RESISTOR>	
R101	1-215-394-00	METAL 75 1% 1/4W	
R103	1-215-394-00	METAL 75 1% 1/4W	
R105	1-216-017-91	RES,CHIP 47 5% 1/10W	
R106	1-216-017-91	RES,CHIP 47 5% 1/10W	
R107	1-216-045-00	RES,CHIP 680 5% 1/10W	
R109	1-216-075-00	RES,CHIP 12K 5% 1/10W	
R110	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R111	1-216-041-00	RES,CHIP 470 5% 1/10W	
R112	1-216-009-91	RES,CHIP 22 5% 1/10W	
R113	1-216-017-91	RES,CHIP 47 5% 1/10W	
R114	1-216-009-91	RES,CHIP 22 5% 1/10W	
R115	1-219-742-11	CARBON 47 5% 1/2W	
R116	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R117	1-216-121-91	RES,CHIP 1M 5% 1/10W	
R118	1-216-121-91	RES,CHIP 1M 5% 1/10W	
R119	1-216-077-91	RES,CHIP 15K 5% 1/10W	
R120	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R121	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R122	1-216-081-00	RES,CHIP 22K 5% 1/10W	

REF.NO.	PART NO.	DESCRIPTION			REMARK
R128	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R130	1-216-113-00	RES,CHIP	470K	5%	1/10W
R137	1-249-413-11	CARBON	470	5%	1/4W
R138	1-216-017-91	RES,CHIP	47	5%	1/10W
R161	1-216-041-00	RES,CHIP	470	5%	1/10W
R201	1-215-394-00	METAL	75	1%	1/4W
R202	1-216-097-91	RES,CHIP	100K	5%	1/10W
R203	1-215-394-00	METAL	75	1%	1/4W
R205	1-216-017-91	RES,CHIP	47	5%	1/10W
R206	1-216-017-91	RES,CHIP	47	5%	1/10W
R207	1-216-045-00	RES,CHIP	680	5%	1/10W
R209	1-216-075-00	RES,CHIP	12K	5%	1/10W
R210	1-216-097-91	RES,CHIP	100K	5%	1/10W
R211	1-216-033-00	RES,CHIP	220	5%	1/10W
R212	1-216-009-91	RES,CHIP	22	5%	1/10W
R213	1-216-017-91	RES,CHIP	47	5%	1/10W
R214	1-216-009-91	RES,CHIP	22	5%	1/10W
R215	1-219-742-11	CARBON	47	5%	1/2W
R216	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R217	1-216-121-91	RES,CHIP	1M	5%	1/10W
R218	1-216-121-91	RES,CHIP	1M	5%	1/10W
R219	1-216-077-91	RES,CHIP	15K	5%	1/10W
R220	1-216-113-00	RES,CHIP	470K	5%	1/10W
R221	1-216-113-00	RES,CHIP	470K	5%	1/10W
R222	1-216-081-00	RES,CHIP	22K	5%	1/10W
R228	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R230	1-216-113-00	RES,CHIP	470K	5%	1/10W
R237	1-249-413-11	CARBON	470	5%	1/4W
R238	1-216-017-91	RES,CHIP	47	5%	1/10W
R261	1-216-041-00	RES,CHIP	470	5%	1/10W
R301	1-215-394-00	METAL	75	1%	1/4W
R303	1-215-394-00	METAL	75	1%	1/4W
R305	1-216-017-91	RES,CHIP	47	5%	1/10W
R306	1-216-017-91	RES,CHIP	47	5%	1/10W
R307	1-216-045-00	RES,CHIP	680	5%	1/10W
R309	1-216-075-00	RES,CHIP	12K	5%	1/10W
R310	1-216-097-91	RES,CHIP	100K	5%	1/10W
R311	1-216-033-00	RES,CHIP	220	5%	1/10W
R312	1-216-009-91	RES,CHIP	22	5%	1/10W
R313	1-216-017-91	RES,CHIP	47	5%	1/10W
R314	1-216-009-91	RES,CHIP	22	5%	1/10W
R315	1-219-742-11	CARBON	47	5%	1/2W
R316	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R317	1-216-121-91	RES,CHIP	1M	5%	1/10W
R318	1-216-121-91	RES,CHIP	1M	5%	1/10W
R319	1-216-077-91	RES,CHIP	15K	5%	1/10W
R320	1-216-113-00	RES,CHIP	470K	5%	1/10W
R321	1-216-113-00	RES,CHIP	470K	5%	1/10W
R322	1-216-081-00	RES,CHIP	22K	5%	1/10W
R328	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R330	1-216-113-00	RES,CHIP	470K	5%	1/10W
R337	1-249-413-11	CARBON	470	5%	1/4W
R338	1-216-017-91	RES,CHIP	47	5%	1/10W
R361	1-216-041-00	RES,CHIP	470	5%	1/10W
R402	1-216-049-91	RES,CHIP	1K	5%	1/10W
R403	1-216-081-00	RES,CHIP	22K	5%	1/10W
R404	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R405	1-216-049-91	RES,CHIP	1K	5%	1/10W
R406	1-216-097-91	RES,CHIP	100K	5%	1/10W
R407	1-218-768-11	METAL CHIP	470K	0.50%	1/10W
R409	1-216-129-00	RES,CHIP	2.2M	5%	1/10W
R411	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R412	1-216-105-91	RES,CHIP	220K	5%	1/10W
R413	1-216-097-91	RES,CHIP	100K	5%	1/10W
R414	1-216-089-91	RES,CHIP	47K	5%	1/10W
R415	1-216-097-91	RES,CHIP	100K	5%	1/10W
R417	1-216-121-91	RES,CHIP	1M	5%	1/10W
R418	1-260-127-11	CARBON	220K	5%	1/2W
R419	1-216-033-00	RES,CHIP	220	5%	1/10W
R420	1-216-025-91	RES,CHIP	100	5%	1/10W
R421	1-216-025-91	RES,CHIP	100	5%	1/10W
R422	1-216-025-91	RES,CHIP	100	5%	1/10W
R424	1-216-049-91	RES,CHIP	1K	5%	1/10W
R425	1-216-049-91	RES,CHIP	1K	5%	1/10W
R426	1-216-105-91	RES,CHIP	220K	5%	1/10W
R427	1-216-049-91	RES,CHIP	1K	5%	1/10W
R428	1-216-025-91	RES,CHIP	100	5%	1/10W
R430	1-216-025-91	RES,CHIP	100	5%	1/10W
R431	1-216-113-00	RES,CHIP	470K	5%	1/10W
R436	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R438	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R439	1-216-041-00	RES,CHIP	470	5%	1/10W
R441	1-216-121-91	RES,CHIP	1M	5%	1/10W
R442	1-216-049-91	RES,CHIP	1K	5%	1/10W
R443	1-216-025-91	RES,CHIP	100	5%	1/10W
R444	1-216-025-91	RES,CHIP	100	5%	1/10W
R445	1-216-025-91	RES,CHIP	100	5%	1/10W
R446	1-216-025-91	RES,CHIP	100	5%	1/10W
R447	1-216-017-91	RES,CHIP	47	5%	1/10W
R448	1-216-017-91	RES,CHIP	47	5%	1/10W
R449	1-216-081-00	RES,CHIP	22K	5%	1/10W
R450	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R451	1-216-129-00	RES,CHIP	2.2M	5%	1/10W
R453	1-216-073-00	RES,CHIP	10K	5%	1/10W
R454	1-216-129-00	RES,CHIP	2.2M	5%	1/10W
R455	1-216-097-91	RES,CHIP	100K	5%	1/10W
R456	1-216-025-91	RES,CHIP	100	5%	1/10W
R457	1-211-895-11	METAL	10M	10%	1/4W
R458	1-211-885-21	METAL	2.2M	5%	1W
R459	1-211-895-11	METAL	10M	10%	1/4W
R460	1-216-073-00	RES,CHIP	10K	5%	1/10W
R463	1-216-097-91	RES,CHIP	100K	5%	1/10W
R464	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R488	1-216-089-91	RES,CHIP	47K	5%	1/10W
R490	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R491	1-216-065-91	RES,CHIP	4.7K	5%	1/10W

<SPARK GAP>

SG101	1-576-354-21	GAP, SPARK	
SG201	1-576-354-21	GAP, SPARK	
SG301	1-576-354-21	GAP, SPARK	
SG401	1-576-354-21	GAP, SPARK	

A G

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
SG402	1-519-422-11	GAP, SPARK				
		<SOCKET>				
SK401	⚠1-451-499-11	SOCKET, PICTURE TUBE				
		<CRYSTAL>				
X401	1-781-472-21	VIBRATOR, CERAMIC (8MHz)				
**********						
		* A-1316-443-B G BOARD, COMPLETE [U/C, AEP, SH, EQ for Japan-made set]				
		* A-1316-481-A G BOARD, COMPLETE [U/C for Mexico-made set]				
		* A-1316-480-A G BOARD, COMPLETE [AEP for UK-made set]				
		**********				
	1-533-223-11	HOLDER, FUSE (F601)				
	4-382-854-11	SCREW (M3X10), P, SW (+) (D610,D652,D680,IC610,IC654,Q603,Q630)				
		<CAPACITOR>				
C601	⚠1-113-513-11	FILM	1µF	20%	275V	
C602	⚠1-113-513-11	FILM	1µF	20%	275V	
C603	⚠1-113-900-51	CERAMIC	470pF	10%	250V	
C604	⚠1-113-900-51	CERAMIC	470pF	10%	250V	
C605	⚠1-113-926-91	CERAMIC	0.0047µF		250V	
C606	⚠1-113-926-91	CERAMIC	0.0047µF		250V	
C607	1-113-900-11	CERAMIC	470pF	10%	250V	
C610	1-117-849-11	ELECT	330µF	20%	450V	
C611	1-137-479-11	FILM	1µF	10%	400V	
C612	1-136-169-00	FILM	0.22µF	5%	50V	
C613	1-126-967-11	ELECT	47µF	20%	50V	
C614	1-163-251-11	CERAMIC CHIP	100pF	5%	50V	
C620	1-128-990-11	FILM	27000pF	5%	800V	
C621	1-104-330-91	CERAMIC	470pF	10%	1KV	
C622	1-104-330-91	CERAMIC	470pF	10%	1KV	
C623	1-136-171-00	FILM	0.33µF	5%	50V	
C624	1-136-171-00	FILM	0.33µF	5%	50V	
C625	1-136-167-00	FILM	0.15µF	5%	50V	
C626	1-136-167-00	FILM	0.15µF	5%	50V	
C627	1-104-330-91	CERAMIC	470pF	10%	1KV	
C629	1-137-370-11	FILM	0.01µF	5%	50V	
C630	1-163-005-11	CERAMIC CHIP	470pF	10%	50V	
C631	1-104-665-11	ELECT	100µF	20%	25V	
C633	1-164-161-11	CERAMIC CHIP	0.0022µF	10%	50V	
C634	1-163-009-11	CERAMIC CHIP	0.001µF	10%	50V	
C650	1-107-656-11	ELECT	100µF	20%	250V	
C651	1-107-651-11	ELECT	4.7µF	20%	250V	
C652	1-128-563-11	ELECT	100µF	20%	100V	
C653	1-128-581-11	ELECT	4.7µF	20%	100V	
C654	1-126-943-11	ELECT	2200µF	20%	25V	
C655	1-104-664-11	ELECT	47µF	20%	25V	
C656	1-126-943-11	ELECT	2200µF	20%	25V	
C657	1-104-664-11	ELECT	47µF	20%	25V	
C658	1-126-927-11	ELECT	2200µF	20%	10V	
C659	1-128-339-11	ELECT	2200µF	20%	10V	
C660	1-126-967-11	ELECT	47µF	20%	50V	
C661	1-107-429-11	CERAMIC	0.0022µF	10%	1KV	
C662	1-137-370-11	FILM	0.01µF	5%	50V	
C663	1-126-961-11	ELECT	2.2µF	20%	50V	
C665	1-107-909-11	ELECT	47µF	20%	10V	
C666	1-126-964-11	ELECT	10µF	20%	50V	
C667	1-107-909-11	ELECT	47µF	20%	16V	
C680	1-115-747-51	ELECT	0.0068F	20%	10V	
C681	1-104-664-11	ELECT	47µF	20%	10V	
C682	1-137-368-11	FILM	0.0047µF	5%	50V	
C683	1-104-664-11	ELECT	47µF	20%	10V	
C684	1-107-909-11	ELECT	47µF	20%	10V	
C685	1-128-526-11	ELECT	100µF	20%	10V	
C686	1-104-664-11	ELECT	47µF	20%	10V	
C687	1-126-964-11	ELECT	10µF	20%	50V	
C692	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
		<CONNECTOR>				
CN601	*1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P				
CN602	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P				
CN603	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P				
CN650	*1-564-510-11	PLUG, CONNECTOR 7P				
CN652	*1-564-512-11	PLUG, CONNECTOR 9P				
CN653	*1-564-509-11	PLUG, CONNECTOR 6P				
CN654	*1-564-511-11	PLUG, CONNECTOR 8P				
		<DIODE>				
D610	⚠8-719-510-53	DIODE D4SB60L				
D612	8-719-911-19	DIODE 1SS119-25				
D613	8-719-304-63	DIODE RM11C				
D620	8-719-911-19	DIODE 1SS119-25				
D631	8-719-063-73	DIODE D1NL20U-TR				
D632	8-719-059-23	DIODE P6KE200AG23				
D633	8-719-069-63	DIODE ERB38-06V1				
D634	8-719-911-19	DIODE 1SS119-25				
D635	8-719-110-53	ZENER DIODE RD20ESB2				
D637	8-719-911-19	DIODE 1SS119-25				
D650	8-719-064-49	DIODE D4SBL40				
D651	8-719-063-73	DIODE D1NL20U-TR				
D652	8-719-052-91	DIODE D4SBS4-F				
D653	8-719-022-97	DIODE D2S4MF				
D654	8-719-022-97	DIODE D2S4MF				
D655	8-719-063-73	DIODE D1NL20U-TR				
D656	8-719-911-19	DIODE 1SS119-25				
D660	8-719-110-57	ZENER DIODE RD22ESB2				
D661	8-719-110-31	ZENER DIODE RD12ESB2				
D663	8-719-911-19	DIODE 1SS119-25				
D664	8-719-110-57	ZENER DIODE RD22ESB2				
D665	8-719-911-19	DIODE 1SS119-25				

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
D666	8-719-911-19	DIODE 1SS119-25	
D680	8-719-989-87	DIODE YG802C09	
D681	8-719-109-89	ZENER DIODE RD5.6ESB2	
D682	8-719-121-26	ZENER DIODE RD9.1ESL2	
D683	8-719-911-19	DIODE 1SS119-25	
D690	8-719-911-19	DIODE 1SS119-25	
D692	8-719-911-19	DIODE 1SS119-25	
		<FUSE>	
F601 ⚠	1-576-233-11	FUSE (H.B.C.) (6.3A/250V)	
		<FERRITE BEAD>	
FB630	1-410-396-41	FERRITE 0.45µH	
FB632 ⚠	1-410-397-31	FERRITE 1.1µH	
		<IC>	
IC610	8-749-015-89	IC MZ1530	
IC630	8-759-535-32	IC FA13842P	
IC650	8-749-012-49	IC DM-57N	
IC651	8-759-592-79	IC BA00AST-V5	
IC652	8-759-496-15	IC BA05ST-V5	
IC653	8-759-450-47	IC BA05T	
IC654	8-759-643-66	IC µPC2912HF(12)	
IC680	8-759-321-95	IC HA17431PA	
		<COIL>	
L610	1-419-126-21	COIL, CHOKE (AFC) 216µH	
L611	1-411-674-11	INDUCTOR 68µH	
L650	1-414-742-21	INDUCTOR 22µH	
L651	1-414-742-21	INDUCTOR 22µH	
L652	1-412-529-11	INDUCTOR 22µH	
L653	1-412-529-11	INDUCTOR 22µH	
L680	1-414-742-21	INDUCTOR 22µH	
		<PHOTO COUPLER>	
PH620	8-749-924-35	PHOTO COUPLER ON3171-R	
PH630	8-749-924-35	PHOTO COUPLER ON3171-R	
		<IC LINK>	
PS650 ⚠	1-533-593-31	LINK, IC (2A/90V AC, 60V DC)	
		<TRANSISTOR>	
Q603	8-729-045-39	TRANSISTOR MX0842AB-F	
Q610	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q621	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q630	8-729-045-03	TRANSISTOR 2SK2647-01MR-F91	
Q631	8-729-041-66	TRANSISTOR 2SC4015TV2	
Q632	8-729-041-66	TRANSISTOR 2SC4015TV2	
Q633	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q650	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q651	8-729-230-45	TRANSISTOR 2SC2458-YGR	
Q652	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q653	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q654	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q667	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q670	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q671	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q691	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<RESISTOR>	
R601 ⚠	1-220-825-91	CARBON 330K 5% 1/2W	
R602	1-216-465-11	METAL OXIDE 27K 5% 2W	F
R603	1-247-895-91	CARBON 470K 5% 1/4W	
R604	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R605	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R606	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R607	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R608	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R609	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	
R610	1-217-152-00	METAL 0.33 10% 2W	
R611	1-217-153-00	METAL 0.47 10% 2W	
R612	1-249-425-11	CARBON 4.7K 5% 1/4W	
R613	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R614	1-247-807-31	CARBON 100 5% 1/4W	
R615	1-249-427-11	CARBON 6.8K 5% 1/4W	
R616	1-216-671-11	METAL CHIP 6.8K 0.50% 1/10W	
R617	1-249-417-11	CARBON 1K 5% 1/4W	
R618	1-216-369-00	METAL OXIDE 1 5% 2W	F
R620	1-202-933-61	FUSIBLE 0.1 10% 1/2W	F
R621	1-249-432-11	CARBON 18K 5% 1/4W	
R622	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R623	1-218-642-11	METAL OXIDE 100K 5% 1W	F
R624	1-218-642-11	METAL OXIDE 100K 5% 1W	F
R625	1-216-349-00	METAL OXIDE 1 5% 1W	F
R626	1-216-349-00	METAL OXIDE 1 5% 1W	F
R627	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R628	1-216-695-11	METAL CHIP 68K 0.50% 1/10W	
R629	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R630	1-249-387-11	CARBON 3.3 5% 1/4W	F
R632	1-215-399-00	METAL 120 1% 1/4W	
R633	1-260-135-11	CARBON 1M 5% 1/2W	
R634	1-260-135-11	CARBON 1M 5% 1/2W	
R635	1-216-465-11	METAL OXIDE 27K 5% 2W	F
R636	1-247-863-91	CARBON 22K 5% 1/4W	
R637	1-219-134-11	FUSIBLE 0.1 10% 1/4W	
R638	1-219-134-11	FUSIBLE 0.1 10% 1/4W	
R649	1-249-437-11	CARBON 47K 5% 1/4W	F
R650	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R652	1-216-113-00	RES,CHIP 470K 5% 1/10W	
R653	1-249-413-11	CARBON 470 5% 1/4W	
R654	1-211-796-11	FUSIBLE 1 5% 1/2W	F
R655	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R656	1-260-292-11	CARBON 1 5% 1/2W	
R657	1-249-443-11	CARBON 0.47 5% 1/4W	F

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION			REMARK
R658	1-216-073-00	RES,CHIP	10K	5%	1/10W
R659	1-216-049-91	RES,CHIP	1K	5%	1/10W
R661	1-247-807-31	CARBON	100	5%	1/4W
R662	1-216-073-00	RES,CHIP	10K	5%	1/10W
R663	1-216-073-00	RES,CHIP	10K	5%	1/10W
R664	1-216-073-00	RES,CHIP	10K	5%	1/10W
R665	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R666	1-216-073-00	RES,CHIP	10K	5%	1/10W
R667	1-216-089-91	RES,CHIP	47K	5%	1/10W
R668	1-215-457-00	METAL	33K	1%	1/4W
R670	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
R671	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
R672	1-216-664-11	METAL CHIP	3.6K	0.50%	1/10W
R673	1-216-073-00	RES,CHIP	10K	5%	1/10W
R674	1-216-097-91	RES,CHIP	100K	5%	1/10W
R675	1-216-668-11	METAL CHIP	5.1K	0.50%	1/10W
R676	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R677	1-216-661-11	METAL CHIP	2.7K	0.50%	1/10W
R678	1-216-391-11	METAL OXIDE	1.5	5%	3W F
R680	1-215-475-00	METAL	180K	1%	1/4W
R681	1-216-073-00	RES,CHIP	10K	5%	1/10W
R682	1-216-049-91	RES,CHIP	1K	5%	1/10W
R683	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R684	1-216-073-00	RES,CHIP	10K	5%	1/10W
R685	1-216-049-91	RES,CHIP	1K	5%	1/10W
R686	1-216-033-00	RES,CHIP	220	5%	1/10W
R687	1-216-081-00	RES,CHIP	22K	5%	1/10W
R688	1-215-473-00	METAL	150K	1%	1/4W
R693	1-260-085-11	CARBON	68	5%	1/2W
R694	1-216-073-00	RES,CHIP	10K	5%	1/10W
R695	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R696	1-249-407-11	CARBON	150	5%	1/4W

<RELAY>

RY602⚠	1-755-318-11	RELAY, POWER	
RY603⚠	1-755-067-21	RELAY	

<SPARK GAP>

SG601⚠	1-533-982-11	GAP, SPARK	

<TRANSFORMER>

T601 ⚠	1-429-180-11	TRANSFORMER, LINE FILTER	
T620	1-433-894-11	TRANSFORMER, CONVERTER (PIT)	
T621	1-429-992-11	TRANSFORMER, CONVERTER (PRT)	
T630	1-433-895-31	TRANSFORMER, CONVERTER (SRT)	

<THERMISTOR>

TH601⚠	1-809-260-11	THERMISTOR, POWER	
THP601⚠	1-809-827-31	THERMISTOR, POSITIVE	

<VARISTOR>

VDR601⚠	1-801-268-51	VARISTOR TNR14V471K660	
VDR602⚠	1-810-622-11	VARISTOR	

****

* A-1346-827-B D BOARD, COMPLETE
[U/C, AEP, SH, EQ for Japan-made set]
* A-1346-860-A D BOARD, COMPLETE
[U/C for Mexico-made set]
* A-1346-859-A D BOARD, COMPLETE
[AEP for UK-made set]
****

3-710-578-01	COVER, VOLUME, 6 MOLD (RV901)	
4-070-828-01	INSULATING SHEET (Q515)	
4-070-829-02	INSULATING SHEET (IC502)	
4-070-830-01	INSULATING SHEET (IC701)	
4-382-854-11	SCREW (M3X10), P, SW (+)	(IC701,Q704,Q705,Q905,Q906,R918)
7-685-647-79	SCREW +BVTP 3X10 TYPE2 TT(B)	(D511,IC502,Q508,Q515,R547)

<CAPACITOR>

C501	1-126-964-11	ELECT	10µF	20%	50V
C502	1-136-169-00	FILM	0.22µF	5%	50V
C503	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C504	1-163-017-00	CERAMIC CHIP	0.0047µF	10%	50V
C505	1-126-964-11	ELECT	10µF	20%	50V
C506	1-137-194-81	FILM	0.47µF	5%	50V
C507	1-136-169-00	FILM	0.22µF	5%	50V
C508	1-126-965-11	ELECT	22µF	20%	50V
C509	1-115-521-11	FILM	0.82µF	5%	250V
C510	1-117-398-11	ELECT	33µF	20%	250V
C511	1-163-113-00	CERAMIC CHIP	68pF	5%	50V
C512	1-163-251-11	CERAMIC CHIP	100pF	5%	50V
C513	1-163-017-00	CERAMIC CHIP	0.0047µF	10%	50V
C514	1-106-375-12	MYLAR	0.022µF	99%	200V
C515	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C516	1-126-935-11	ELECT	470µF	20%	16V
C517	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C518	1-137-194-81	FILM	0.47µF	5%	50V
C519	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C520	1-107-914-11	ELECT	1000µF	20%	25V
C521	1-117-666-71	FILM	0.39µF	5%	250V
C522	1-137-368-11	FILM	0.0047µF	5%	50V
C523	1-137-368-11	FILM	0.0047µF	5%	50V
C524	1-163-133-00	CERAMIC CHIP	470pF	5%	50V
C525	1-104-760-11	CERAMIC CHIP	0.047µF	10%	50V
C526	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C527	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C528	1-115-514-11	FILM	0.22µF	5%	250V
C529	1-104-665-11	ELECT	100µF	20%	25V
C530	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C531	1-107-846-11	FILM	0.1µF	5%	250V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C532	1-163-009-11	CERAMIC CHIP	0.001µF	10%	50V
C533	1-107-889-11	ELECT	220µF	20%	25V
C534	1-107-889-11	ELECT	220µF	20%	25V
C535	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C536	1-126-967-11	ELECT	47µF	20%	50V
C537	1-113-694-11	FILM	0.056µF	5%	400V
C538	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C539	1-163-017-00	CERAMIC CHIP	0.0047µF	10%	50V
C540	1-106-343-00	MYLAR	0.001µF	10%	200V
C541	1-164-161-11	CERAMIC CHIP	0.0022µF	10%	50V
C542	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C543	1-125-924-11	FILM	3900pF	3%	1.8KV
C544	1-125-925-11	FILM MELF	0.027µF	5%	400V
C545	1-107-597-11	CERAMIC	22pF	5%	500V
C546	1-107-444-11	CERAMIC	100pF	5%	2KV
C547	1-130-061-91	FILM	0.0015µF	5%	630V
C548	1-162-134-11	CERAMIC	470pF	10%	2KV
C549	1-130-495-00	FILM	0.1µF	5%	50V
C550	1-127-833-11	FILM	0.15µF	5%	400V
C551	1-163-017-00	CERAMIC CHIP	0.0047µF	10%	50V
C552	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C554	1-107-444-11	CERAMIC	100pF	5%	2KV
C555	1-107-683-11	ELECT	2.2µF	0	250V
C556	1-115-356-11	FILM	1.2µF	5%	250V
C557	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C558	1-104-665-11	ELECT	100µF	20%	25V
C559	1-107-649-11	ELECT	2.2µF	20%	250V
C560	1-126-965-11	ELECT	22µF	20%	50V
C561	1-104-664-11	ELECT	47µF	20%	25V
C562	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C563	1-137-365-11	FILM	0.0015µF	5%	50V
C564	1-126-960-11	ELECT	1µF	20%	50V
C565	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C566	1-137-370-11	FILM	0.01µF	5%	50V
C567	1-164-161-11	CERAMIC CHIP	0.0022µF	10%	50V
C568	1-104-760-11	CERAMIC CHIP	0.047µF	10%	50V
C571	1-163-227-11	CERAMIC CHIP	10pF	0.5pF	50V
C572	1-163-009-11	CERAMIC CHIP	0.001µF	10%	50V
C573	1-106-375-12	MYLAR	0.022µF	99%	200V
C574	1-163-017-00	CERAMIC CHIP	0.0047µF	10%	50V
C575	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C577	1-126-964-11	ELECT	10µF	20%	50V
C701	1-128-560-11	ELECT	22µF	20%	100V
C702	1-128-562-11	ELECT	47µF	20%	100V
C703	1-107-427-91	CERAMIC	0.001µF	10%	1KV
C704	1-104-568-11	CERAMIC	470pF	10%	2KV
C706	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C707	1-130-495-00	FILM	0.1µF	5%	50V
C708	1-126-942-61	ELECT	1000µF	20%	25V
C709	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C710	1-107-894-11	ELECT	220µF	20%	35V
C711	1-163-019-00	CERAMIC CHIP	0.0068µF	10%	50V
C712	1-106-228-00	MYLAR	0.22µF	10%	100V
C713	1-126-942-61	ELECT	1000µF	20%	25V
C715	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C720	1-126-964-11	ELECT	10µF	20%	50V

REF.NO.	PART NO.	DESCRIPTION			REMARK
C901	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C902	1-104-665-11	ELECT	100µF	20%	25V
C903	1-126-964-11	ELECT	10µF	20%	50V
C905	1-163-127-00	CERAMIC CHIP	270pF	5%	50V
C907	1-163-257-11	CERAMIC CHIP	180pF	5%	50V
C908	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C909	1-126-935-11	ELECT	470µF	20%	16V
C910	1-126-962-11	ELECT	3.3µF	20%	50V
C912	1-106-383-00	MYLAR	0.047µF	10%	200V
C913	1-119-748-11	ELECT	33µF	20%	400V
C914	1-106-383-00	MYLAR	0.047µF	10%	200V
C915	1-136-169-00	FILM	0.22µF	5%	50V
C916	1-117-626-11	FILM	2000pF	3%	1.2KV
C917	1-117-665-11	FILM	0.33µF	5%	250V
C918	1-106-359-00	MYLAR	0.0047µF	10%	100V
C919	1-115-350-51	CERAMIC	0.0047µF		2KV
C920	1-137-372-11	FILM	0.022µF	5%	50V
C921	1-106-228-00	MYLAR	0.22µF	10%	100V
C922	1-106-220-00	MYLAR	0.1µF	10%	100V
C923	1-106-355-12	MYLAR	0.0033µF	10%	200V
C924	1-106-220-00	MYLAR	0.1µF	10%	100V
C925	1-126-967-11	ELECT	47µF	20%	50V
C926	1-126-964-11	ELECT	10µF	20%	50V
C927	1-163-243-11	CERAMIC CHIP	47pF	5%	50V
C928	1-163-133-00	CERAMIC CHIP	470pF	5%	50V
C929	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V
C930	1-163-227-11	CERAMIC CHIP	10pF	0.5pF	50V
C931	1-126-964-11	ELECT	10µF	20%	50V
C932	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V
C933	1-126-960-11	ELECT	1µF	20%	50V
C935	1-163-275-11	CERAMIC CHIP	0.001µF	5%	50V

<CONNECTOR>

CN501*	1-564-509-11	PLUG, CONNECTOR 6P
CN502*	1-564-510-11	PLUG, CONNECTOR 7P
CN503*	1-508-879-11	BASE POST
CN504	1-784-504-11	CONNECTOR, FFC/FPC 25P
CN505	1-784-504-11	CONNECTOR, FFC/FPC 25P
CN506	1-764-101-11	PIN, CONNECTOR (PC BOARD) 2P
CN508*	1-564-511-11	PLUG, CONNECTOR 8P
CN509*	1-778-955-11	PIN, CONNECTOR (PC BOARD) 10P

<DIODE>

D501	8-719-109-85	ZENER DIODE RD5.1ESB2
D502	8-719-109-85	ZENER DIODE RD5.1ESB2
D504	8-719-988-61	DIODE 1SS355TE-17
D505	8-719-110-36	ZENER DIODE RD13ESB2
D506	8-719-991-33	DIODE 1SS133T-77
D507	8-719-063-89	DIODE YG911S3R
D508	8-719-031-79	DIODE D5SC4M
D509	8-719-991-33	DIODE 1SS133T-77
D510	8-719-109-85	ZENER DIODE RD5.1ESB2
D511	8-719-066-36	DIODE FMQ-G5GS
D512	8-719-988-61	DIODE 1SS355TE-17

D

REF.NO.	PART NO.	DESCRIPTION	REMARK
D513	8-719-991-33	DIODE 1SS133T-77	
D514	8-719-991-33	DIODE 1SS133T-77	
D515	8-719-109-89	ZENER DIODE RD5.6ESB2	
D516	8-719-991-33	DIODE 1SS133T-77	
D517	8-719-951-30	DIODE ERA91-02	
D519	8-719-988-61	DIODE 1SS355TE-17	
D520	8-719-988-61	DIODE 1SS355TE-17	
D522	8-719-988-61	DIODE 1SS355TE-17	
D701	8-719-991-33	DIODE 1SS133T-77	
D702	8-719-991-33	DIODE 1SS133T-77	
D703	8-719-991-33	DIODE 1SS133T-77	
D707	8-719-109-85	ZENER DIODE RD5.1ESB2	
D708	8-719-908-03	DIODE GP08D	
D709	8-719-948-45	DIODE ERA22-08	
D710	8-719-109-85	ZENER DIODE RD5.1ESB2	
D901	8-719-991-33	DIODE 1SS133T-77	
D902	8-719-110-31	ZENER DIODE RD12ESB2	
D904	8-719-988-61	DIODE 1SS355TE-17	
D905	8-719-110-36	ZENER DIODE RD13ESB2	
D906	8-719-063-89	DIODE YG911S3R	
D907	8-719-930-97	ZENER DIODE HZS16NB2TD	
D908	8-719-018-82	DIODE RGP02-20EL-6394	
D909	8-719-930-97	ZENER DIODE HZS16NB2TD	
D910	8-719-991-33	DIODE 1SS133T-77	
D912	8-719-979-58	DIODE EGP10D	
D913	8-719-991-33	DIODE 1SS133T-77	
D914	8-719-991-33	DIODE 1SS133T-77	
D915	8-719-929-72	ZENER DIODE HZS33NB2	
D917	8-719-988-61	DIODE 1SS355TE-17	
D918	8-719-991-33	DIODE 1SS133T-77	
D919	8-719-991-33	DIODE 1SS133T-77	
D920	8-719-928-85	ZENER DIODE HZS4.7NB2	
D921	8-719-988-61	DIODE 1SS355TE-17	
D922	8-719-018-82	DIODE RGP02-20EL-6394	
D924	8-719-110-31	ZENER DIODE RD12ES-B2	
		<FERRITE BEAD>	
FB501	1-410-397-21	FERRITE 1.1µH	
FB502	1-410-397-21	FERRITE 1.1µH	
FB503	1-412-911-11	FERRITE 1.1µH	
FB504	1-412-911-11	FERRITE 1.1µH	
FB505	1-412-911-11	FERRITE 1.1µH	
FB506	1-410-397-21	FERRITE 1.1µH	
FB507	1-410-397-21	FERRITE 1.1µH	
FB901	1-410-397-21	FERRITE 1.1µH	
		<IC>	
IC501	8-759-585-82	IC BA9759F-E2	
IC502	8-759-803-42	IC LA6500-FA	
IC503	8-759-058-50	IC XRA10324AF	
IC701	8-759-444-82	IC LA7841L	
IC901	8-759-585-81	IC BA9758FS-E2	
		<CHIP CONDUCTOR>	
JR002	1-216-296-91	SHORT 0	
JR003	1-216-295-91	SHORT 0	
JR004	1-216-295-91	SHORT 0	
JR005	1-216-296-91	SHORT 0	
JR006	1-216-295-91	SHORT 0	
JR008	1-216-295-91	SHORT 0	
JR009	1-216-295-91	SHORT 0	
JR010	1-216-295-91	SHORT 0	
JR011	1-216-295-91	SHORT 0	
JR012	1-216-296-91	SHORT 0	
JR013	1-216-295-91	SHORT 0	
JR014	1-216-296-91	SHORT 0	
JR015	1-216-296-91	SHORT 0	
JR016	1-216-295-91	SHORT 0	
JR017	1-216-296-91	SHORT 0	
		<COIL>	
L501	1-412-537-31	INDUCTOR 100µH	
L502	1-406-673-11	COIL, CHOKE 2.2mH	
L503	1-406-671-11	COIL, CHOKE 1mH	
L504	1-406-675-11	COIL, CHOKE 4.7mH	
L505	1-416-401-31	COIL, CHOKE 5mH	
L901	1-412-537-31	INDUCTOR 100µH	
L902	1-406-660-41	COIL, CHOKE 15µH	
		<TRANSISTOR>	
Q501	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q502	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q503	8-729-901-97	TRANSISTOR 2SA1036K-Q	
Q504	8-729-901-87	TRANSISTOR 2SC2411K-CQ	
Q505	8-729-901-97	TRANSISTOR 2SA1036K-Q	
Q506	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q507	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q508	8-729-048-53	TRANSISTOR 2SJ569LS-CB11	
Q509	8-729-820-73	TRANSISTOR 2SC3746	
Q510	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q511	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q512	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q513	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q514	8-729-140-50	TRANSISTOR 2SC3209LK	
Q515	8-729-048-48	TRANSISTOR 2SC5570 (LBSONY)	
Q516	8-729-024-95	TRANSISTOR 2SB1565EF	
Q517	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q518	8-729-019-01	TRANSISTOR 2SD2394-EF	
Q519	8-729-033-25	TRANSISTOR DTC114GKA	
Q520	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q521	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q522	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q523	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q524	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q525	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
Q526	8-729-027-35	TRANSISTOR DTA143TKA-T146	
Q701	8-729-800-32	TRANSISTOR 2SC2362K-G	

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q702	8-729-178-43	TRANSISTOR 2SC2784-E	
Q703	8-729-204-91	TRANSISTOR 2SA1049-GR	
Q704	8-729-207-82	TRANSISTOR 2SC3421-Y	
Q705	8-729-207-89	TRANSISTOR 2SA1358-Y	
Q706	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q707	8-729-046-80	TRANSISTOR 2SC4634LS-CB11	
Q903	8-729-901-87	TRANSISTOR 2SC2411K-CQ	
Q904	8-729-901-97	TRANSISTOR 2SA1036K-Q	
Q905	8-729-048-53	TRANSISTOR 2SJ569LS-CB11	
Q906	8-729-044-21	TRANSISTOR 2SK2655-01R-F165	
Q907	8-729-033-26	TRANSISTOR DTA114GKAT146	
Q908	8-729-033-25	TRANSISTOR DTC114GKA	
		<RESISTOR>	
R501	1-215-884-11	METAL OXIDE 47 5% 2W	F
R502	1-216-059-00	RES,CHIP 2.7K 5% 1/10W	
R503	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R504	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R505	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R506	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R507	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R508	1-247-815-91	CARBON 220 5% 1/4W	
R509	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R510	1-216-675-91	METAL CHIP 10K 0.50% 1/10W	
R511	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R512	1-215-453-00	METAL 22K 1% 1/4W	
R513	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R514	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R515	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R516	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R517	1-216-689-11	METAL CHIP 39K 0.50% 1/10W	
R518	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R519	1-216-081-00	RES,CHIP 22K 5% 1/10W	
R520	1-247-791-91	CARBON 22 5% 1/4W	
R521	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W	
R522	1-249-437-11	CARBON 47K 5% 1/4W	
R523	1-216-033-00	RES,CHIP 220 5% 1/10W	
R524	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R525	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R526	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R527	1-216-673-11	METAL CHIP 8.2K 0.50% 1/10W	
R528	1-216-677-11	METAL CHIP 12K 0.50% 1/10W	
R529	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R530	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R531	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R532	1-215-860-11	METAL OXIDE 33 5% 1W	F
R533	1-211-796-11	FUSIBLE 1 5% 1/2W	F
R534	1-216-689-11	METAL CHIP 39K 0.50% 1/10W	
R535	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R536	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R537	1-249-437-11	CARBON 47K 5% 1/4W	
R538	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R539	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R540	1-215-909-11	METAL OXIDE 47 5% 3W	F
R541	1-216-295-91	SHORT 0	
R542	1-249-437-11	CARBON 47K 5% 1/4W	
R543	1-216-677-11	METAL CHIP 12K 0.50% 1/10W	
R544	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R545	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R546	1-216-381-11	METAL OXIDE 0.22 5% 3W	F
R547	1-219-726-11	METAL 2.2 5% 10W	
R548	1-249-437-11	CARBON 47K 5% 1/4W	
R549	1-260-288-11	CARBON 0.47 5% 1/2W	
R550	1-260-288-11	CARBON 0.47 5% 1/2W	
R551	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R552	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R553	1-247-815-91	CARBON 220 5% 1/4W	
R554	1-216-679-11	METAL CHIP 15K 0.50% 1/10W	
R555	1-216-675-91	METAL CHIP 10K 0.50% 1/10W	
R556	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R557	1-216-423-11	METAL OXIDE 27 5% 1W	F
R558	1-249-437-11	CARBON 47K 5% 1/4W	
R559	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R560	1-216-675-91	METAL CHIP 10K 0.50% 1/10W	
R561	1-215-443-00	METAL 8.2K 1% 1/4W	
R562	1-216-677-11	METAL CHIP 12K 0.50% 1/10W	
R563	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R564	1-216-677-11	METAL CHIP 12K 0.50% 1/10W	
R565	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R566	1-216-687-11	METAL CHIP 33K 0.50% 1/10W	
R567	1-214-840-00	METAL 100 1% 1/2W	
R568	1-216-665-11	METAL CHIP 3.9K 0.50% 1/10W	
R569	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R570	1-260-332-51	CARBON 2.2K 5% 1/2W	
R571	1-249-425-11	CARBON 4.7K 5% 1/4W	
R572	1-216-385-11	METAL OXIDE 0.47 5% 3W	F
R573	1-249-437-11	CARBON 47K 5% 1/4W	
R574	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R575	1-216-672-11	METAL CHIP 7.5K 0.50% 1/10W	
R576	1-215-869-11	METAL OXIDE 1K 5% 1W	F
R577	1-260-310-71	CARBON 33 5% 1/2W	
R578	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R579	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R580	1-214-840-00	METAL 100 1% 1/2W	
R581	1-260-316-51	CARBON 100 5% 1/2W	
R582	1-214-840-00	METAL 100 1% 1/2W	
R583	1-249-437-11	CARBON 47K 5% 1/4W	
R584	1-249-437-11	CARBON 47K 5% 1/4W	
R585	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R586	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R587	1-215-886-11	METAL OXIDE 100 5% 2W	F
R588	1-260-085-11	CARBON 68 5% 1/2W	
R589	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R590	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R591	1-247-807-31	CARBON 100 5% 1/4W	
R593	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R594	1-216-683-11	METAL CHIP 22K 0.50% 1/10W	
R595	1-216-659-11	METAL CHIP 2.2K 0.50% 1/10W	
R597	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R598	1-216-675-91	METAL CHIP 10K 0.50% 1/10W	
R599	1-216-657-11	METAL CHIP 1.8K 0.50% 1/10W	

CPD-G500

D

The components identified by ⋈ in this manual have been carefully factory-selected for eachset in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
R701	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R702	1-249-393-11	CARBON	10	5%	1/4W	F
R703	1-215-459-00	METAL	39K	1%	1/4W	
R704	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	
R705	1-249-413-11	CARBON	470	5%	1/4W	F
R706	1-249-389-11	CARBON	4.7	5%	1/4W	F
R707	1-249-389-11	CARBON	4.7	5%	1/4W	F
R708	1-215-881-11	METAL OXIDE	15	5%	2W	F
R709	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R710	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R711	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R713	1-216-059-00	RES,CHIP	2.7K	5%	1/10W	
R714	1-216-057-00	RES,CHIP	2.2K	5%	1/10W	
R715	1-249-389-11	CARBON	4.7	5%	1/4W	F
R716	1-216-689-11	RES,CHIP	39K	5%	1/10W	
R717	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R718	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R719	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W	
R720	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R721	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R722	1-260-292-11	CARBON	1	5%	1/2W	
R723	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W	
R724	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W	
R725	1-214-798-21	METAL	1.8	1%	1/2W	
R726	1-214-798-21	METAL	1.8	1%	1/2W	
R727	1-249-381-11	CARBON	1	5%	1/4W	F
R728	1-215-865-11	METAL OXIDE	220	5%	1W	F
R729	1-260-292-11	CARBON	1	5%	1/2W	
R730	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R731	1-216-059-00	RES,CHIP	2.7K	5%	1/10W	
R732	1-219-510-11	CARBON	470K	5%	1/2W	
R901	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R902	1-216-117-00	RES,CHIP	680K	5%	1/10W	
R903	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R904	1-216-033-00	RES,CHIP	220	5%	1/10W	
R906	1-216-033-00	RES,CHIP	220	5%	1/10W	
R907	1-216-081-00	RES,CHIP	22K	5%	1/10W	
R908	1-216-399-00	METAL OXIDE	6.8	5%	3W	F
R911	1-216-041-00	RES,CHIP	470	5%	1/10W	
R912	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R914	1-247-791-91	CARBON	22	5%	1/4W	
R915	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R916	1-249-397-11	CARBON	22	5%	1/4W	F
R917	1-211-824-71	FUSIBLE	220	5%	1/2W	F
R918	1-219-727-11	METAL	68	5%	10W	
R919	1-219-748-11	CARBON	4.7K	5%	1/2W	
R920	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R921	1-249-429-11	CARBON	10K	5%	1/4W	
R922	1-249-389-11	CARBON	4.7	5%	1/4W	F
R923	1-218-762-11	METAL CHIP	270K	0.50%	1/10W	
R924	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R925	1-220-825-11	CARBON	330K	5%	1/2W	
R926	1-219-746-11	CARBON	1K	5%	1/2W	
R927	1-219-746-11	CARBON	1K	5%	1/2W	
R928	1-216-668-11	METAL CHIP	5.1K	0.50%	1/10W	
R929	1-216-675-91	METAL CHIP	10K	0.50%	1/10W	
R930	1-216-653-11	METAL CHIP	1.2K	0.50%	1/10W	
R931	1-216-653-11	METAL CHIP	1.2K	0.50%	1/10W	
R932	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R933	1-216-687-11	METAL CHIP	33K	0.50%	1/10W	
R934	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R935	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R937	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R939	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R940	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R941	1-216-025-91	RES,CHIP	100	5%	1/10W	
R943	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R945	1-216-025-91	RES,CHIP	100	5%	1/10W	
R1501	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R1502	1-216-033-00	RES,CHIP	220	5%	1/10W	
R1503	1-216-681-11	METAL CHIP	18K	0.50%	1/10W	
R1504	1-216-669-11	METAL CHIP	5.6K	0.50%	1/10W	
R1505	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W	
R1506	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R1507	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R1510	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R1515	1-215-909-11	METAL OXIDE	47	5%	3W	F
R1517	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R1518	1-216-025-91	RES,CHIP	100	5%	1/10W	
		<VARIABLE RESISTOR>				
⋈ RV901	⚠1-241-767-21	RES, ADJ, CERMET			100K (HVADJ)	
		<RELAY>				
RY501	1-755-198-11	RELAY				
		<SPARK GAP>				
SG901	1-517-499-21	GAP, SPARK				
SG902	1-519-422-11	GAP, SPARK				
SG903	1-519-422-11	GAP, SPARK				
		<TRANSFORMER>				
T501	1-435-070-11	TRANSFORMER, HORIZONTAL DRIVE				
T502	1-429-301-11	TRANSFORMER, FERRITE (HCT)				
T503	1-431-413-21	TRANSFORMER, FERRITE (HST)				
T505	1-419-127-11	COIL, HORIZONTAL LINEARITY				
T701	1-431-414-11	TRANSFORMER, FERRITE (DFT)				
T901	1-416-402-11	INDUCTOR	500µH			
T902	⚠ X-4560-175-1	TRANSFORMER ASSY, FLYBACK (NX-4502//J1D4)				
		<THERMISTOR>				
TH501	1-807-796-11	THERMISTOR				
TH502	1-807-796-11	THERMISTOR				

****

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
	* A-1372-682-A	H1 BOARD, COMPLETE [U/C, AEP, SH, EQ for Japan-made set]	
	* A-1372-691-A	H1 BOARD, COMPLETE [U/C for Mexico-made set]	
	* A-1372-690-A	H1 BOARD, COMPLETE [AEP for UK-made set]	
		**********	
		<CAPACITOR>	
C802	1-126-791-11	ELECT 10µF 20% 16V	
C806	1-126-786-11	ELECT 47µF 20% 16V	
		<CONNECTOR>	
CN801	* 1-564-526-11	PLUG, CONNECTOR 11P	
		<DIODE>	
D801	8-719-064-11	DIODE SPR-325MVW (POWER)	
		<TRANSISTOR>	
Q801	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q802	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q803	8-729-029-40	TRANSISTOR DTA124ESA	
Q804	8-729-029-40	TRANSISTOR DTA124ESA	
		<RESISTOR>	
R801	1-249-417-11	CARBON 1K 5% 1/4W	
R802	1-249-413-11	CARBON 470 5% 1/4W	
R803	1-247-815-91	CARBON 220 5% 1/4W	
R804	1-247-815-91	CARBON 220 5% 1/4W	
R811	1-249-429-11	CARBON 10K 5% 1/4W	
R812	1-249-429-11	CARBON 10K 5% 1/4W	
R813	1-247-863-91	CARBON 22K 5% 1/4W	
R814	1-249-441-11	CARBON 100K 5% 1/4W	
R815	1-215-445-00	METAL 10K 1% 1/4W	
R821	1-215-401-11	METAL 150 1% 1/4W	
R822	1-215-413-00	METAL 470 1% 1/4W	
R823	1-215-421-00	METAL 1K 1% 1/4W	
R824	1-215-425-00	METAL 1.5K 1% 1/4W	
R851	1-249-413-11	CARBON 470 5% 1/4W	
R852	1-247-807-31	CARBON 100 5% 1/4W	
R853	1-247-807-31	CARBON 100 5% 1/4W	
		<SWITCH>	
S801	1-771-734-11	SWITCH, TACTILE (MENU)	
S811	1-571-427-11	SWITCH, SLIDE (INPUT HD15/BNC)	
S812	1-554-303-21	SWITCH, KEY BOARD (RESET)	
		<THERMISTOR>	
TH801	1-807-796-11	THERMISTOR	
		**********	
	* A-1388-250-A	J BOARD, COMPLETE [U/C, AEP, SH, EQ for Japan-made set]	
	* A-1388-261-A	J BOARD, COMPLETE [U/C for Mexico-made set]	
	* A-1388-260-A	J BOARD, COMPLETE [AEP for UK-made set]	
		**********	
		<CONNECTOR>	
CN891	* 1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P	
		<SWITCH>	
S891	⚠ 1-571-433-31	SWITCH, PUSH (AC POWER)	
		**********	
	* A-1394-946-C	N BOARD, COMPLETE [U/C, AEP, SH, EQ for Japan-made set]	
	* A-1394-951-A	N BOARD, COMPLETE [U/C for Mexico-made set]	
	* A-1394-950-A	N BOARD, COMPLETE [AEP for UK-made set]	
		**********	
		<CAPACITOR>	
C001	1-163-009-11	CERAMIC CHIP 0.001µF 10% 50V	
C002	1-163-009-11	CERAMIC CHIP 0.001µF 10% 50V	
C003	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C005	1-163-121-00	CERAMIC CHIP 150pF 5% 50V	
C006	1-163-235-11	CERAMIC CHIP 22pF 5% 50V	
C007	1-163-235-11	CERAMIC CHIP 22pF 5% 50V	
C008	1-164-004-11	CERAMIC CHIP 0.1µF 10% 25V	
C011	1-115-339-11	CERAMIC CHIP 0.1µF 10% 50V	
C012	1-126-967-11	ELECT 47µF 20% 50V	
C013	1-126-965-11	ELECT 22µF 20% 50V	
C014	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C015	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C016	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C017	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C018	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C019	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C020	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C021	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C022	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	
C023	1-163-021-91	CERAMIC CHIP 0.01µF 10% 50V	

N

REF.NO.	PART NO.	DESCRIPTION				REMARK
C024	1-163-009-11	CERAMIC CHIP	0.001µF	10%	50V	
C025	1-163-009-11	CERAMIC CHIP	0.001µF	10%	50V	
C026	1-104-665-11	ELECT	100µF	20%	25V	
C027	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C028	1-163-220-11	CERAMIC CHIP	3pF	0.25pF	50V	
C029	1-163-241-11	CERAMIC CHIP	39pF	5%	50V	
C031	1-126-964-11	ELECT	10µF	20%	50V	
C033	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C036	1-163-037-11	CERAMIC CHIP	0.022µF	10%	50V	
C037	1-126-964-11	ELECT	10µF	20%	50V	
C038	1-126-964-11	ELECT	10µF	20%	50V	
C039	1-126-964-11	ELECT	10µF	20%	50V	
C040	1-126-964-11	ELECT	10µF	20%	50V	
C041	1-126-964-11	ELECT	10µF	20%	50V	
C042	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C043	1-126-965-11	ELECT	22µF	20%	50V	
C044	1-163-037-11	CERAMIC CHIP	0.022µF	10%	50V	
C045	1-163-037-11	CERAMIC CHIP	0.022µF	10%	50V	
C046	1-163-037-11	CERAMIC CHIP	0.022µF	10%	50V	
C047	1-163-037-11	CERAMIC CHIP	0.022µF	10%	50V	
C048	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C049	1-126-964-11	ELECT	10µF	20%	50V	
C050	1-126-964-11	ELECT	10µF	20%	50V	
C051	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C052	1-126-933-11	ELECT	100µF	20%	16V	
C053	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C054	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C055	1-104-664-11	ELECT	47µF	20%	25V	
C056	1-126-965-11	ELECT	22µF	20%	50V	
C057	1-126-964-11	ELECT	10µF	20%	50V	
C058	1-164-690-91	CERAMIC CHIP	0.0022µF	5%	50V	
C059	1-126-964-11	ELECT	10µF	20%	50V	
C061	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C062	1-104-665-11	ELECT	100µF	20%	25V	
C063	1-164-690-91	CERAMIC CHIP	0.0022µF	5%	50V	
C064	1-115-419-11	CERAMIC CHIP	3300pF	5%	25V	
C065	1-126-960-11	ELECT	1µF	20%	50V	
C066	1-164-690-91	CERAMIC CHIP	0.0022µF	5%	50V	
C067	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C068	1-136-169-00	FILM	0.22µF	5%	50V	
C069	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C070	1-126-767-11	ELECT	1000µF	20%	16V	
C071	1-163-007-11	CERAMIC CHIP	680pF	10%	50V	
C072	1-126-942-61	ELECT	1000µF	20%	25V	
C073	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C074	1-163-137-00	CERAMIC CHIP	680pF	5%	50V	
C075	1-163-251-11	CERAMIC CHIP	100pF	5%	50V	
C077	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C078	1-136-169-00	FILM	0.22µF	5%	50V	
C079	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C080	1-126-967-11	ELECT	47µF	20%	50V	
C082	1-104-664-11	ELECT	47µF	20%	25V	
C083	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C084	1-126-964-11	ELECT	10µF	20%	50V	
C085	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C086	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C087	1-126-964-11	ELECT	10µF	20%	50V	
C089	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C090	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C091	1-126-933-11	ELECT	100µF	20%	16V	
C093	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C094	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C095	1-117-722-11	ELECT	2200µF	20%	10V	
C096	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C097	1-126-964-11	ELECT	10µF	20%	50V	
C098	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C099	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C1003	1-104-664-11	ELECT	47µF	20%	25V	
C1004	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C1005	1-163-005-11	CERAMIC CHIP	470pF	10%	50V	
C1006	1-164-161-11	CERAMIC CHIP	0.0022µF	10%	50V	
C1007	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C5002	1-126-964-11	ELECT	10µF	20%	50V	
C5003	1-126-933-11	ELECT	100µF	20%	16V	
C5004	1-104-664-11	ELECT	47µF	20%	25V	
C5005	1-104-664-11	ELECT	47µF	20%	25V	
C5008	1-104-664-11	ELECT	47µF	20%	25V	
C5009	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5101	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5103	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5105	1-104-664-11	ELECT	47µF	20%	25V	
C5106	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5108	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5110	1-104-664-11	ELECT	47µF	20%	25V	
C5203	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5205	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5206	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C5301	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5303	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5304	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C5305	1-104-664-11	ELECT	47µF	20%	25V	
C5306	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5308	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5310	1-104-664-11	ELECT	47µF	20%	25V	
C5401	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5403	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C5404	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C5406	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5408	1-163-005-11	CERAMIC CHIP	470pF	10%	50V	
C5409	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C5413	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	
C5501	1-126-967-11	ELECT	47µF	20%	50V	
C5602	1-115-339-11	CERAMIC CHIP	0.1µF	10%	50V	
C5606	1-163-021-91	CERAMIC CHIP	0.01µF	10%	50V	
C5607	1-164-004-11	CERAMIC CHIP	0.1µF	10%	25V	

<CONNECTOR>

CN001	1-784-500-11	CONNECTOR, FFC/FPC 21P	
CN002*	1-564-511-11	PLUG, CONNECTOR 8P	
CN007*	1-564-512-11	PLUG, CONNECTOR 9P	
CN010	1-784-504-11	CONNECTOR, FFC/FPC 25P	
CN011	1-784-504-11	CONNECTOR, FFC/FPC 25P	

REF.NO.	PART NO.	DESCRIPTION	REMARK
CN5001	*1-564-509-11	PLUG, CONNECTOR 6P	
CN5002	*1-564-511-11	PLUG, CONNECTOR 8P	
CN5003	*1-564-505-11	PLUG, CONNECTOR 2P	
		<DIODE>	
D001	8-719-062-51	DIODE 1PS226-115	
D002	8-719-062-51	DIODE 1PS226-115	
D003	8-719-062-51	DIODE 1PS226-115	
D004	8-719-062-51	DIODE 1PS226-115	
D008	8-719-109-89	ZENER DIODE RD5.6ESB2	
D009	8-719-109-89	ZENER DIODE RD5.6ESB2	
D010	8-719-109-89	ZENER DIODE RD5.6ESB2	
D012	8-719-109-89	ZENER DIODE RD5.6ESB2	
D013	8-719-110-17	ZENER DIODE RD10ESB2	
D015	8-719-801-78	DIODE 1SS184	
D016	8-719-109-89	ZENER DIODE RD5.6ESB2	
D017	8-719-109-89	ZENER DIODE RD5.6ESB2	
D018	8-719-109-89	ZENER DIODE RD5.6ESB2	
D020	8-719-988-61	DIODE 1SS355TE-17	
D021	8-719-988-61	DIODE 1SS355TE-17	
D022	8-719-801-78	DIODE 1SS184	
D023	8-719-801-78	DIODE 1SS184	
D024	8-719-801-78	DIODE 1SS184	
D025	8-719-062-51	DIODE 1PS226-115	
D026	8-719-062-51	DIODE 1PS226-115	
D027	8-719-988-61	DIODE 1SS355TE-17	
D028	8-719-988-61	DIODE 1SS355TE-17	
D029	8-719-109-85	ZENER DIODE RD5.1ESB2	
D036	8-719-109-89	ZENER DIODE RD5.6ESB2	
D037	8-719-109-89	ZENER DIODE RD5.6ESB2	
D038	8-719-045-99	ZENER DIODE RD2.2M-T1B	
		<FERRITE BEAD>	
FB001	1-410-397-21	FERRITE 1.1µH	
FB002	1-410-397-21	FERRITE 1.1µH	
FB003	1-410-397-21	FERRITE 1.1µH	
FB5101	1-412-911-11	FERRITE 1.1µH	
FB5103	1-412-911-11	FERRITE 1.1µH	
FB5201	1-412-911-11	FERRITE 1.1µH	
FB5301	1-412-911-11	FERRITE 1.1µH	
FB5303	1-412-911-11	FERRITE 1.1µH	
FB5401	1-412-911-11	FERRITE 1.1µH	
FB5403	1-412-911-11	FERRITE 1.1µH	
FB5601	1-412-911-11	FERRITE 1.1µH	
		<SENSOR>	
GS500	18-610-154-92	SENSOR, MAGNETIC MIV-212	
		<IC>	
IC001	8-759-650-17	IC CXD8744Q-0004 (Ver. 1.00)	
IC002	8-759-162-80	IC MM1170BFB	
IC003	8-759-527-77	IC M24C16-MN6T	
IC004	8-759-491-55	IC TC74VHCT74AFT(EL)	
IC005	8-759-491-55	IC TC74VHCT74AFT(EL)	
IC006	8-759-981-48	IC TL082M	
IC010	8-759-585-70	IC LA7865M-TLM	
IC011	8-759-442-20	IC 24LC21AT/SN	
IC5101	8-759-822-07	IC LA6515	
IC5201	8-759-822-07	IC LA6515	
IC5301	8-759-822-07	IC LA6515	
IC5401	8-759-822-07	IC LA6515	
		<COIL>	
L002	1-406-665-11	COIL, CHOKE 100µH	
L003	1-406-671-11	COIL, CHOKE 1mH	
		<TRANSISTOR>	
Q001	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q002	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q003	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q004	8-729-028-83	TRANSISTOR DTA124EUA-T106	
Q005	8-729-033-26	TRANSISTOR DTA114GKAT146	
Q006	8-729-027-49	TRANSISTOR DTC123EKA-T146	
Q007	8-729-901-00	TRANSISTOR DTC124EK	
Q008	8-729-033-25	TRANSISTOR DTC114GKA	
Q009	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q010	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q011	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q012	8-729-901-00	TRANSISTOR DTC124EK	
		<RESISTOR>	
R003	1-216-025-91	RES,CHIP 100 5% 1/10W	
R004	1-216-025-91	RES,CHIP 100 5% 1/10W	
R005	1-216-025-91	RES,CHIP 100 5% 1/10W	
R006	1-216-025-91	RES,CHIP 100 5% 1/10W	
R007	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R008	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R009	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R010	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
R014	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R015	1-249-389-11	CARBON 4.7 5% 1/4W F	
R016	1-216-017-91	RES,CHIP 47 5% 1/10W	
R017	1-216-017-91	RES,CHIP 47 5% 1/10W	
R018	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R019	1-216-025-91	RES,CHIP 100 5% 1/10W	
R020	1-216-025-91	RES,CHIP 100 5% 1/10W	
R021	1-216-025-91	RES,CHIP 100 5% 1/10W	
R022	1-216-025-91	RES,CHIP 100 5% 1/10W	
R023	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R024	1-216-025-91	RES,CHIP 100 5% 1/10W	
R025	1-216-025-91	RES,CHIP 100 5% 1/10W	
R026	1-216-025-91	RES,CHIP 100 5% 1/10W	
R029	1-216-073-00	RES,CHIP 10K 5% 1/10W	
R030	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R031	1-216-669-11	METAL CHIP 5.6K 0.50% 1/10W	

N

REF.NO.	PART NO.	DESCRIPTION		REMARK
R032	1-216-665-11	METAL CHIP	3.9K	0.50% 1/10W
R034	1-216-049-91	RES,CHIP	1K	5% 1/10W
R035	1-216-073-00	RES,CHIP	10K	5% 1/10W
R036	1-216-659-11	METAL CHIP	2.2K	0.50% 1/10W
R039	1-216-025-91	RES,CHIP	100	5% 1/10W
R040	1-216-025-91	RES,CHIP	100	5% 1/10W
R042	1-216-073-00	RES,CHIP	10K	5% 1/10W
R043	1-216-049-91	RES,CHIP	1K	5% 1/10W
R044	1-216-657-11	METAL CHIP	1.8K	0.50% 1/10W
R045	1-216-049-91	RES,CHIP	1K	5% 1/10W
R046	1-216-073-00	RES,CHIP	10K	5% 1/10W
R047	1-216-049-91	RES,CHIP	1K	5% 1/10W
R048	1-216-049-91	RES,CHIP	1K	5% 1/10W
R049	1-216-073-00	RES,CHIP	10K	5% 1/10W
R053	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R054	1-216-077-91	RES,CHIP	15K	5% 1/10W
R055	1-216-077-91	RES,CHIP	15K	5% 1/10W
R056	1-216-073-00	RES,CHIP	10K	5% 1/10W
R057	1-216-073-00	RES,CHIP	10K	5% 1/10W
R058	1-216-067-00	RES,CHIP	5.6K	5% 1/10W
R059	1-216-057-00	RES,CHIP	2.2K	5% 1/10W
R060	1-216-057-00	RES,CHIP	2.2K	5% 1/10W
R061	1-216-049-91	RES,CHIP	1K	5% 1/10W
R062	1-216-613-11	METAL CHIP	27	0.50% 1/10W
R063	1-216-613-11	METAL CHIP	27	0.50% 1/10W
R064	1-216-613-11	METAL CHIP	27	0.50% 1/10W
R066	1-216-049-91	RES,CHIP	1K	5% 1/10W
R067	1-216-073-00	RES,CHIP	10K	5% 1/10W
R075	1-215-407-00	METAL	270	1% 1/4W
R076	1-215-407-00	METAL	270	1% 1/4W
R077	1-216-073-00	RES,CHIP	10K	5% 1/10W
R078	1-216-121-91	RES,CHIP	1M	5% 1/10W
R079	1-216-295-91	SHORT	0	
R080	1-216-295-91	SHORT	0	
R081	1-216-049-91	RES,CHIP	1K	5% 1/10W
R082	1-216-049-91	RES,CHIP	1K	5% 1/10W
R084	1-216-073-00	RES,CHIP	10K	5% 1/10W
R085	1-216-049-91	RES,CHIP	1K	5% 1/10W
R086	1-216-049-91	RES,CHIP	1K	5% 1/10W
R090	1-216-073-00	RES,CHIP	10K	5% 1/10W
R091	1-216-049-91	RES,CHIP	1K	5% 1/10W
R092	1-216-049-91	RES,CHIP	1K	5% 1/10W
R093	1-216-049-91	RES,CHIP	1K	5% 1/10W
R094	1-216-049-91	RES,CHIP	1K	5% 1/10W
R095	1-216-049-91	RES,CHIP	1K	5% 1/10W
R096	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R097	1-216-073-00	RES,CHIP	10K	5% 1/10W
R098	1-216-073-00	RES,CHIP	10K	5% 1/10W
R099	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1001	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1002	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1003	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1004	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1005	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1006	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1007	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1008	1-216-667-11	METAL CHIP	4.7K	0.50% 1/10W
R1009	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1010	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1011	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1012	1-216-057-00	RES,CHIP	2.2K	5% 1/10W
R1013	1-216-057-00	RES,CHIP	2.2K	5% 1/10W
R1014	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1015	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1016	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1017	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1018	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1019	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1020	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R1021	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R1022	1-216-659-11	METAL CHIP	2.2K	0.50% 1/10W
R1023	1-216-659-11	METAL CHIP	2.2K	0.50% 1/10W
R1024	1-216-681-11	METAL CHIP	18K	0.50% 1/10W
R1025	1-216-025-91	RES,CHIP	100	5% 1/10W
R1026	1-216-109-00	RES,CHIP	330K	5% 1/10W
R1027	1-216-659-11	METAL CHIP	2.2K	0.50% 1/10W
R1028	1-216-647-11	METAL CHIP	680	0.50% 1/10W
R1029	1-216-025-91	RES,CHIP	100	5% 1/10W
R1030	1-216-025-91	RES,CHIP	100	5% 1/10W
R1031	1-216-025-91	RES,CHIP	100	5% 1/10W
R1032	1-216-025-91	RES,CHIP	100	5% 1/10W
R1033	1-216-025-91	RES,CHIP	100	5% 1/10W
R1034	1-216-025-91	RES,CHIP	100	5% 1/10W
R1035	1-216-025-91	RES,CHIP	100	5% 1/10W
R1036	1-216-025-91	RES,CHIP	100	5% 1/10W
R1037	1-216-025-91	RES,CHIP	100	5% 1/10W
R1038	1-216-025-91	RES,CHIP	100	5% 1/10W
R1039	1-216-025-91	RES,CHIP	100	5% 1/10W
R1040	1-216-025-91	RES,CHIP	100	5% 1/10W
R1041	1-216-025-91	RES,CHIP	100	5% 1/10W
R1042	1-216-025-91	RES,CHIP	100	5% 1/10W
R1043	1-216-025-91	RES,CHIP	100	5% 1/10W
R1044	1-216-667-11	METAL CHIP	4.7K	0.50% 1/10W
R1045	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R1047	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1049	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1050	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1051	1-216-097-91	RES,CHIP	100K	5% 1/10W
R1052	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1053	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1054	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1055	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1056	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1057	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1058	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1059	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1060	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1061	1-216-073-00	RES,CHIP	10K	5% 1/10W
R1062	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1063	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R1064	1-216-049-91	RES,CHIP	1K	5% 1/10W
R1065	1-216-125-00	RES,CHIP	1.5M	5% 1/10W

REF.NO.	PART NO.	DESCRIPTION			REMARK
R1066	1-216-073-00	RES,CHIP	10K	5%	1/10W
R1067	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1068	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1069	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1070	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R1071	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5003	1-216-295-91	SHORT	0		
R5005	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5006	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5007	1-216-049-91	RES,CHIP	1K	5%	1/10W
R5010	1-216-295-91	SHORT	0		
R5011	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5015	1-216-049-91	RES,CHIP	1K	5%	1/10W
R5108	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5109	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5110	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5113	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5115	1-215-859-00	METAL OXIDE	22	5%	1W F
R5116	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5119	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5122	1-215-859-00	METAL OXIDE	22	5%	1W F
R5205	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5206	1-215-859-00	METAL OXIDE	22	5%	1W F
R5207	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5208	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R5209	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5308	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5309	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5310	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5313	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5315	1-215-859-00	METAL OXIDE	22	5%	1W F
R5316	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5319	1-216-073-00	RES,CHIP	10K	5%	1/10W
R5322	1-215-859-00	METAL OXIDE	22	5%	1W F
R5406	1-216-083-00	RES,CHIP	27K	5%	1/10W
R5407	1-216-085-00	RES,CHIP	33K	5%	1/10W
R5408	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5409	1-216-308-00	RES,CHIP	4.7	5%	1/10W
R5410	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5413	1-216-097-91	RES,CHIP	100K	5%	1/10W
R5415	1-215-887-00	METAL OXIDE	150	5%	2W F
R5416	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5419	1-216-097-91	RES,CHIP	100K	5%	1/10W
R5422	1-216-451-11	METAL OXIDE	120	5%	2W F
R5502	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5503	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5504	1-216-089-91	RES,CHIP	47K	5%	1/10W
R5505	1-216-089-91	RES,CHIP	47K	5%	1/10W
R5506	1-216-069-00	RES,CHIP	6.8K	5%	1/10W
R5507	1-249-382-11	CARBON	1.2	5%	1/4W F
R5508	1-249-382-11	CARBON	1.2	5%	1/4W F
R5509	1-249-382-11	CARBON	1.2	5%	1/4W F
R5510	1-249-382-11	CARBON	1.2	5%	1/4W F
R5602	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5603	1-216-077-91	RES,CHIP	15K	5%	1/10W
R5604	1-216-081-00	RES,CHIP	22K	5%	1/10W
R5605	1-216-097-91	RES,CHIP	100K	5%	1/10W
R5607	1-215-862-11	METAL OXIDE	68	5%	1W F
R5610	1-216-308-00	RES,CHIP	4.7	5%	1/10W

<CRYSTAL>

X001	1-760-682-21	VIBRATOR, CRYSTAL (24.756MHz)	

CPD-G500

9-978-647-01 99GL05254-1

9-978-647-01

Sony Corporation
Computer Display Company
Computer Display DIV.

English
99GL05254-1
Printed in Japan
© 1999.7